

Assembly Instructions

 
Important! Read Carefully & Retain for Future Reference

CHA-DC (DC2711)



Thank you purchasing this dining chair. Please read these instructions in full before attempting to assemble this product.

Installation should be carried out exactly according to these instructions, otherwise a safety risk could occur if installed incorrectly.

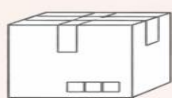

x 1



10 Minutes



**1 Person
Assembly**



The fittings pack includes small items.
Please **KEEP AWAY FROM YOUNG CHILDREN**

Carefully layout all parts on a clean, flat surface & compare with the parts checklist.

Please retain all packaging until you are sure no parts are missing.

Once you are happy with the product, please dispose of all packaging responsibly.

How to use safely

- Do not use power tools to assemble your furniture as this can cause broken fixings or damage to your furniture.
- Ensure all fittings are fully tightened before use and checked regularly and re-tightened as necessary.
- During assembly, take care not to overtighten the bolts.
- When positioning your furniture, ensure the ground is firm, level & dry.
- Take care when handling or moving furniture, always lift with assistance to avoid damaging your product.
- No additional loads should be on the furniture, and it must not be pulled along the floor as this can weaken the joints and damage the furniture permanently.
- The furniture is intended for indoor domestic use. Do not stand on the furniture.
- If your furniture is supplied with the anti-tip-strap, please fit securely and follow the assembly instructions provided.
- No liability will be accepted for damage or injury caused by incorrectly installed furniture.

Care & Maintenance

- The Furniture should be dusted with a soft dry cloth.
- The metal legs should be wiped with a damp cloth. Please ensure the cloth is not too damp.
- Do not use any cleaning agents or spray polish as these can contain abrasive substances or solvents, and over a period of time these can penetrate the finish and spoil the surface.
- To clean the fabric seat, gently vacuum regularly using a suitable upholstery attachment.
- Remove any spills immediately using a blotting action, never rub the fabric as this may cause damage.
- If required apply a suitable upholstery soap or shampoo using a damp soft cloth.
- Spilt liquids should be wiped off immediately.
- Too dry or damp air may cause deformities to some parts of the furniture. Avoid placing the furniture on damp surfaces.

Fixing List

A



Allen Key

X1 M5*80mm

B



Allen Bolts

X4 M6*35mm

C



Washers


X4 6*16*1.5mm

Part List

1	Chair Base	1pc	2	Chair Legs	1pc




1

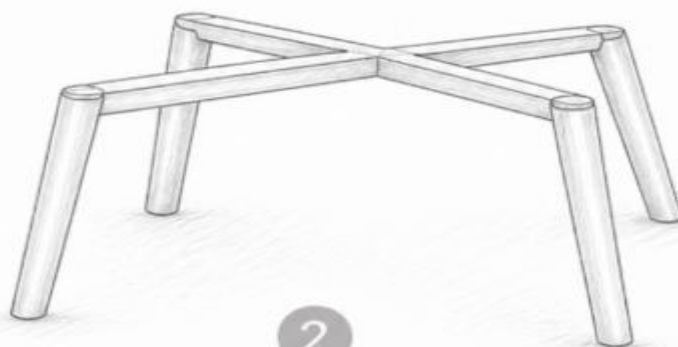

2

Step 1

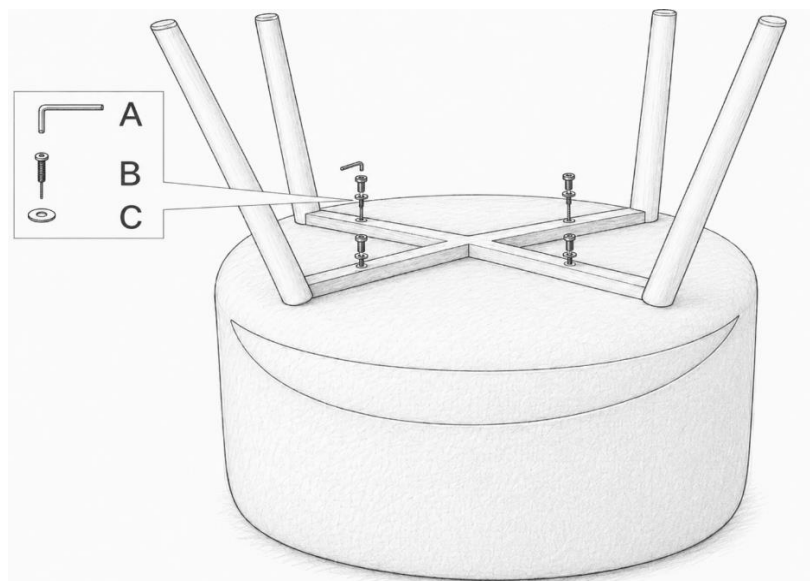

Ensure your floor surface is protected before you begin.

Place the chair base upside down, place the chair legs onto top of base and align the holes.

Using (A), FIT 4 X (B&C) into position and tighten.

Step 2



Rotate dining chair to standing position

Please ensure your new piece of furniture is standing on a level floor surface.