


Assembly Instructions


Important! Read Carefully & Retain for Future Reference

GIO-180-DT

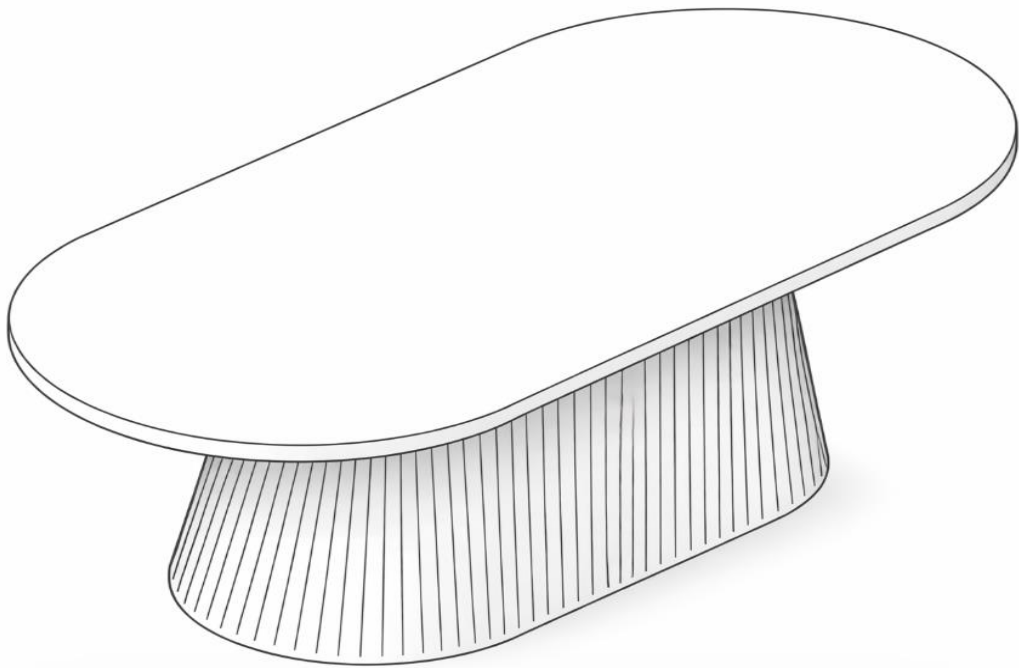

Thank you purchasing this dining table. Please read these instructions in full before attempting to assemble this product.

Installation should be carried out exactly according to these instructions, otherwise a safety risk could occur if installed incorrectly.

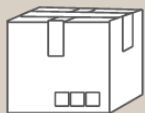

x2



30 Minutes



2 Person
Assembly



The fittings pack includes small items.
Please **KEEP AWAY FROM YOUNG CHILDREN**

Carefully layout all parts on a clean, flat surface & compare with the parts checklist.

Please retain all packaging until you are sure no parts are missing.

Once you are happy with the product, please dispose of all packaging responsibly.

How to use safely

- Do not use power tools to assemble your furniture as this can cause broken fixings or damage to your furniture.
- Ensure all fittings are fully tightened before use and checked regularly and re-tightened as necessary.
- During assembly, take care not to overtighten the bolts.
- When positioning your furniture, ensure the ground is firm, level & dry.
- Take care when handling or moving furniture, always lift with assistance to avoid damaging your product.
- No additional loads should be on the furniture, and it must not be pulled along the floor as this can weaken the joints and damage the furniture permanently.
- The furniture is intended for indoor domestic use. Do not stand on the furniture.
- If your furniture is supplied with the anti-tip-strap, please fit securely and follow the assembly instructions provided.
- No liability will be accepted for damage or injury caused by incorrectly installed furniture.

Care & Maintenance

- The furniture should be dusted with a soft dry cloth. This should be done on a regular basis and is always the first step that should be carried out before any other cleaning.
- Tops can be wiped clean with a slightly damp cloth (water only) and then dried with a dry soft cloth.
- Do not use any cleaning agents or spray polishes, as these can contain abrasive substance or solvents, over a period, these can penetrate the finish and spoil the surface.
- The furniture should be placed at least 1 metre from the active heat sources such as radiators or heaters.
- The furniture should be used in rooms that are dry, closed and protected against the effect of atmospheric conditions including the effect of direct sunlight.
- Split liquids should be blotted rather than wiped off. This should be done immediately after a spillage has occurred.
- The top may be damaged/scratched by hard or sharp objects. We recommend the use of placemats & coasters.
- Never use the top as a chopping board.
- Too dry or damp air may cause deformities to some parts of the furniture.
- Care should be taken when mopping. Excess water may cause damage to the base.

Fixing List


A	B	C	D
			
Allen Bolt	Washers	Allen Key	Foot Adjusters
X12 M8*30mm	X12 M8*22mm	X1 M8*50mm	X8 M6*16mm

Part List

1	Tabletop	1pc	2	Support Board	1pc
3	Table Base	1pc			




Step 1

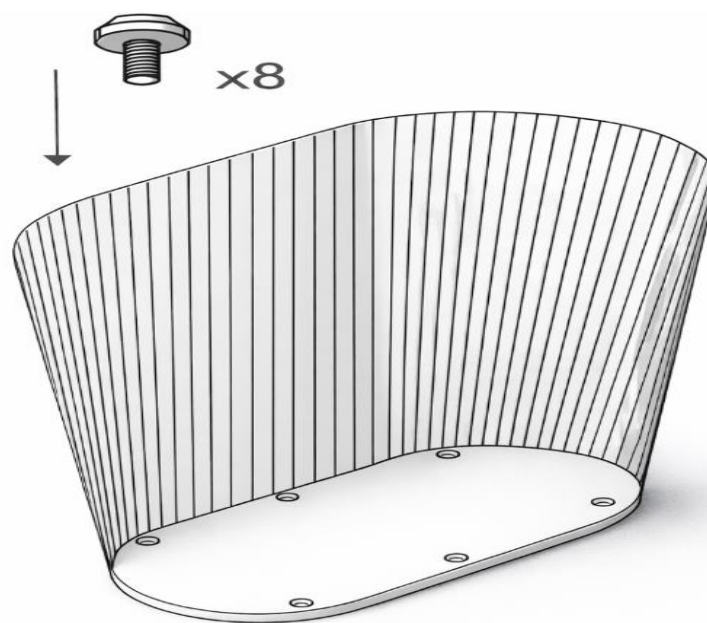


Turn the base upside down ensuring your floor or surface are protected. Fit 8x (D) to the bottom of the base.

Step 2

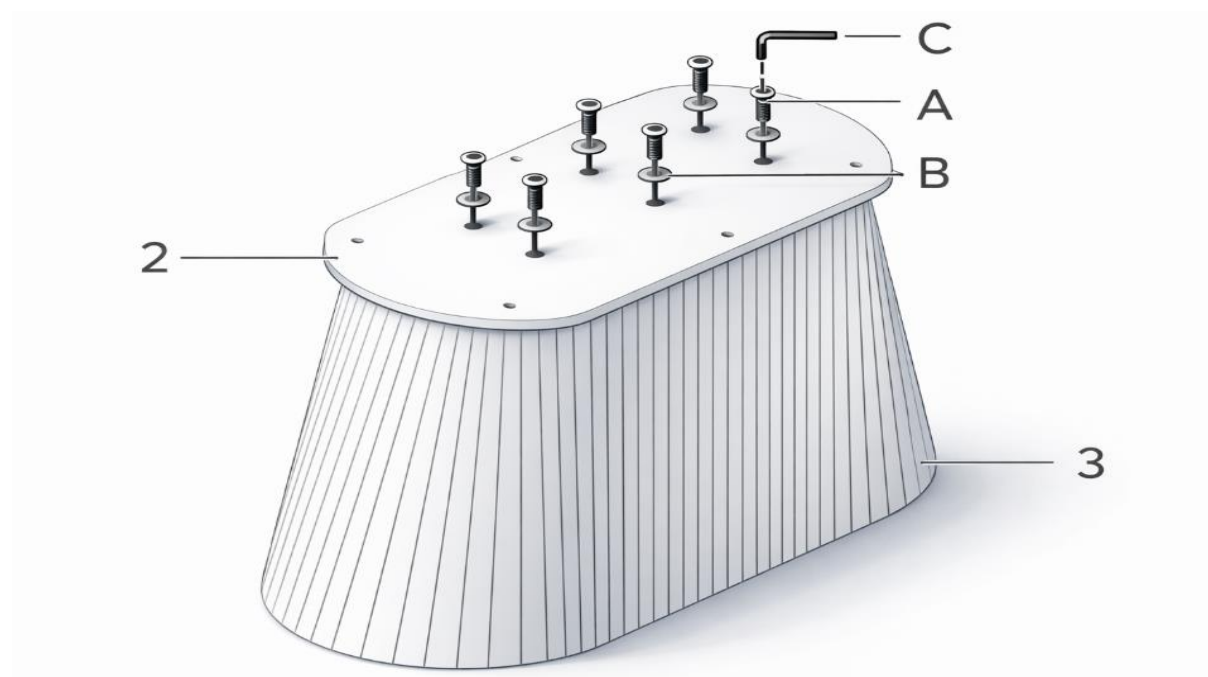

Rotate the table back onto the floor and place in position. Using (C), fit 6 X (A&B) into position and tighten.


Step 3

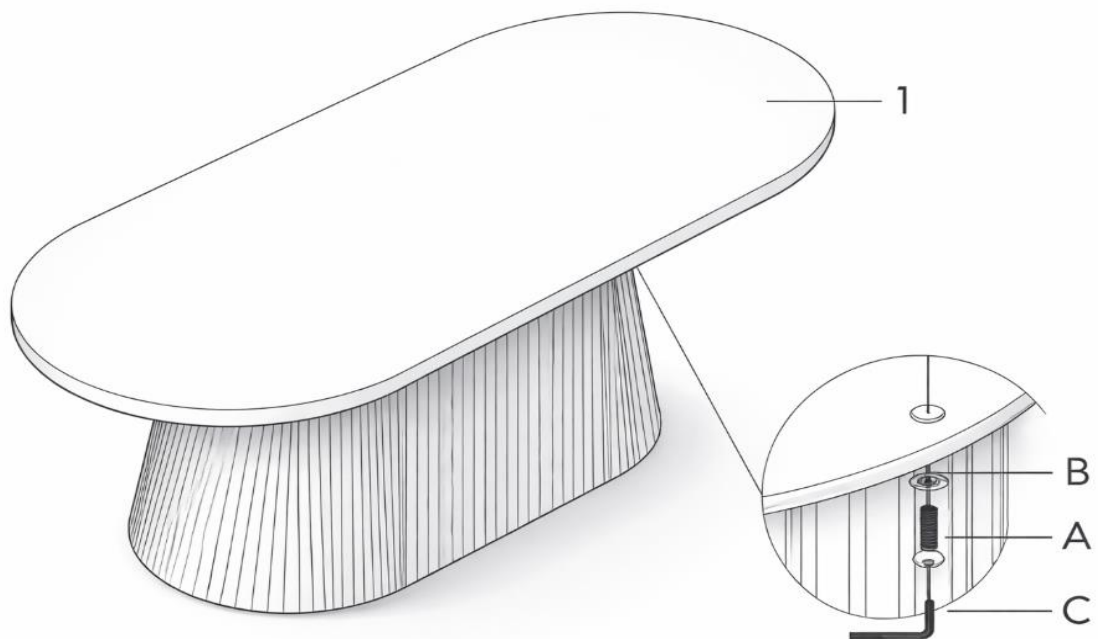

Place the top onto base and align the holes underneath the top to the table support.

Using (C), FIT 6 X (A&B) into position and tighten.

Step 4

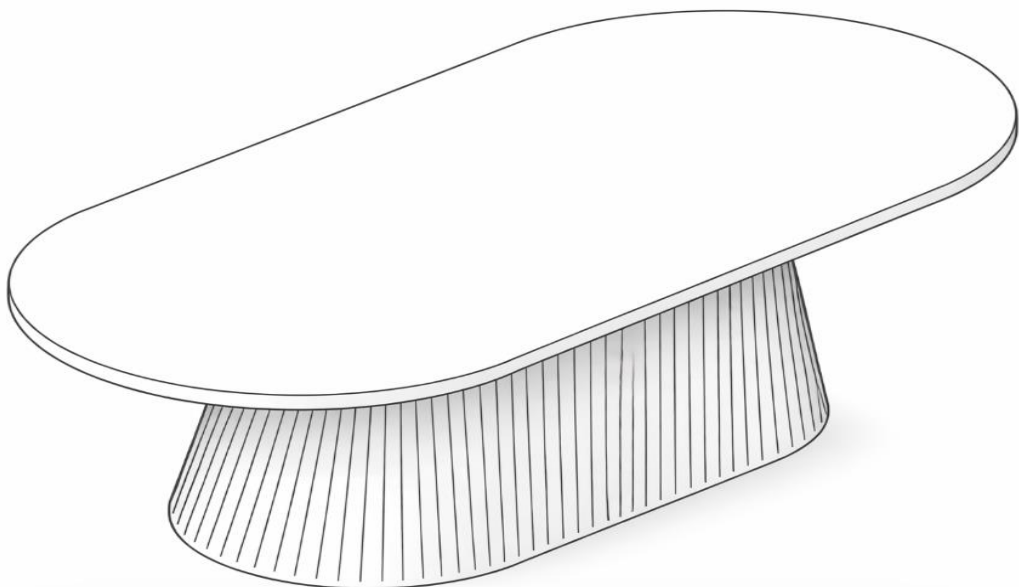

As we cannot guarantee a level floor surface in every home, your table has adjustable feet.

These can be used to level a table on an uneven surface, To adjust, simply turn (D) clockwise/anticlockwise as required until stable.