


VL14 - Dining Table

Assembly Instructions

Product Size: H 76cm x W 135 cm x D 80cm

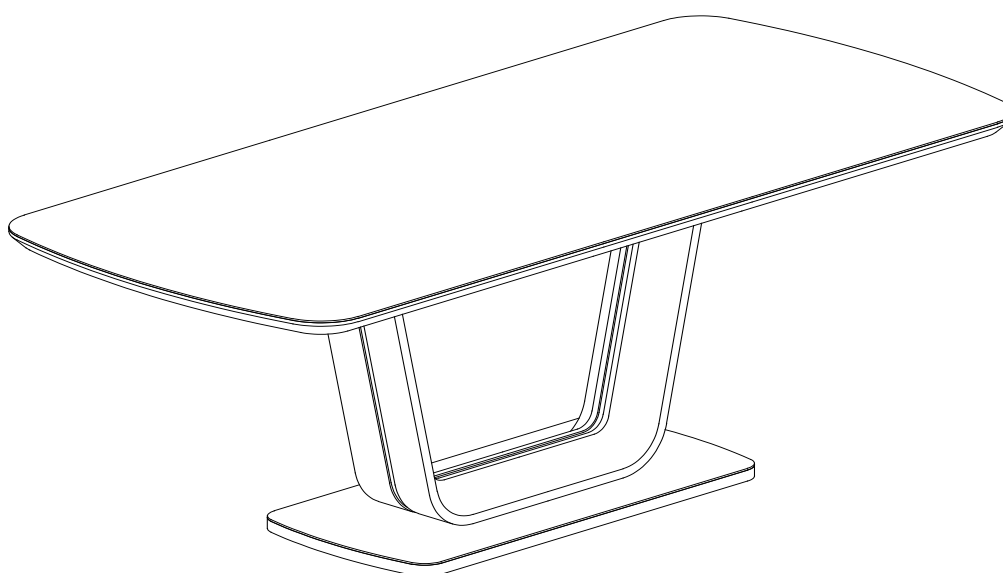

Please retain for future reference

VL14 - Dining Table

Assembly Instructions

Before You Start

Warnings

- > We suggest that you retain these instructions for future reference.
- > Keep fittings out of children's reach and keep children well away from the assembly area.
- > Please ensure that this product is only used on firm, level ground.
- > We advise that you periodically check all fittings and re-tighten as necessary.
- > Please do not **sit or** stand on your furniture.
- > Please avoid exposing the furniture to excessive heat or direct sunlight, as this can cause deterioration of the colour.
- > Wood will mellow and change colour over time, we recommend that ornaments and items placed on the surface are moved regularly for the first few months to prevent uneven mellowing.

 
 

Number of People Required to Assemble

2 persons are required to assemble this item.

Time to Assemble

Approximately **15** minutes required to assemble this item.

Tools required

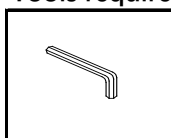

Missing Parts or Issues

If you are missing any fixtures and fittings for your furniture, or if you are unhappy with the condition of your furniture, please contact the retailer who you purchased this furniture from.

Do

- > We suggest you spend a short time reading through this leaflet before you start.
- > When you are ready to start, make sure that you have the right tools and plenty of space.
- > Unwrap all packaging materials and place components on a clean surface to protect them from damage.
- > We recommend that the packaging is used to protect the surfaces during assembly.
- > Carefully check that you have all parts before beginning assembly.
- > We recommend that the furniture is assembled in the room that it is intended to be used in.
- > Ensure the product is fully assembled as shown, and that all fixings are fully tightened before use.
- > Wipe occasionally with a soft cloth slightly dampened with water, then buff with a dry clean soft cloth.


Don't

- > Do not drag or pull your furniture.
- > Do not use silicone based furniture polish. Silicone in furniture polishes can break down the finish.
- > Never allow any kind of liquid to remain on your furniture.
- > Absorption can cause wood to warp or finishes to de-laminate.
- > Do not place hot items (e.g. hot drinks) directly on to the wood surface. Please make sure you use a placemat or coaster.


VL14 - Dining Table


Assembly Instructions

Getting to Know your Product

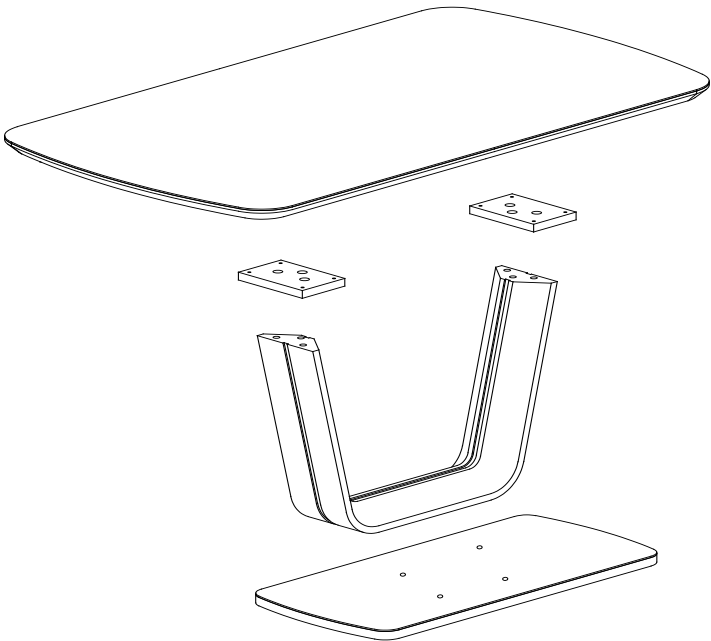

 Components supplied. Please use this guide if you require replacement parts.
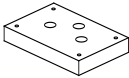
#	Dimensions	Visual	Qty	Ctn
A	1350*800*44		1	1
B	230*153*21		2	1
C	700*180*656		1	1

 
#	Dimensions	Visual	Qty	Ctn
D	800*400*29		1	1

VL14 - Dining Table

Assembly Instructions

Fixtures and Fittings

 Main Fixtures and Fittings Supplied (To Scale)


Ref	Dimensions	Qty	mm	10	20	30	40	50	60	70	80	90	100
1	 M8 X 30mm	14											
2	 M8 X 50mm	4											
3	 Φ20 X Φ8.3	18											
4	 Φ8.3	18											
5	 Φ20 X Φ10.3	4											
6	 Φ30	8											

Other Fixtures and Fittings Supplied (Not To Scale)

Ref	Dimensions	Visual	Qty
7	5mm		1


VL14 - Dining Table

Assembly Instructions

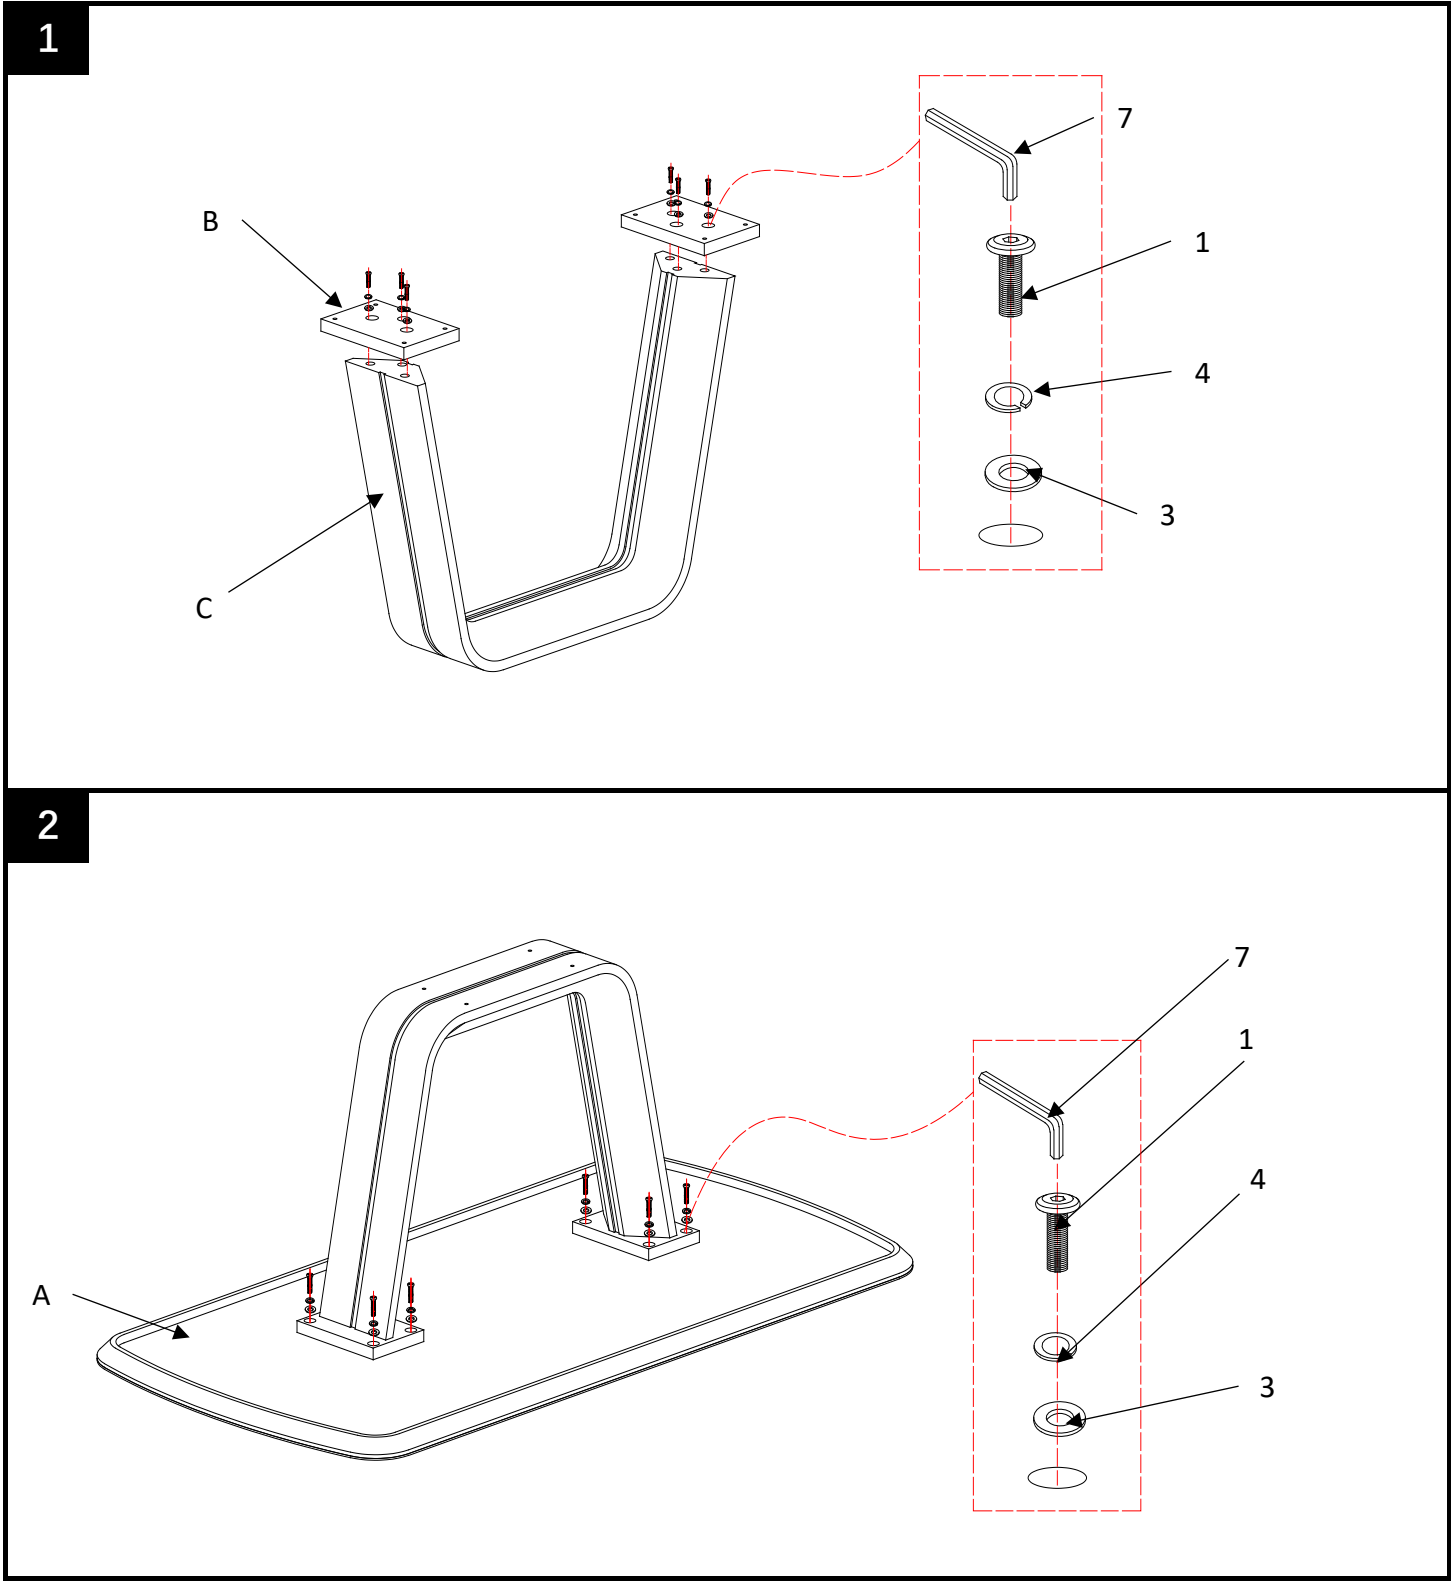


VL14 - Dining Table Assembly Instructions

3

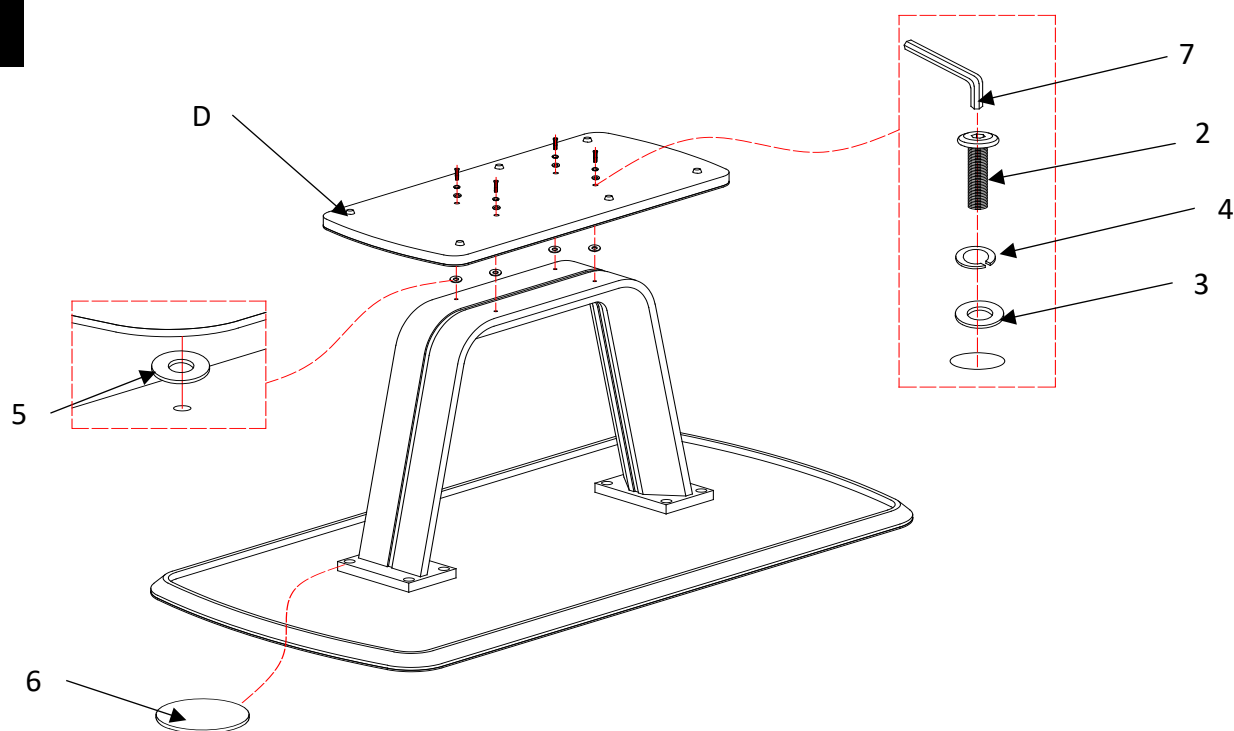

4

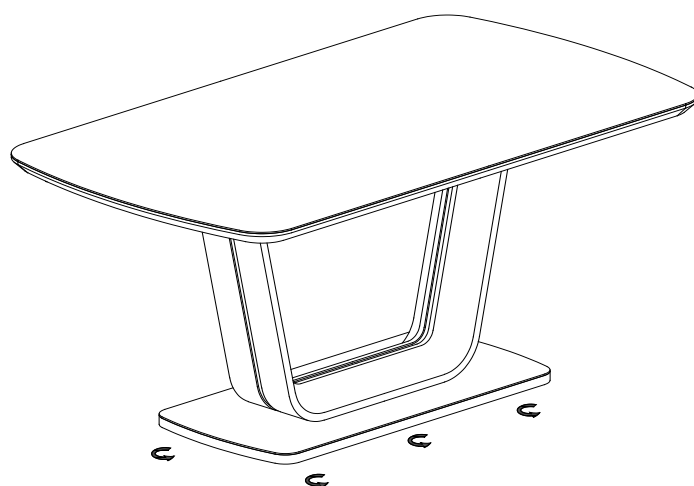

Use the adjustable feet to level the unit once in place.

VL14 - Dining Table

Care Guide

Always lift your furniture into place, never drag or push it as this can damage your furniture.
Care should be taken when placing items on to the glass surface.
Do not place hot items directly from the oven/hob onto the glass.
Always use matts and coasters to protect the glass surface.
Do not strike the glass with hard or pointed items.
Do not use the surface as a chopping board.
Do not sit or stand upon the horizontal glass surface.
For general cleaning wipe clean with a dry soft cloth.
Wipe up spills immediately.
For more stubborn marks use a glass cleaner with a soft cloth.
Do not rub or scrub the surface when cleaning.
Do not use chemical or abrasive cleaning products, or materials, as these may scratch and damage the glass.
If the glass becomes chipped or damaged, dispose of the item immediately.
Items may be supplied with an anti tip kit, we recommend that these are used to secure the furniture.
Please follow the instructions provided and ensure that you use the correct fittings for your wall type when affixing the bracket.
If you are unsure, please consult a qualified tradesperson. Regularly check all fittings and tighten as necessary.

General care

- Assemble the product in the room intended for use.
- Always lift your furniture to move it, never drag or push it as this can cause damage.
- Regularly check all fixings and tighten if necessary.
- Wipe with a soft, slightly damp, lint free cloth. Buff with a dry, clean cloth.
- Wipe up spills immediately, never leave liquids sitting on the surface as this can damage the finish.
- Always use matts and coasters to protect the surface when in use.
- Never place hot items directly onto the surface.
- Do not use silicon-based furniture polish as the silicon can affect the finish.