

TR-22A Gaslift With Footend Drawer Base

Approximately 40min

Assembly Instruction
 Supply By: T & R Furniture
 Notes: Parts & Labour One Year Warranty
 Any Problem Please Call
 (02) 89372394 (03) 93570078
 (07) 38028999 (08) 94186868

K=2	B2=4	B20=2	B5=8 (25mm long)
A=32	H19=8	L=16	B3=8 (15mm long)
S=1	E4=4	B7=6 (40mm long)	
B6=4 (75mm long)		B4=4 (80mm long)	

Please check contents and read instructions before assembly.

Please use a soft mat to avoid damaging during assembly.

1

A=2

2

3

B20=2

A=4

B3=8 (15mm long)

B6=4 (75mm long)

UP

head

foot

B20 foot

B3 (15mm long)

Warning: must use shortest screw

B20=2

B3=8 (15mm long)

4

B4=4 (80mm long)

B2=4

K=2

A=2

5

L=8


E=4

A=4

6

A=10





TR-22A Gaslift With Footend Drawer Base

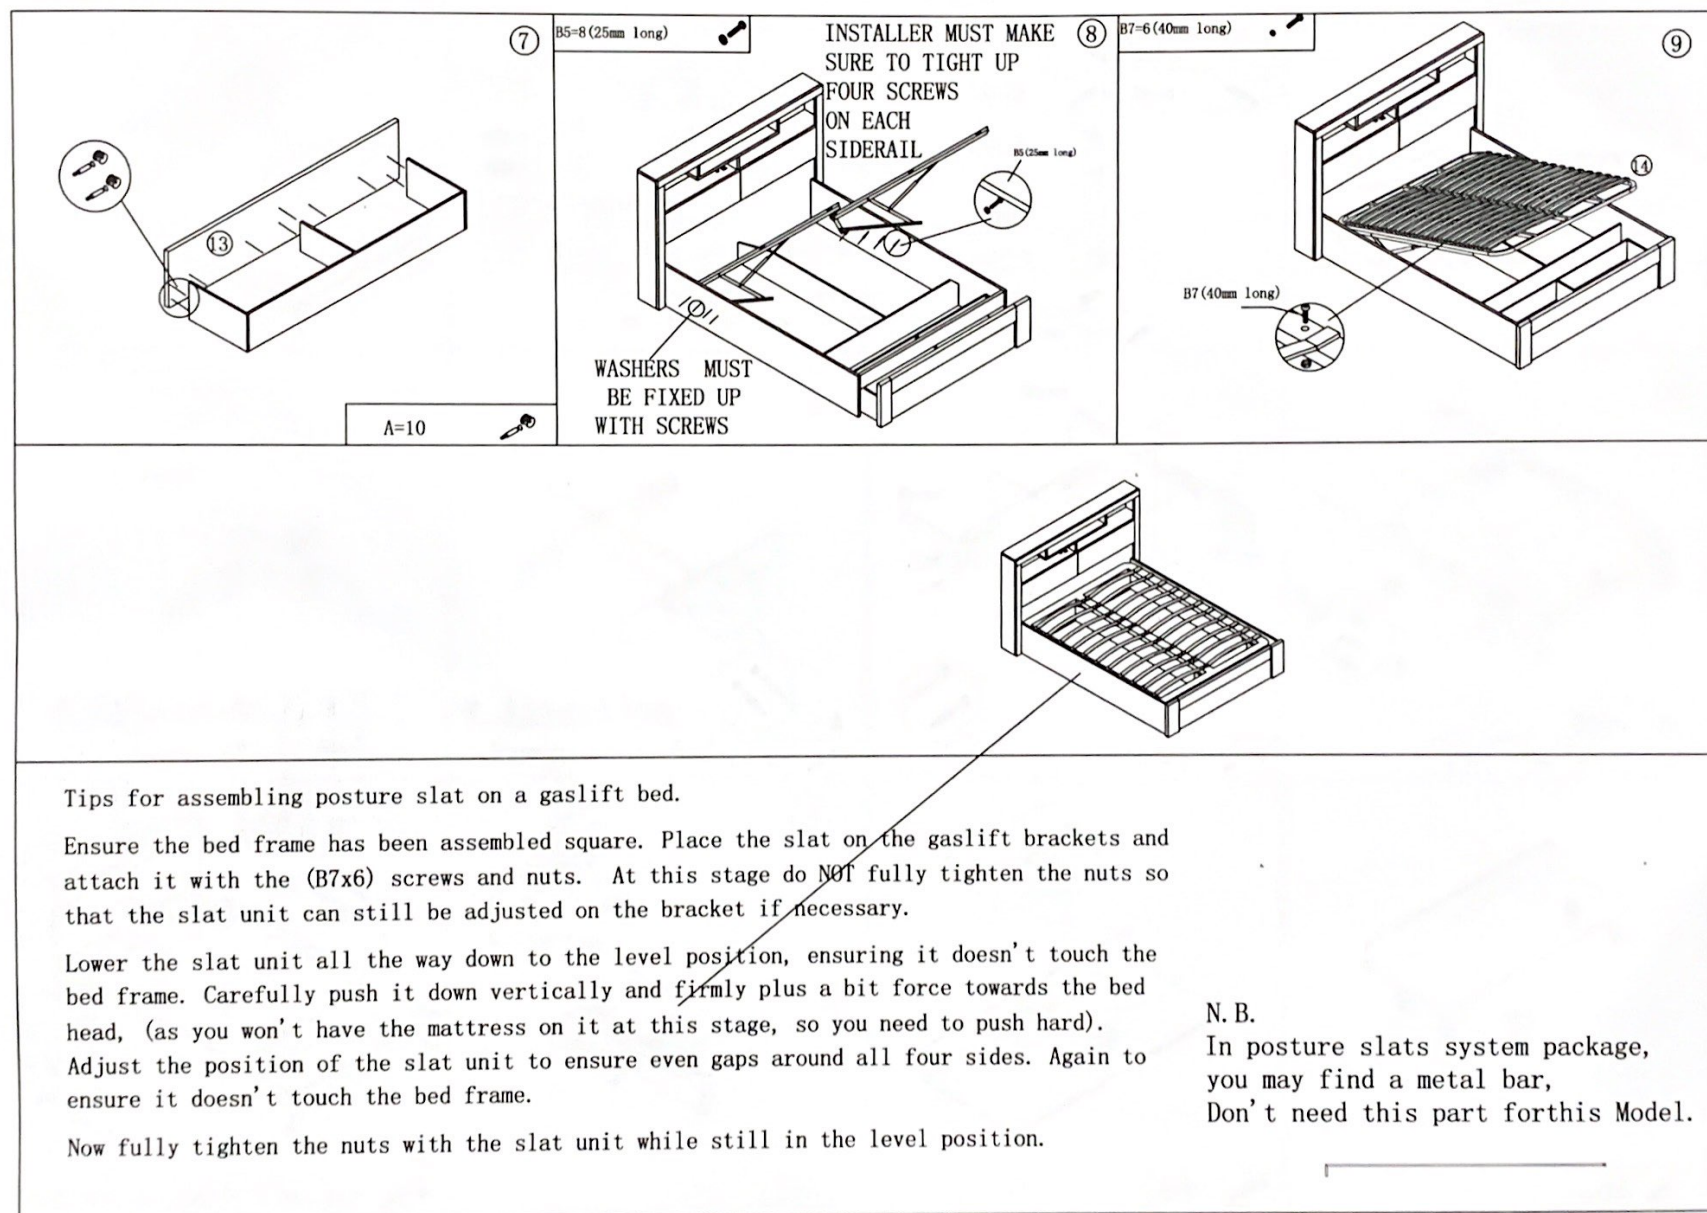

TR-22A Drawer Base

	Approximately 40min Assembly Instruction Supply By: T & R Furniture Notes: Parts & Labour One Year Warranty Any Problem Please Call (02) 89372394 (03) 93570078 (07) 38028999 (08) 94186868		<table border="1"> <tr> <td>K=4</td> <td>B2=4</td> </tr> <tr> <td>A=38</td> <td>B4=4</td> </tr> <tr> <td>B6=4</td> <td></td> </tr> <tr> <td>S=1</td> <td></td> </tr> <tr> <td>H19=8</td> <td></td> </tr> <tr> <td>E4=4</td> <td></td> </tr> <tr> <td>L=16</td> <td></td> </tr> <tr> <td>B7=6 (45mm long)</td> <td></td> </tr> </table>	K=4	B2=4	A=38	B4=4	B6=4		S=1		H19=8		E4=4		L=16		B7=6 (45mm long)		Please check contents and read instructions before assembly. Please use a soft mat to avoid damaging during assembly.
K=4	B2=4																			
A=38	B4=4																			
B6=4																				
S=1																				
H19=8																				
E4=4																				
L=16																				
B7=6 (45mm long)																				
① Head Foot * Attention Runner side!	② * Attention Runner side! A=2	③ Head Foot A=8	④ B6=4 K=2 S=1																	
B7 A K B4 B2 B7=6 (45mm long) B2=4 B4=4 K=2 A=2	⑥	⑦ A A=4	⑧ E4 L E4=4 L=16																	

TR-22A Drawer Base

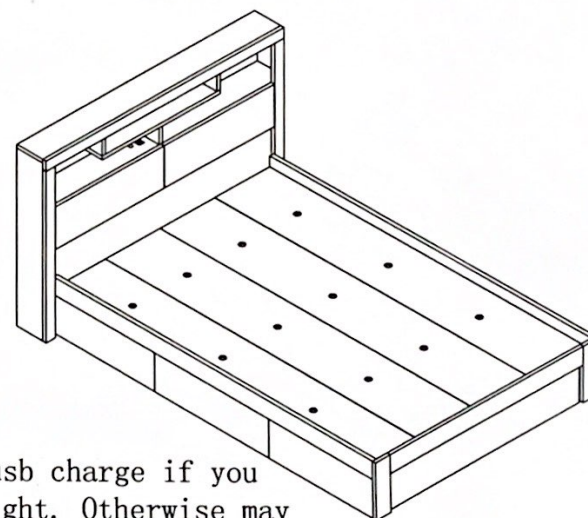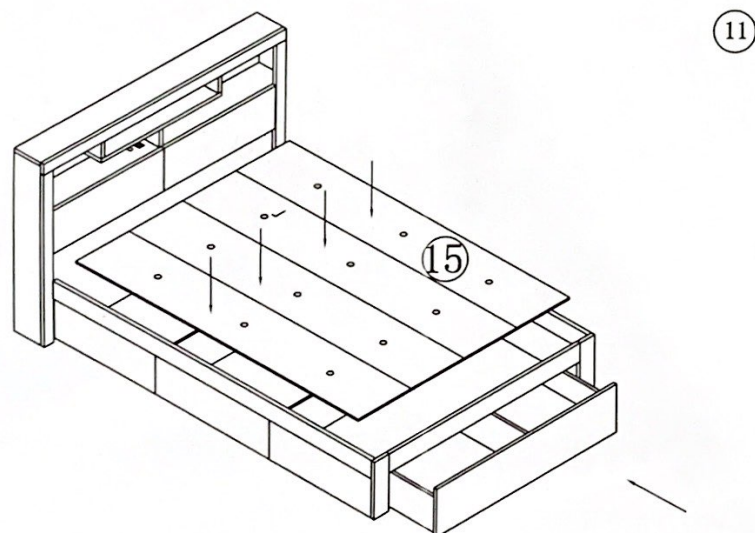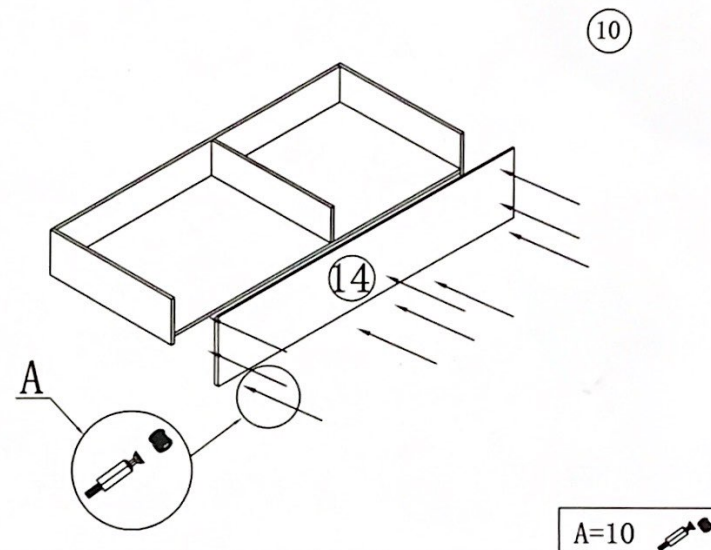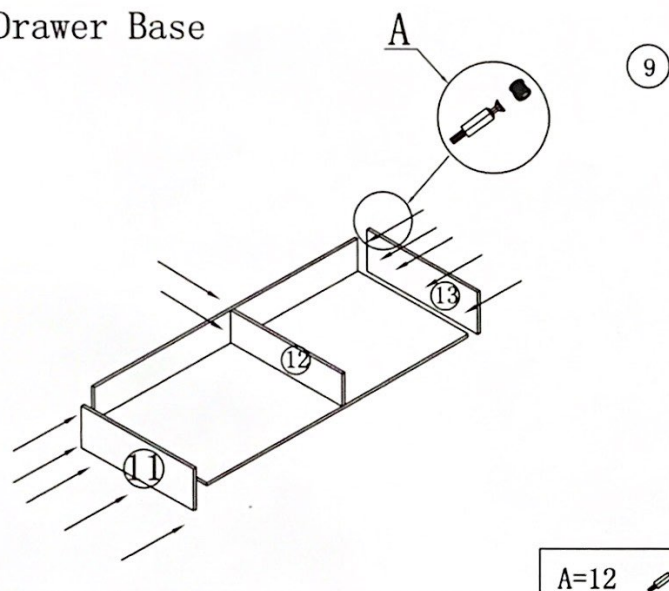

※ Attention
Only use one usb charge if you
turn on the light. Otherwise may
be cause light flashing.