

## ASSEMBLY INSTRUCTIONS


Minimum No.  
Of People  
Recommended  
To Assemble  
This Product :

**2**

Approximate  
Assembly  
Time :

**30**

MINUTES

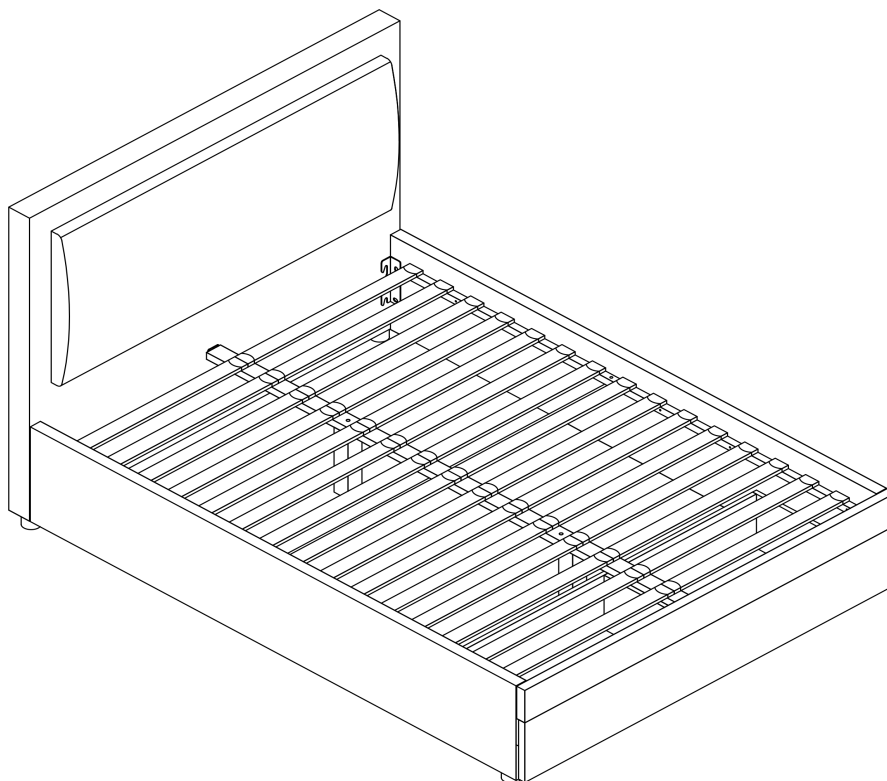








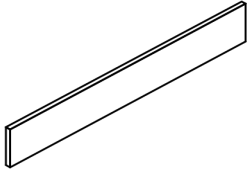
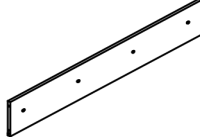
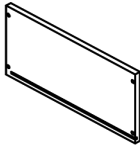
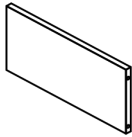
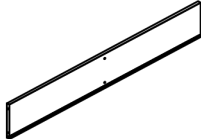
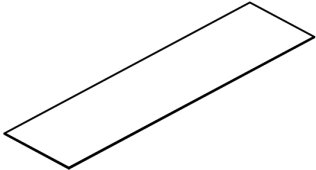

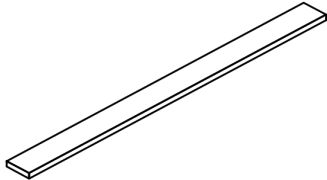
## BEFORE YOU START, HERE IS SOME HELPFUL ADVICE :









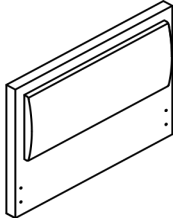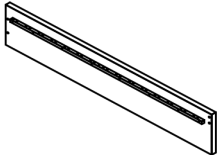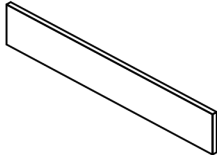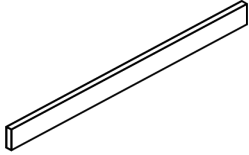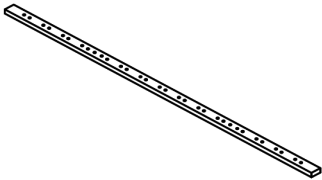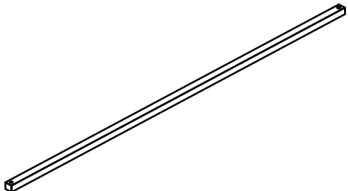








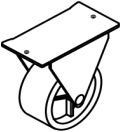
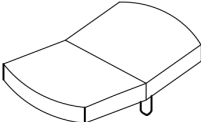



Do not use Power Tools

1. We suggest you spend a short time reading through this leaflet and then follow the simple step by step instructions.
2. If you follow the instructions carefully, the end result should be worth the effort.
3. Do not discard any of the packaging until you have checked that you have all the parts and the pack of fittings is correct and you are happy with the product.
4. To ensure an easier assembly, we strongly advise that all fittings are only finger-tightened during initial assembly phase. Only upon completion of the assembly should all fixing points be fully tightened.
5. We recommend a periodic check on all fixing points to make sure they remain fully tightened.
6. Keep any fittings out of children's reach.

## PARTS LISTS


<b>1</b> x1PC Head board 	<b>2R</b> x1PC Side rail 	<b>2L</b> x1PC Side rail 
<b>3</b> x1PC Foot board 	<b>4</b> x1PC Center support bar 	<b>5</b> x1PC Metal cross bar 
<b>6</b> x2PCS Middle support leg 	<b>7</b> x1PC Drawer outer panel 	<b>8</b> x1PC Drawer front board 
<b>9</b> x2PCS Drawer side board 	<b>10</b> x1PC Drawer middle board 	<b>11</b> x1PC Drawer back board 
<b>12</b> x1PC Drawer bottom board 	<b>13</b> x4PCS Bed legs 	<b>14</b> x30PCS Slat 

## HARDWARE LISTS


<p><b>A</b> x1PC</p> 	<p><b>B</b> x16PCS</p>  <p>M8x25mm</p>	<p><b>C</b> x4PCS</p>  <p>M8x35mm</p>
<p><b>D</b> x2PCS</p>  <p>M8x45mm</p>	<p><b>E</b> x2PCS</p>  <p>M8x60mm</p>	<p><b>F</b> x2PCS</p>  <p>M6x20mm</p>
<p><b>G</b> x8PCS</p>  <p>M3x20mm</p>	<p><b>H</b> x2PCS</p> 	<p><b>I</b> x2PCS</p> 
<p><b>J</b> x1PC</p> 	<p><b>K</b> x12PCS</p> 	<p><b>L</b> x12PCS</p> 
<p><b>M</b> x2PCS</p> 	<p><b>N</b> x2PCS</p> 	<p><b>O</b> x2PCS</p> 
<p><b>P</b> x4PCS</p> 	<p><b>Q</b> x15PCS</p> 	<p><b>R</b> x30PCS</p> 
<p><b>S</b> x1PCS</p> 	<p><b>T</b> x4PCS</p>  <p>M4x25mm</p>	

**STEP 1**

Attach the centre metal hanger S to the Head board ① with screw T by Allen Key A.

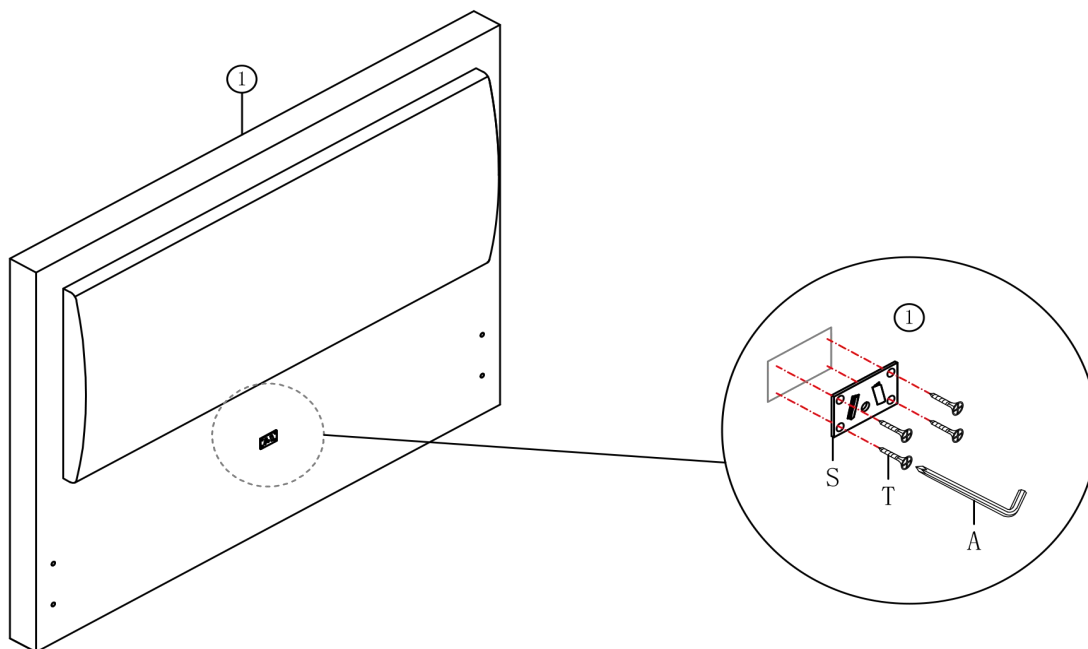**STEP 2**

Fix the Legs ⑬ to the Head board ① and Side rail ②.

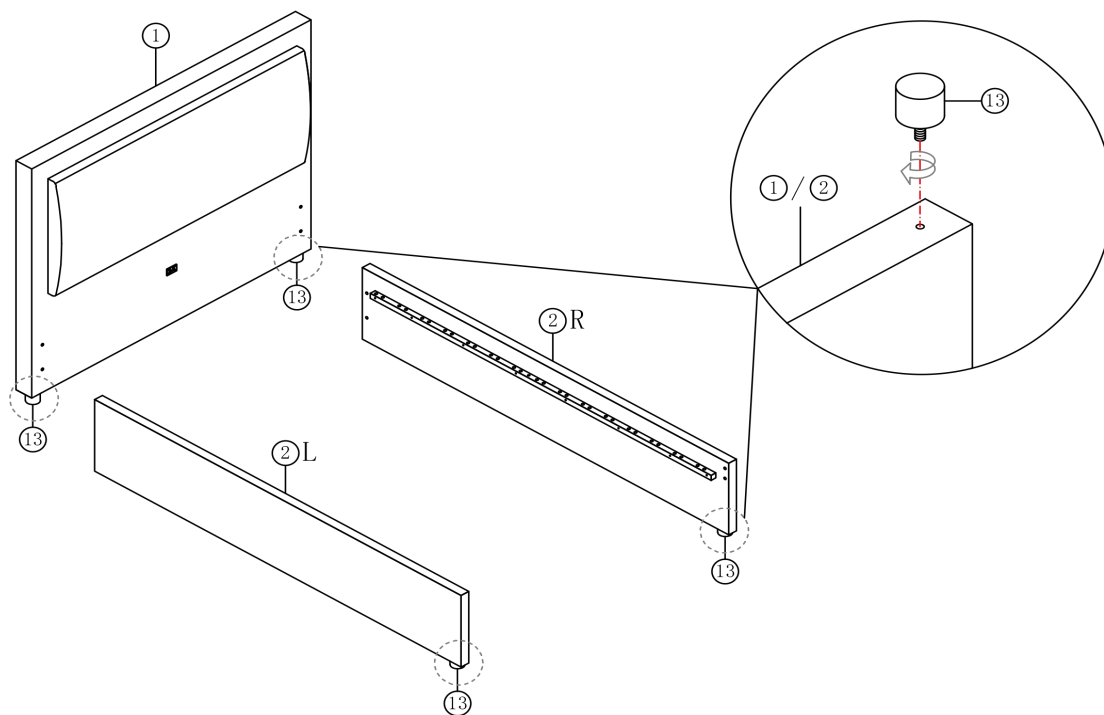


**STEP 3**

Fix the Side rail ② to the Head board ① with Bolts B and Hinge N by using Allen key A.




Do not use Power Tools

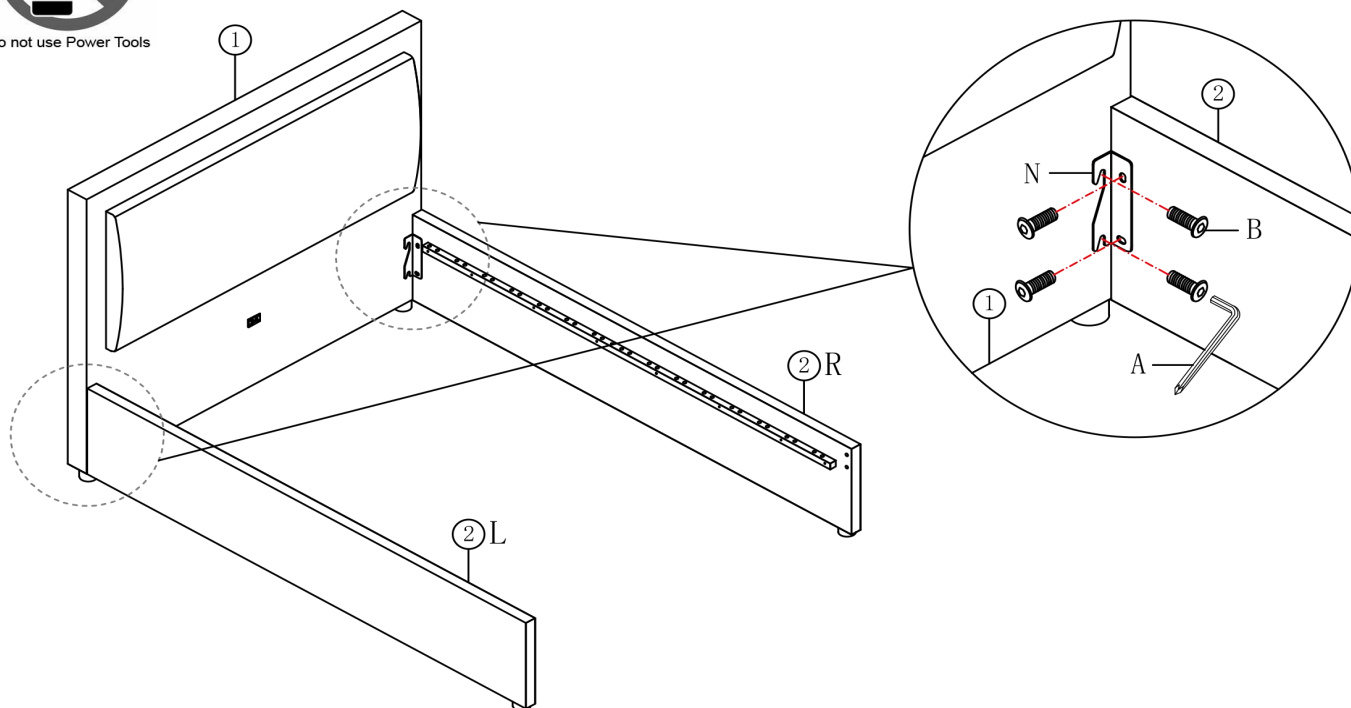**STEP 4**

Fix the Foot board ③ to the Side rail ② with Bolts B and small Connector O by using Allen key A.



Do not use Power Tools

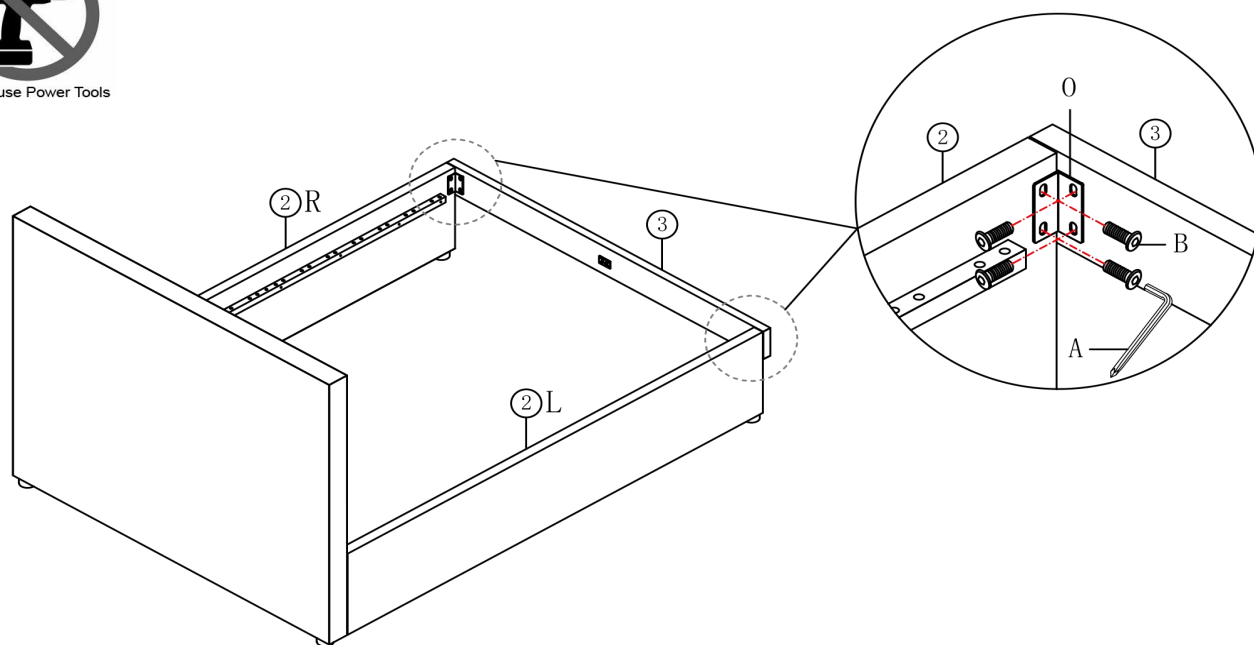


**STEP 5**

Fix the Metal cross bar ⑤ to the Side rail ② with Bolts E ,Nuts H and Washer I by using Allen key A and Spanner J .




Do not use Power Tools

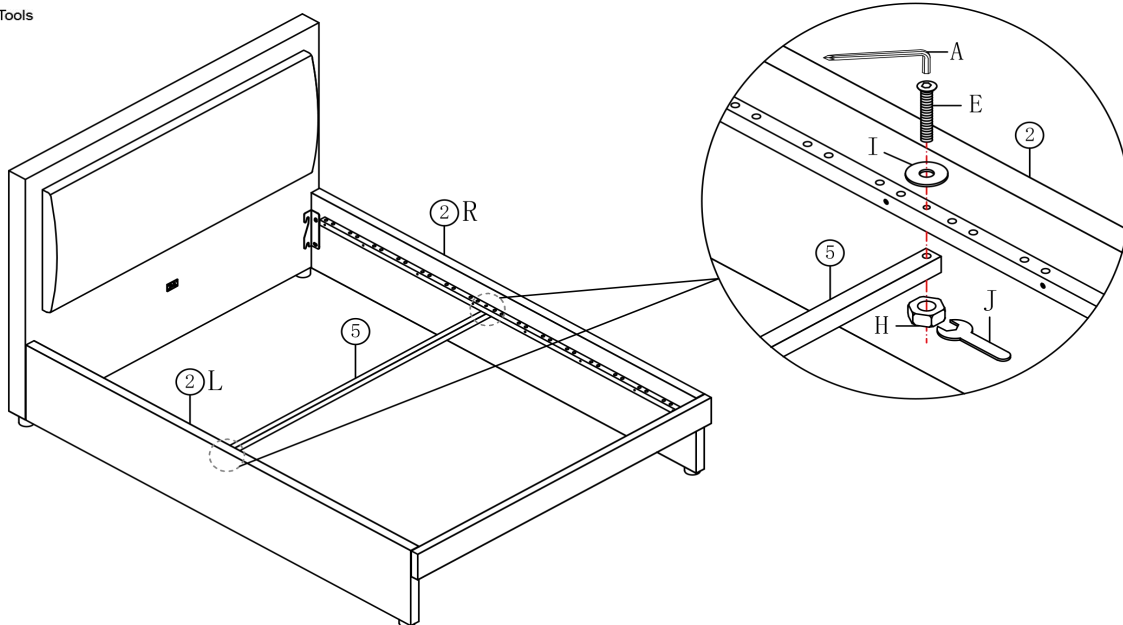**STEP 6**

Fix the Bracket M to the Center support bar ④ with Bolts F by using Allen Key A.




Do not use Power Tools

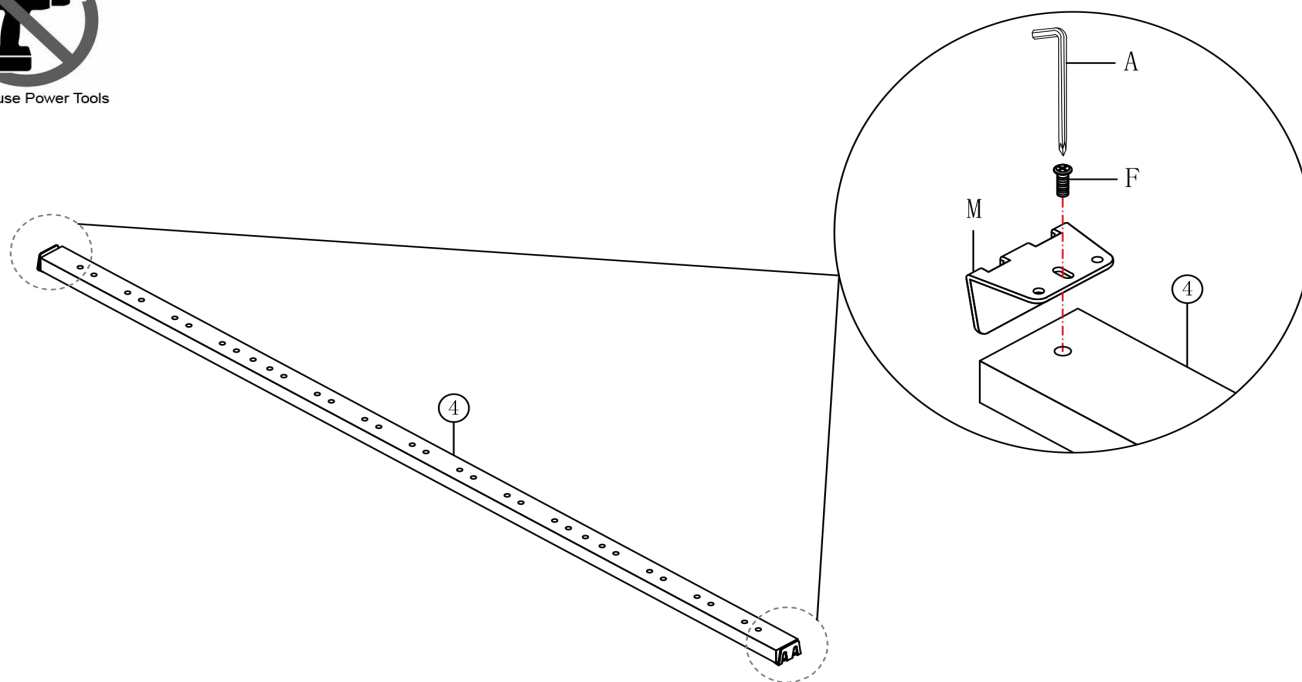

**STEP 7**


Fix the Middle support leg ⑥ to the Center support bar ④ with Bolts D by using Allen Key A.

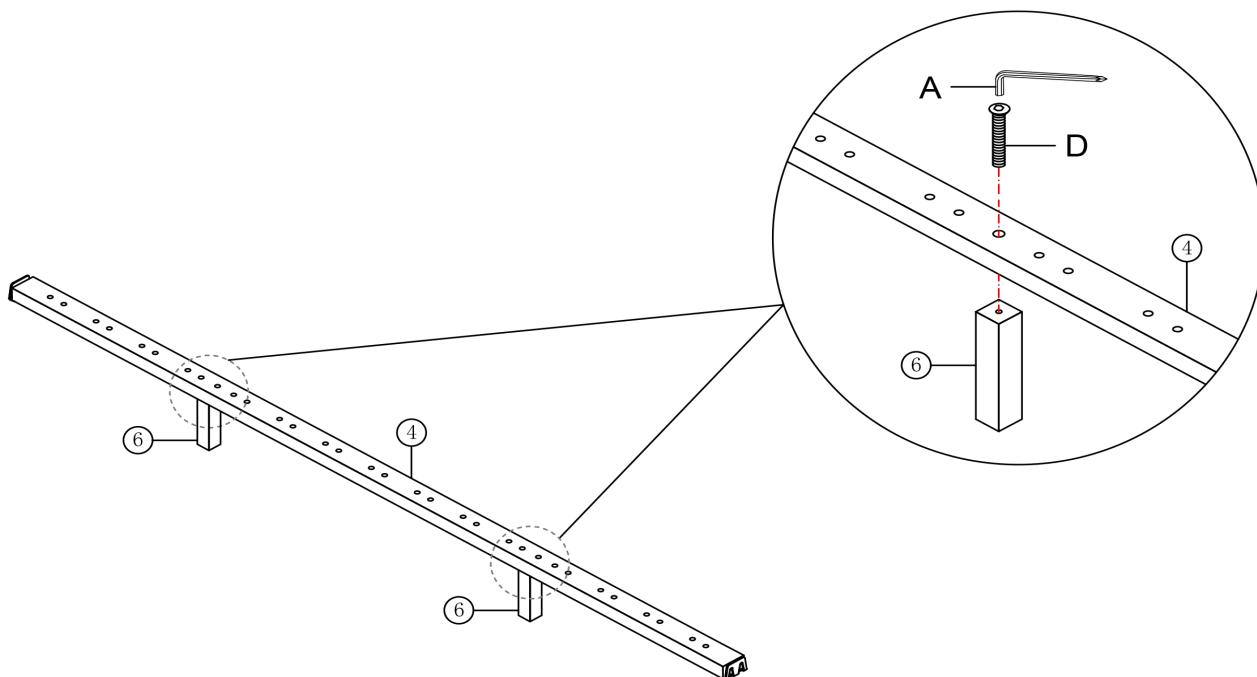**STEP 8**

Attach the Central support bar ④ to the Headboard ① and Foot board ③ by pushing the Bracket M down to fit it.




Do not use Power Tools

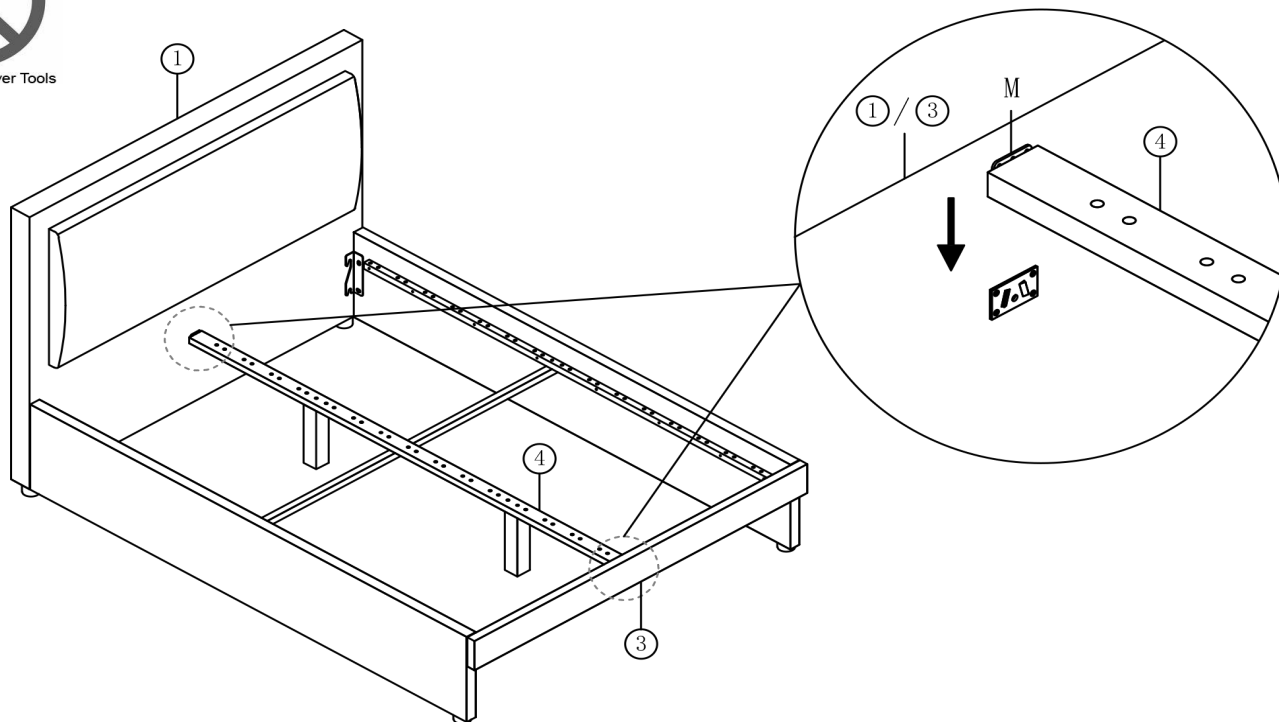

**STEP 9**

Assembled the Drawer with Drawer fittings K and L. Fix the Drawer wheel P with Nails G by using Allen key A.

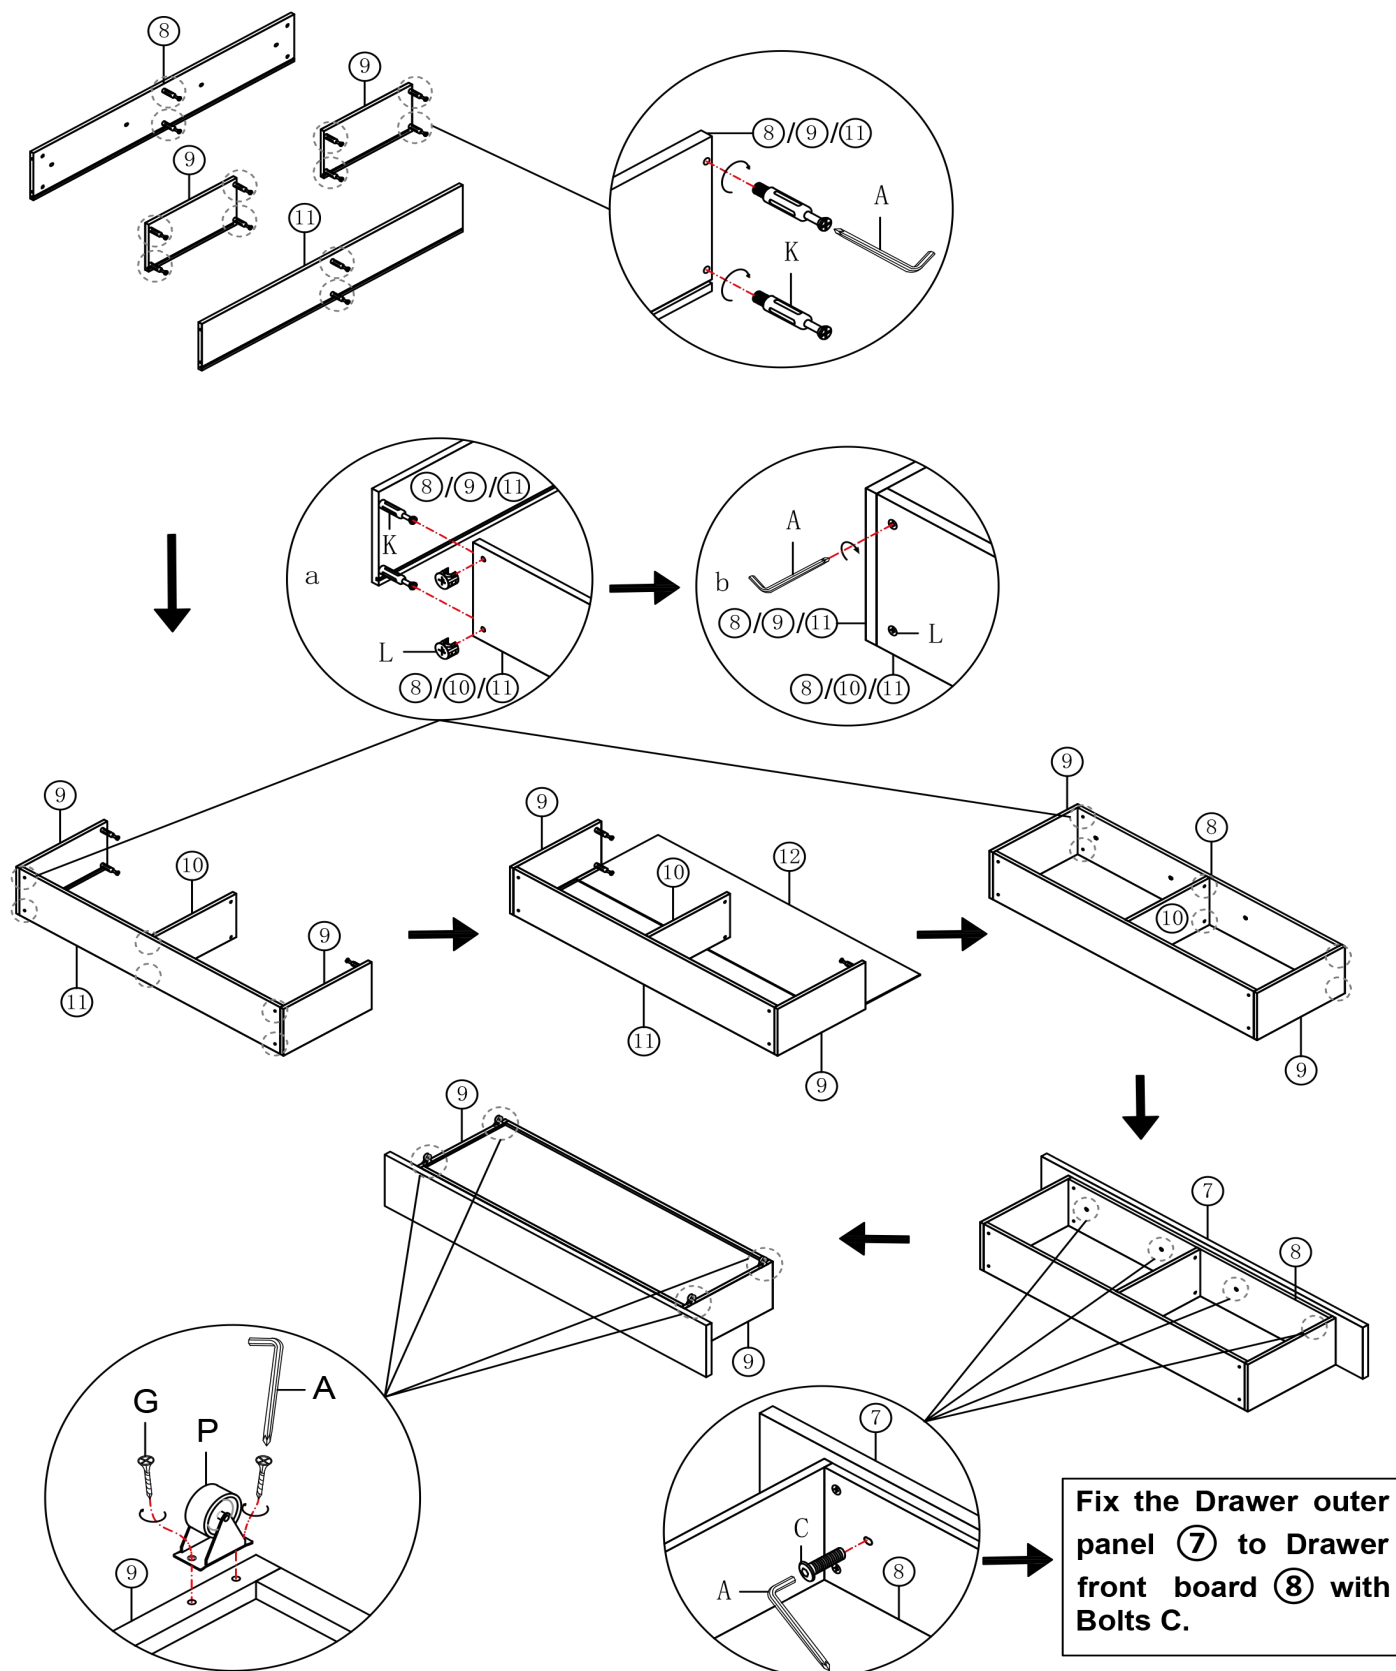




**STEP 10**

Insert the Flat Slats ⑭ to both ends of slat Middle Holder Q before attaching slat End Holder R to the other end of Flat Slats. Having done this, press down the Middle Holder Q and the End Holder R to the siderail shelf and Central Rail. Repeat the above for balance rows.



Do not use Power Tools

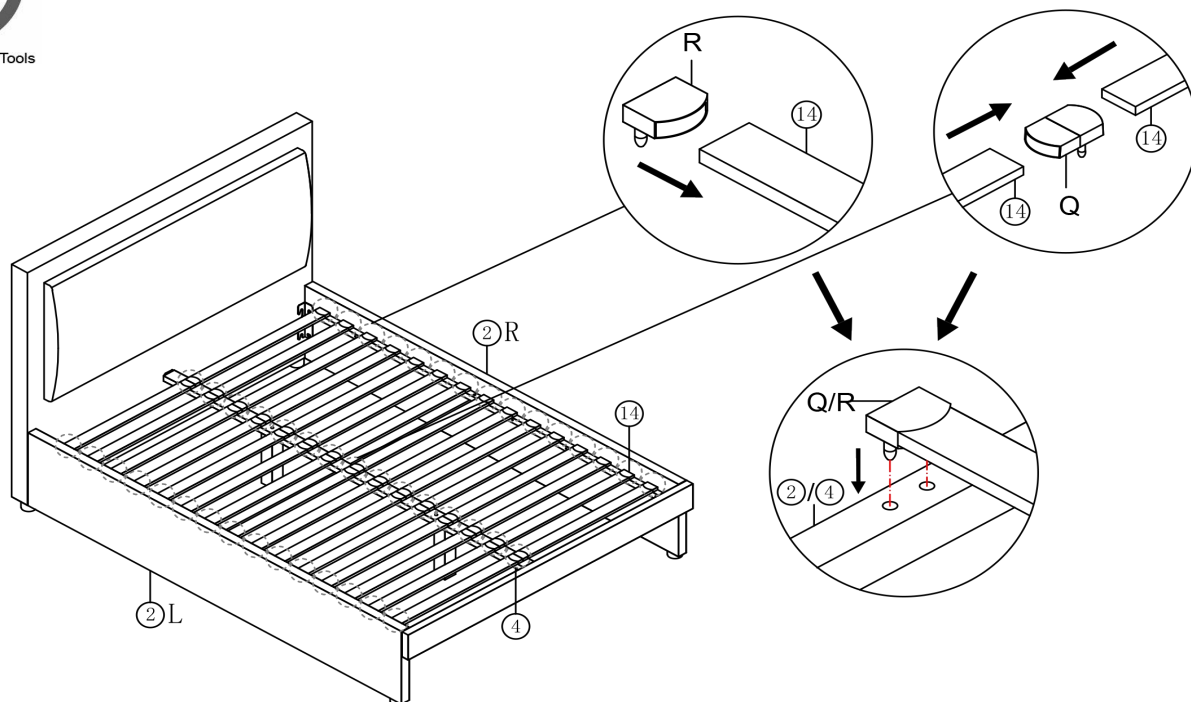**STEP 11**

When fully assembled, please push the drawer into the Foot end to fit it.

