


BRANDON BED FRAME

Made Exclusively for
Harvey Norman[®]

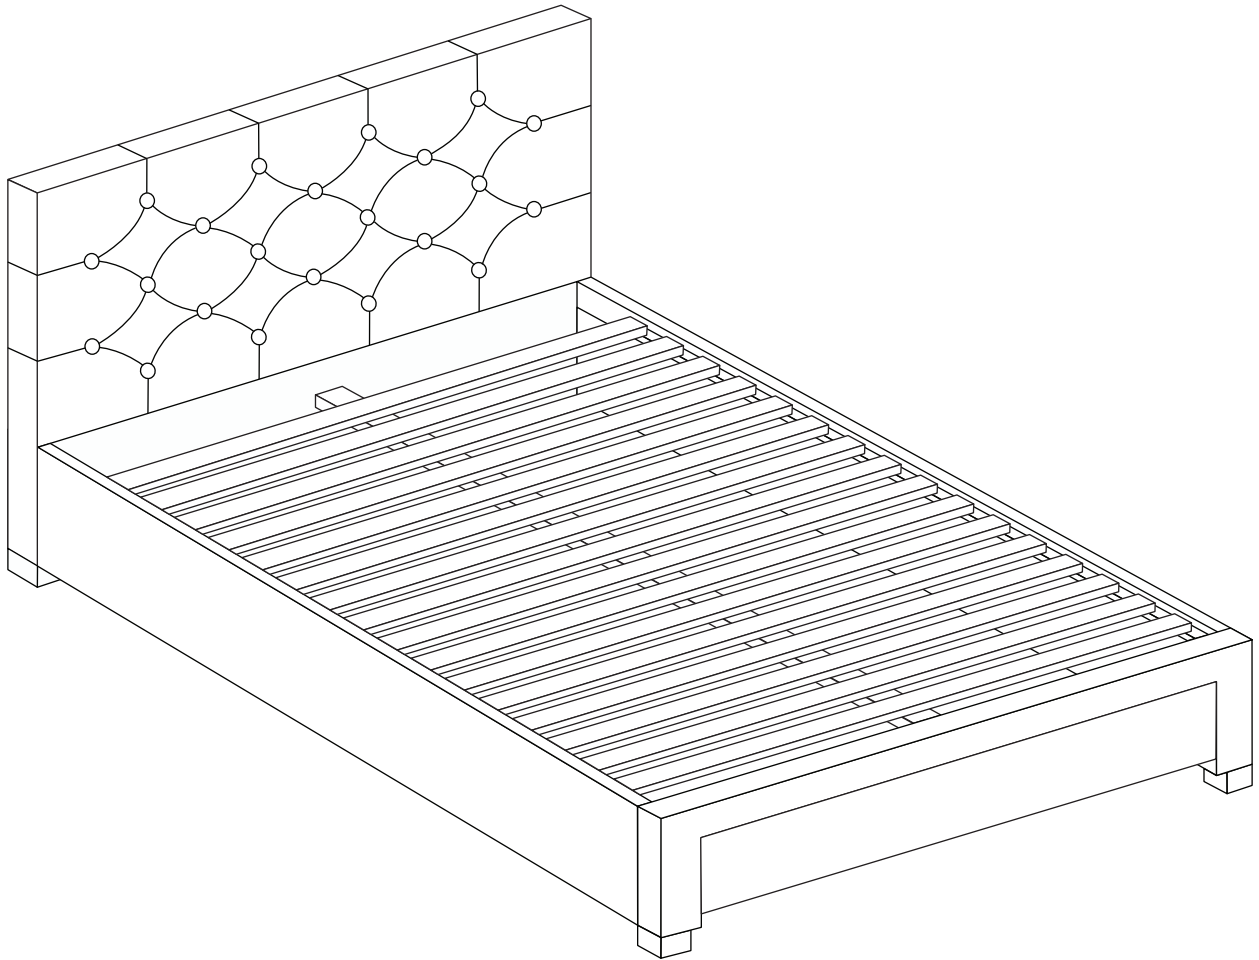

ASSEMBLY MANUAL


MODEL: CF 8934 (5')

BRANDON BED FRAME

Made Exclusively for **Harvey Norman**


LIST OF AVAILABLE ASSEMBLY PARTS

A

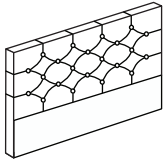


HEAD BOARD
x 02

B




FOOT BOARD
x 02

C



SIDE RAIL
x 02

D

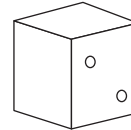


WOODEN LEG
70x70x50(H)
x 04

E




CENTER RAIL
2040 MM
x 01

F




SUPPORT LEG
265 MM
x 02

G

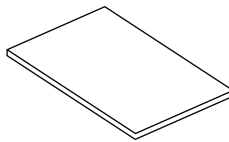


1537 MM
x 01

H

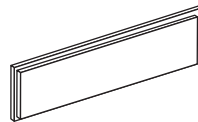


FRONT PANEL
x 01

I

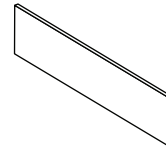


BACK PANEL
x 01

J

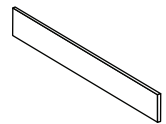


SIDE PANEL
x 02

K




BOLLOW PANEL
x 02

L

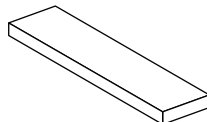


BOTTOM PANEL
BIG SUPPORT
x 03

M

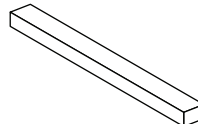


BOTTOM PANEL
SMALL SUPPORT
x 02

1



JCBC M6x40 mm
x 05

2




M5x70 mm
x 01

3




M4x65 mm
x 01

4



CSK M4x32 mm
x 32

5



CSK M4x50 mm
x 08

6




BIG
ADJUSTER
x 02

7




CSK M4x16 mm
x 24

8



CSK M4x32 mm
x 16

9



CSK M4x50 mm
x 08

10



ROLLER
x 06

11



POWER NAIL
6/8
x 24

12



METAL STOPPER
x 02

BRANDON BED FRAME


Made Exclusively for **Harvey Norman**

REQUIRED TOOLS




30 MINUTES



TWO PEOPLE

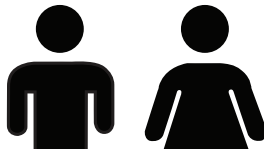

SCREWDRIVER

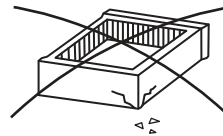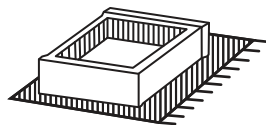

ASSEMBLY TIPS

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to assembly.
3. Please follow attached instruction in the same sequence as numbered to ensure fast and easy assembly.



WARNING!

Before Getting Started

- Read the instructions carefully prior to assembling the product.
- Carefully remove all packaging materials and retain for future use.
- Choose a clean level, spacious assembly area.
- Avoid hard surfaces that may damage the product.
- Ensure that you have all required contents for complete assembly.
- Take care when Assemble the product in close proximity to where you intend to position the Item.
- Do not over tighten the screws and bolts and be careful using power tools as they may damage the threads.
- When you have finished assembling the product, place it on a flat surface and make sure it is stable before use.
- Please do not completely tighten bolts and/or screws until assembly is finished.


Cleaning & Maintenance

- Keep the product away from direct heat and sunlight.
- Prolonged exposure to heat sources may cause glazing, melting and scorching, or even cause color to fade.
- Regular vacuuming or light brushing helps to remove dirt and prevent soil build-up, which increases the appearance wear.
- Periodically (every 90 days) make sure that the screws are fully tightened.


BRANDON BED FRAME

Made Exclusively for **Harvey Norman**

STEP 1

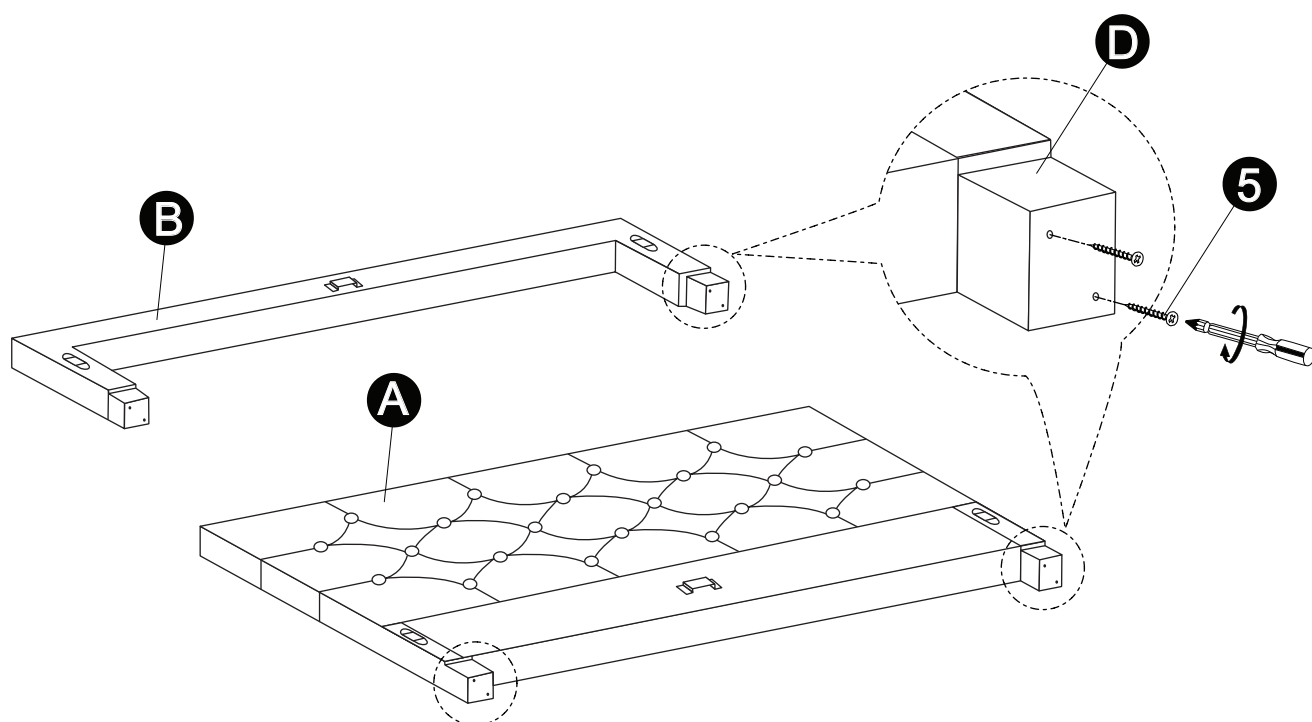


STEP 2

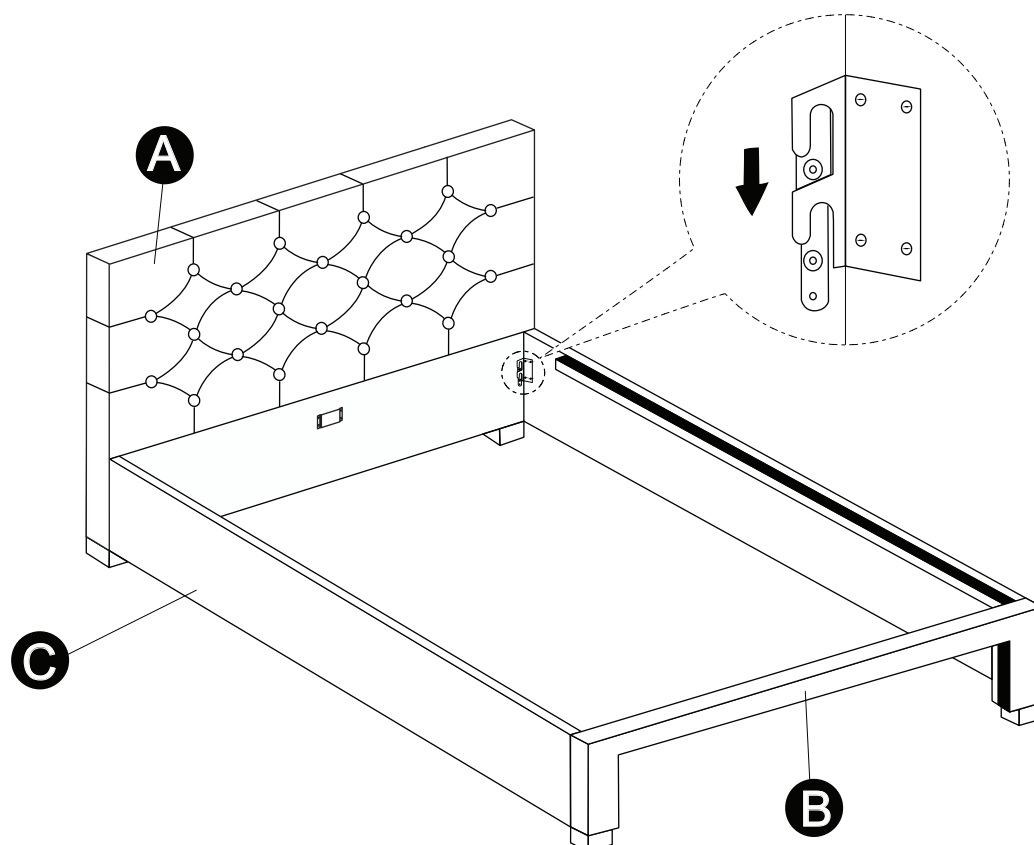


BRANDON BED FRAME

Made Exclusively for **Harvey Norman**

STEP 3

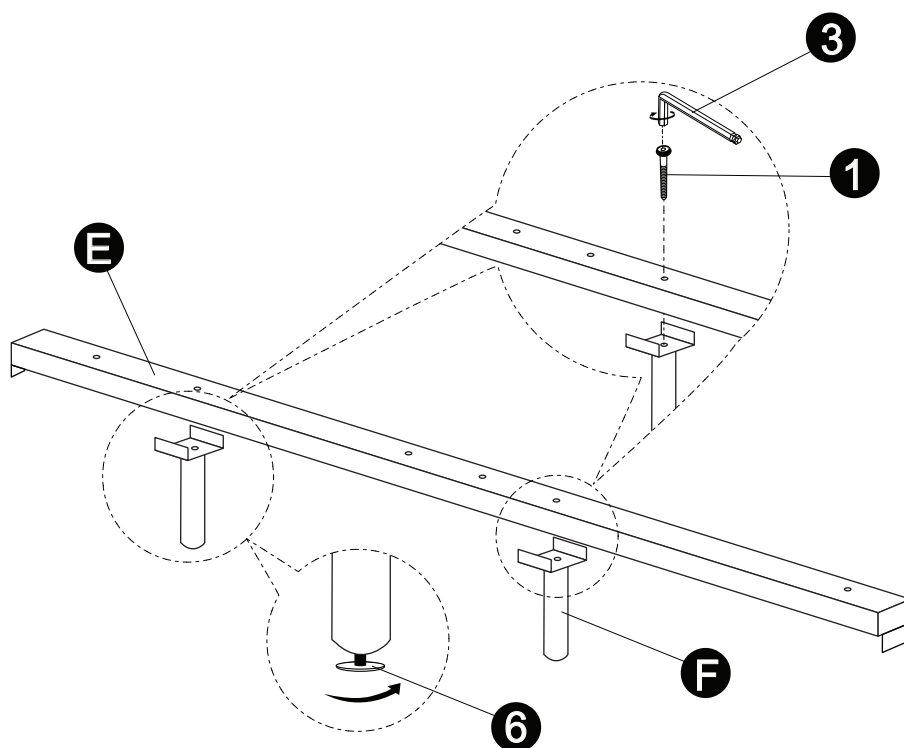


STEP 4

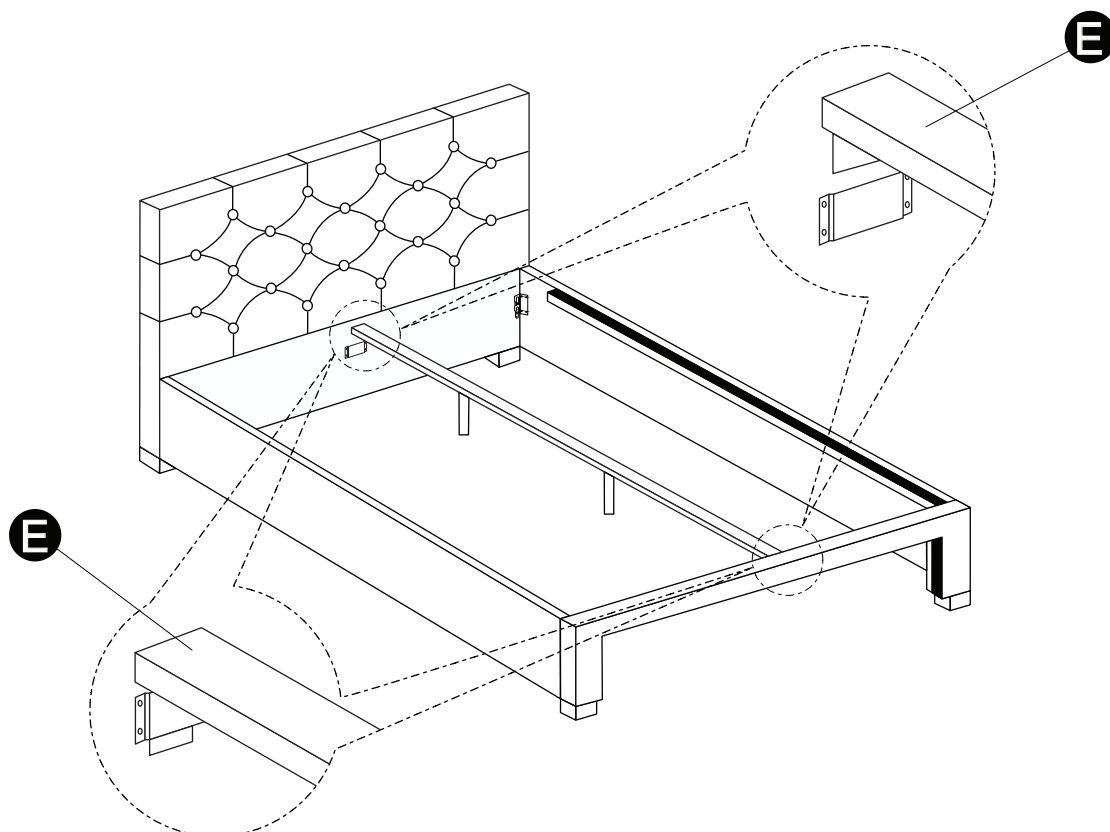


BRANDON BED FRAME

Made Exclusively for **Harvey Norman**

STEP 5

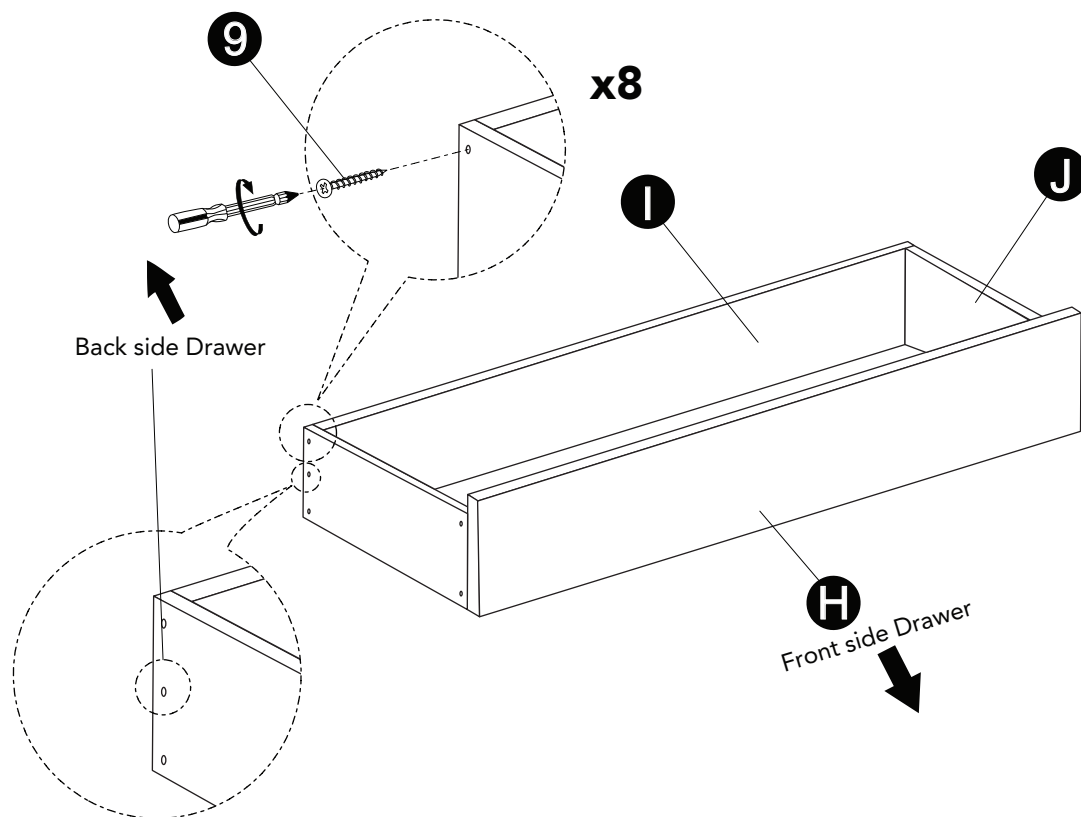


STEP 6

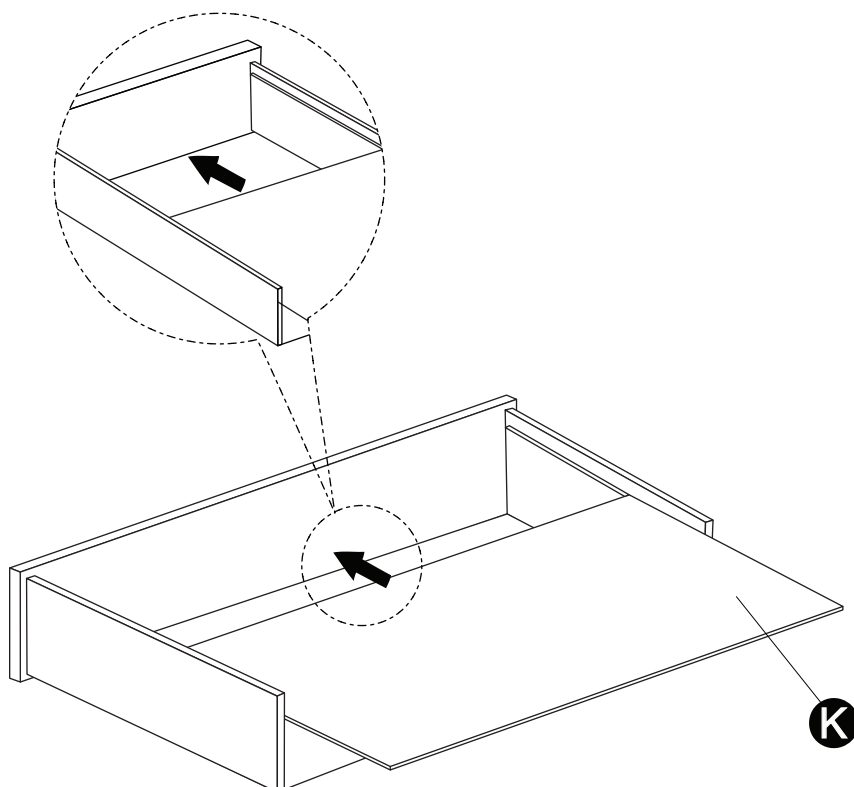


BRANDON BED FRAME

Made Exclusively for **Harvey Norman**

STEP 7

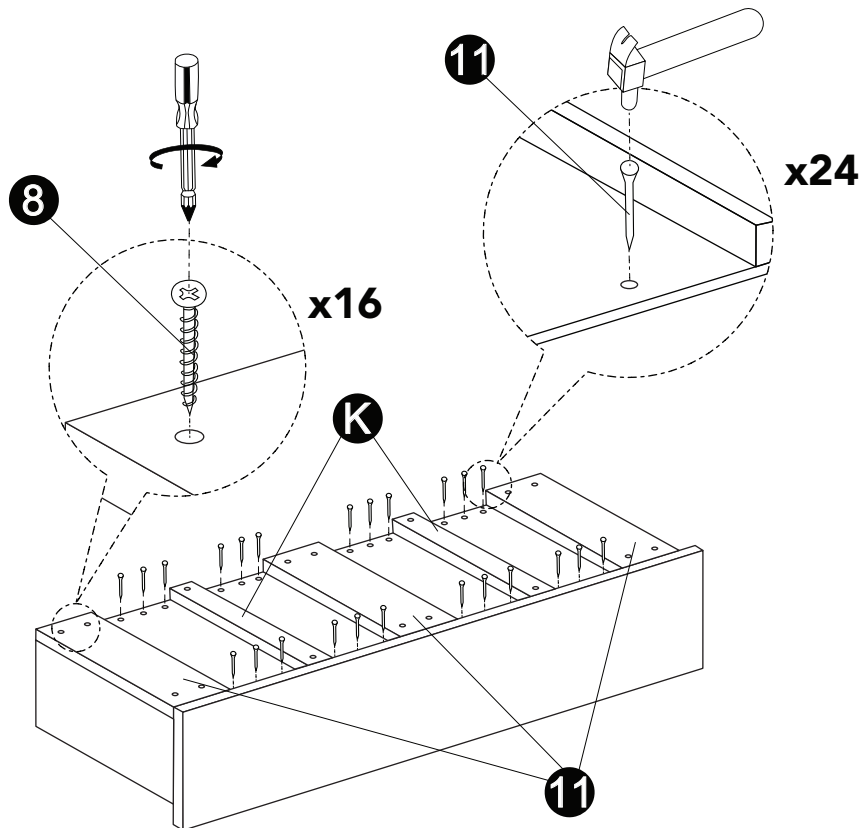


STEP 8

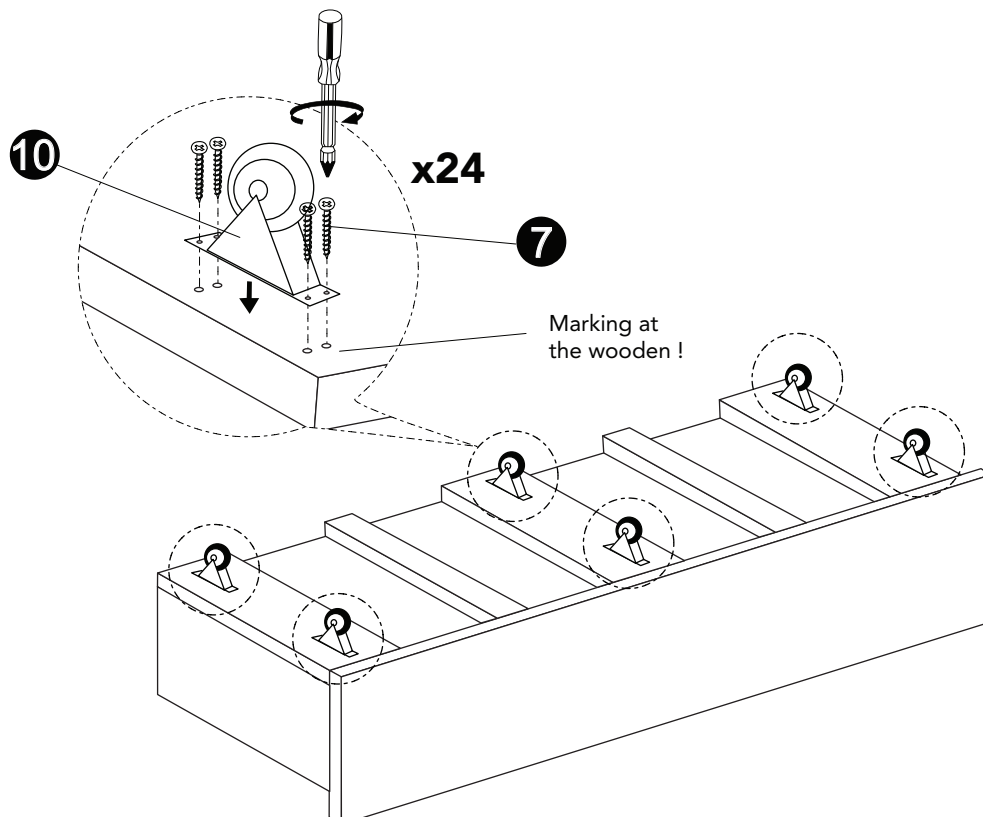

BRANDON BED FRAME

Made Exclusively for **Harvey Norman**




STEP 9

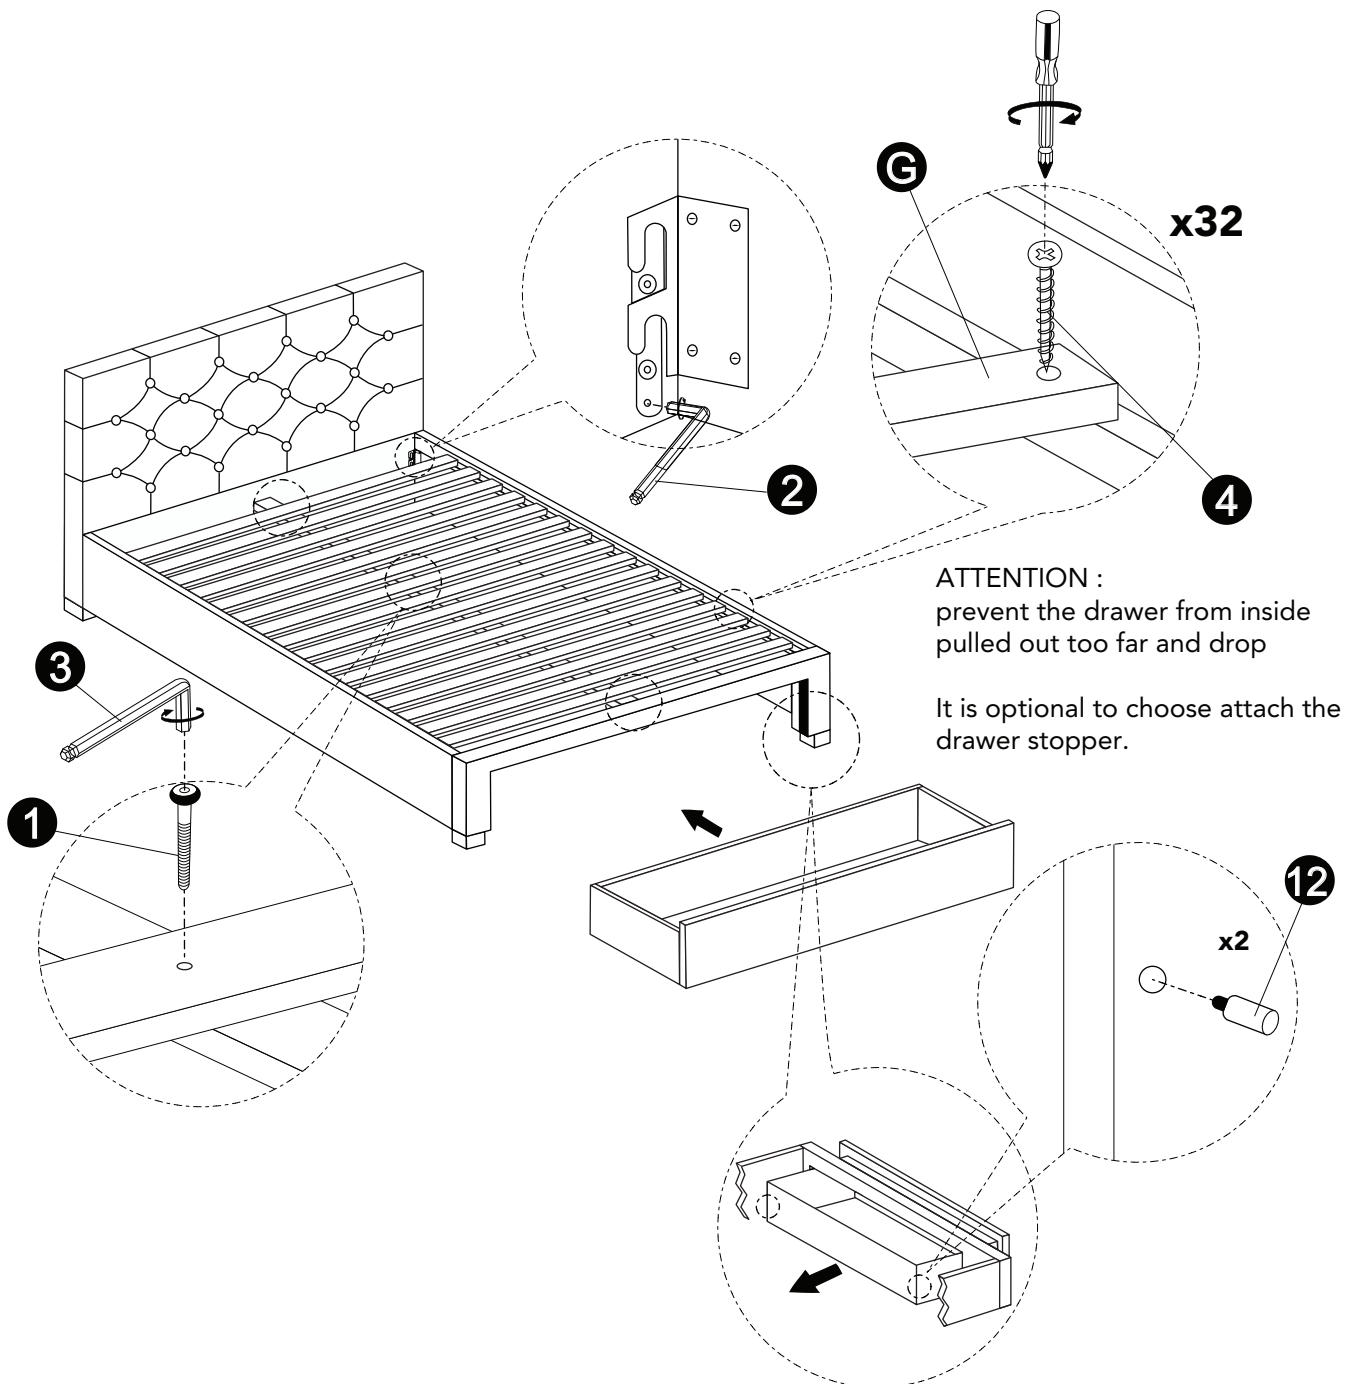

BRANDON BED FRAME

Made Exclusively for **Harvey Norman**

FINAL STEP

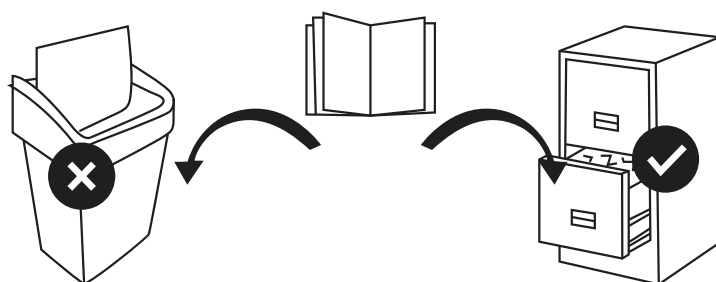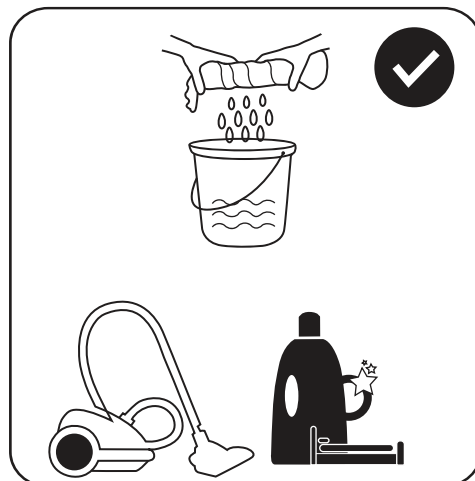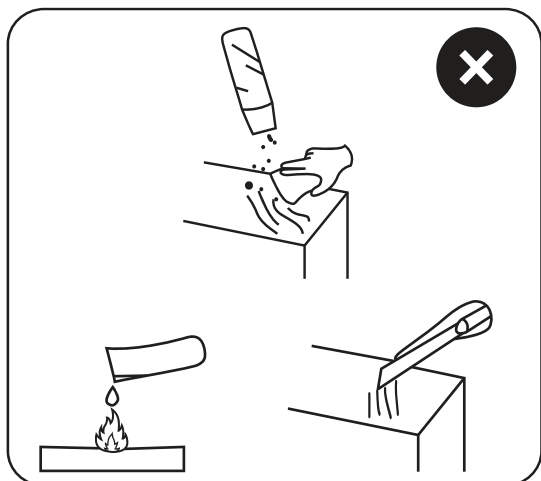

FOR TIPS ON HOW TO CARE FOR YOUR PIECE

Please refer to our Care & Maintenance Guide in stores and online