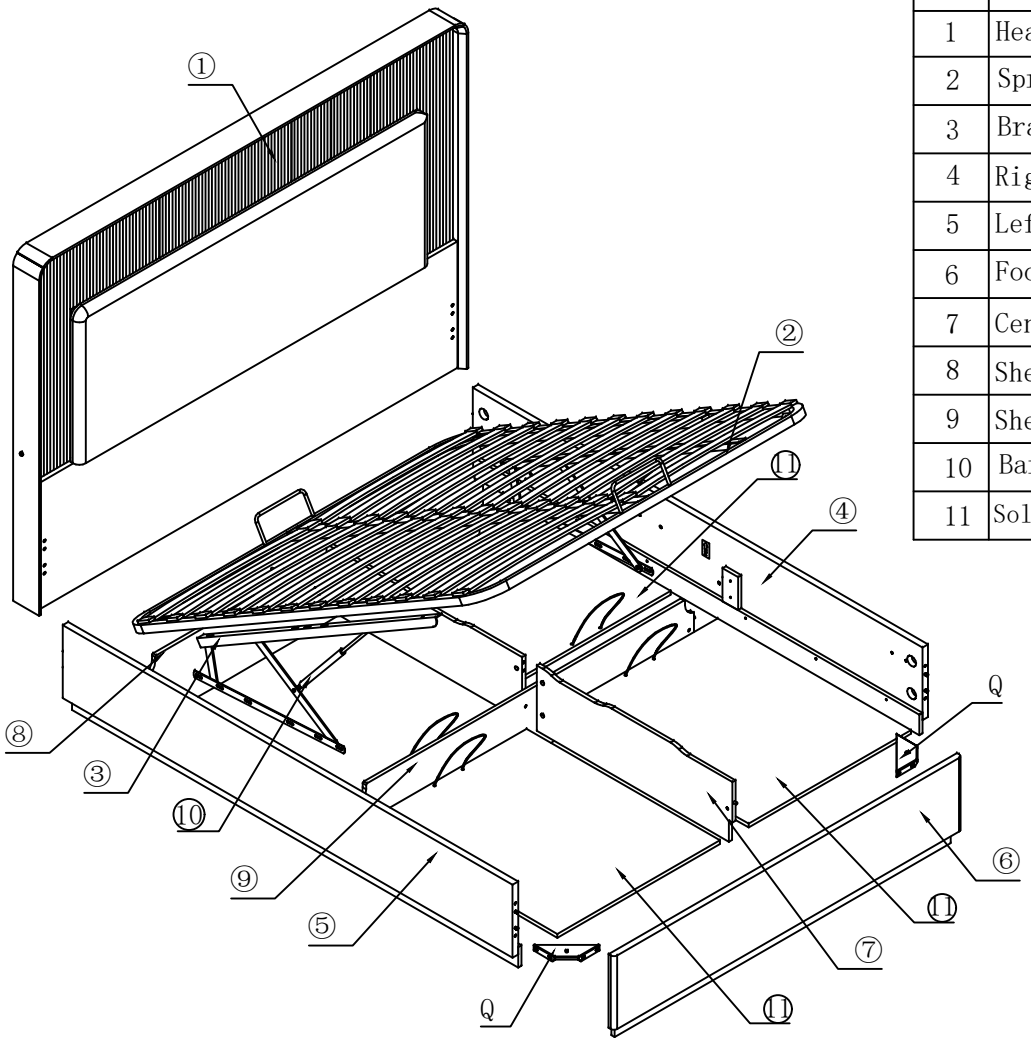


No	Part	Qty
1	Head Board	1
2	Sprung Base	1
3	Bracket	2
4	Right Bedside	1
5	Left Bedside	1
6	Foot Board	1
7	Center Panel	2
8	Shelf support A	1
9	Shelf support B	1
10	Baric Pole	2
11	Soleplate Bottom	4


HARDWARE FOR BED

No	Part	Qty
A	Angle iron	6
B	Screw M8x25	12
C	Screw M6x18	8
D	Gasket M6	8
E	Screw M6x15	12
F	Threaded Bolt M8x70	4
G	Gasket M8	16
H	Nut M8	8
I	Spanner M8/13mm	1
J	Maxiluna Washer ϕ40x15	8
K	Cover Cap ϕ50	8
L	Screw M6x45	4
M	Threaded Bolt M8x70	4
N	Spanner (5mm)	1
O	Handles	2
P	u-shaped groove	2
Q	Angle Iron	2
R	Cam ϕ15X12	4
S	Quickfit (ϕ10X66)	2
T	Junction box	1


HARDWARE FOR BEDFRAME

No	Part	Qty
G	Gasket M8	24
H	Nut M8	14
U	Screw M8x50	6
V	Screw M8x70	4

- Please check contents and read instructions before commencing assembly.
- Please use a soft mat to avoid damaging during assembly
- Assemble this article following the enclosed instructions carefully.

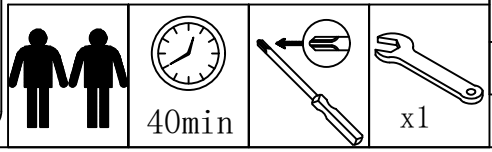


STEP 1

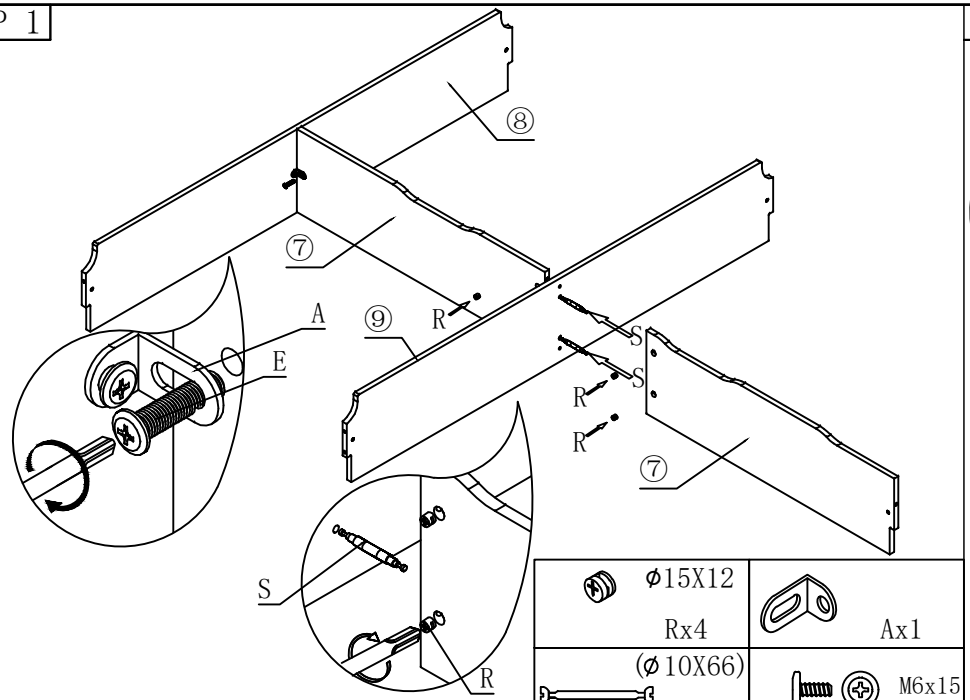


ø15X12 Rx4	Ax1
(ø10X66) Sx2	M6x15 Ex2

STEP 2

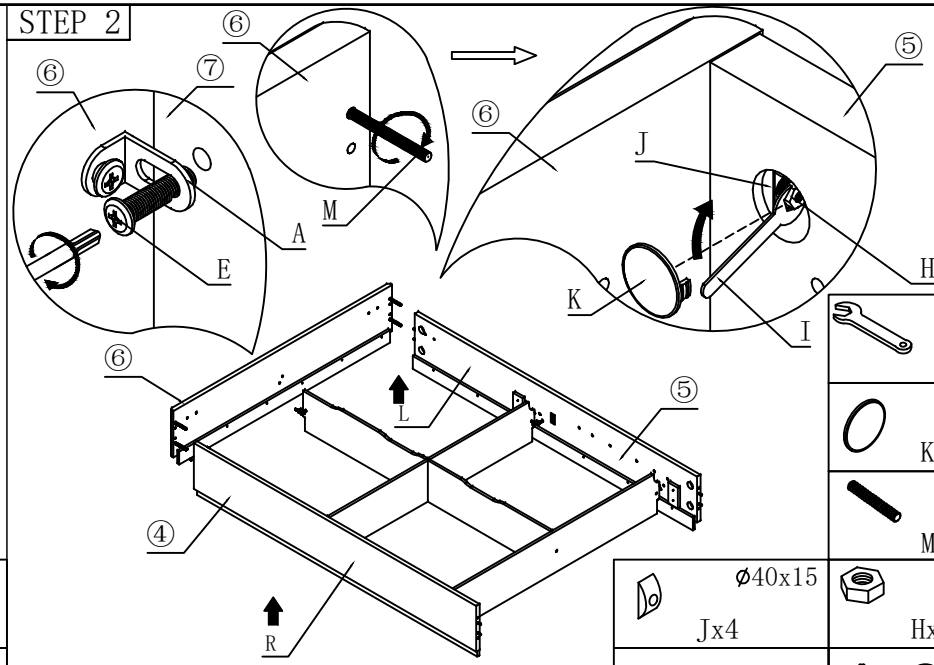


Spanner Ix1	ø50 Kx4
M8x70 Mx4	
ø40x15 Jx4	Nut M8 Hx4
Ax5	M6x15 Ex10

STEP 3

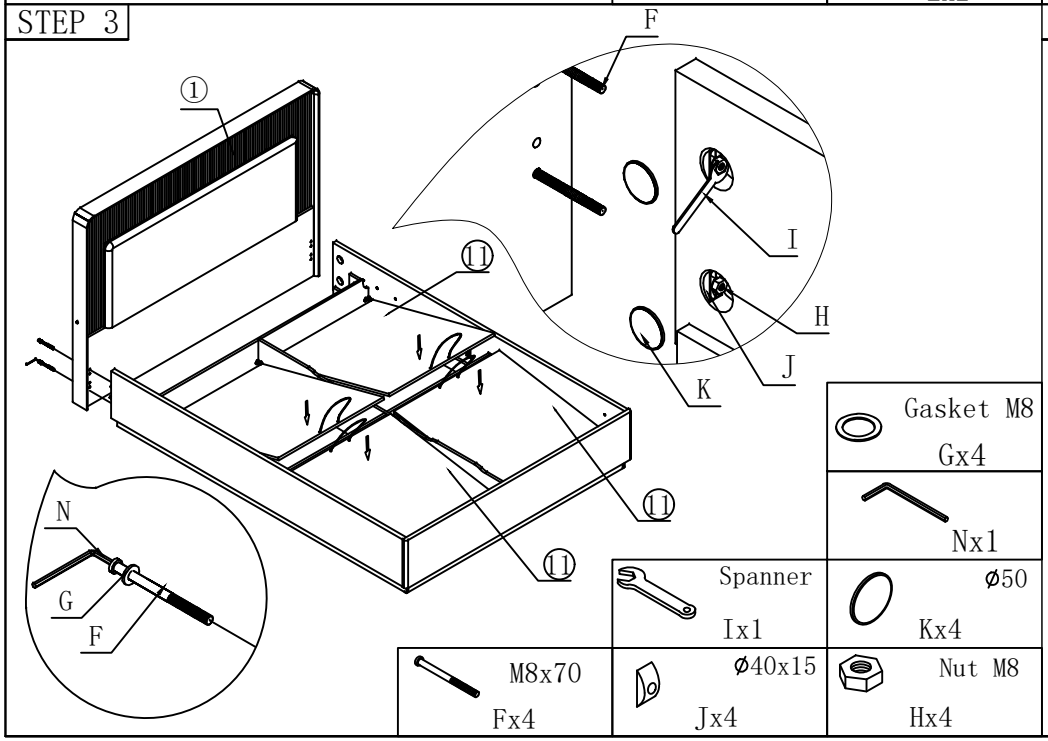


Gasket M8 Gx4	
Nx1	
Spanner Ix1	ø50 Kx4
M8x70 Fx4	ø40x15 Jx4
Nut M8 Hx4	

STEP 4

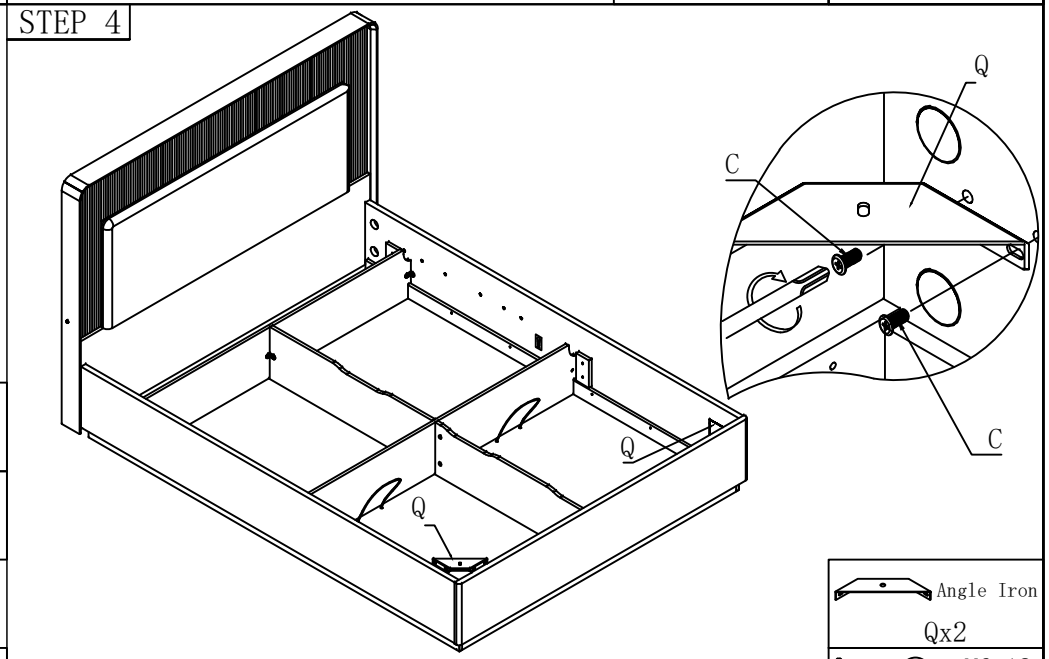

Angle Iron Qx2	
M6x18 Cx8	


STEP 5

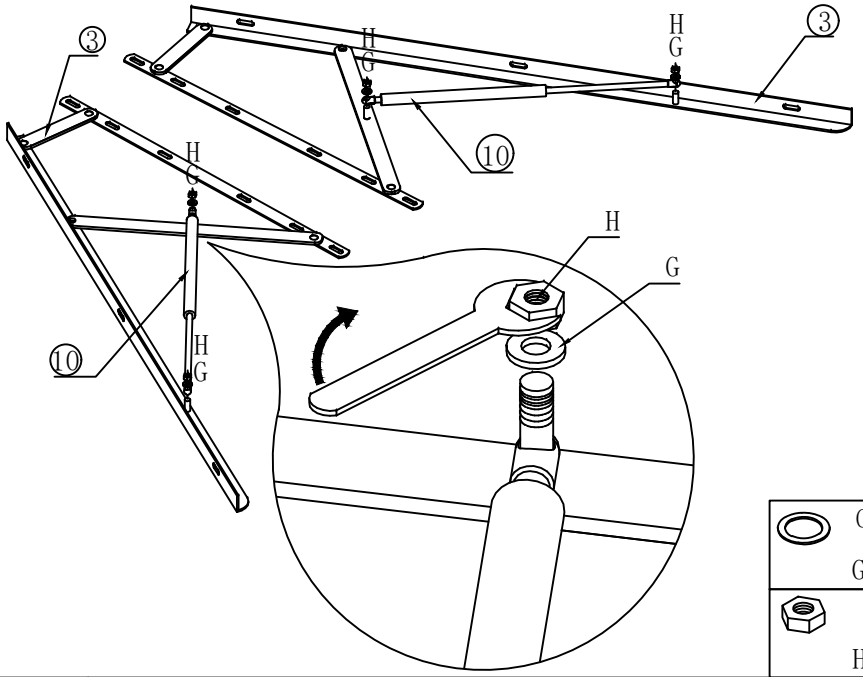

Gasket M8
Gx4

Nut M8
Hx4

STEP 6

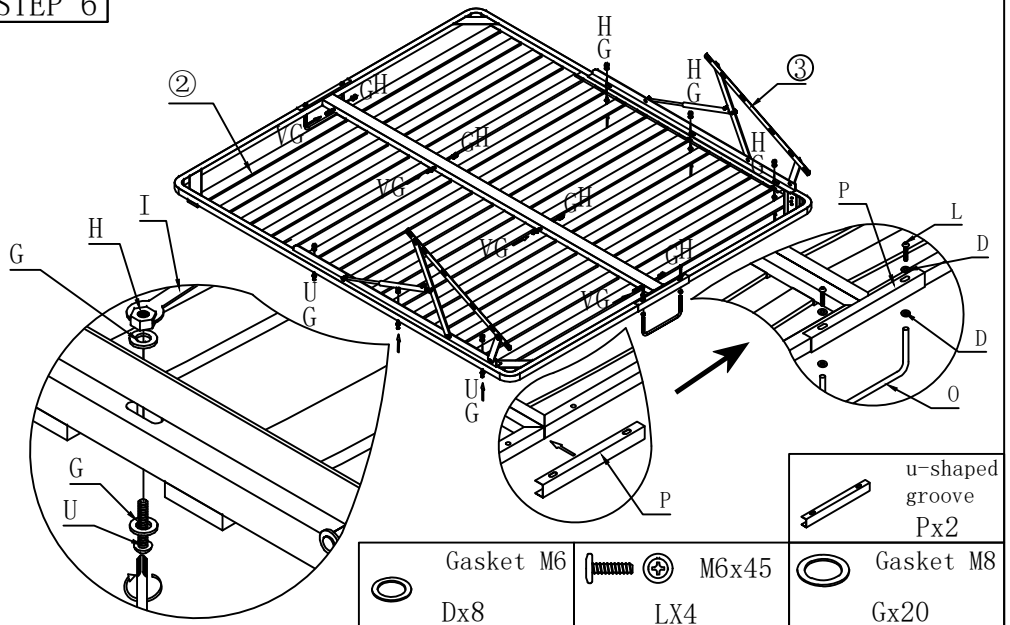

u-shaped groove
Px2

Gasket M6
Dx8

M6x45
LX4

Gasket M8
Gx20


M8x70
Vx4

Handles
OX2

M8x50
Ux6

Nut M8
Hx10


STEP 7

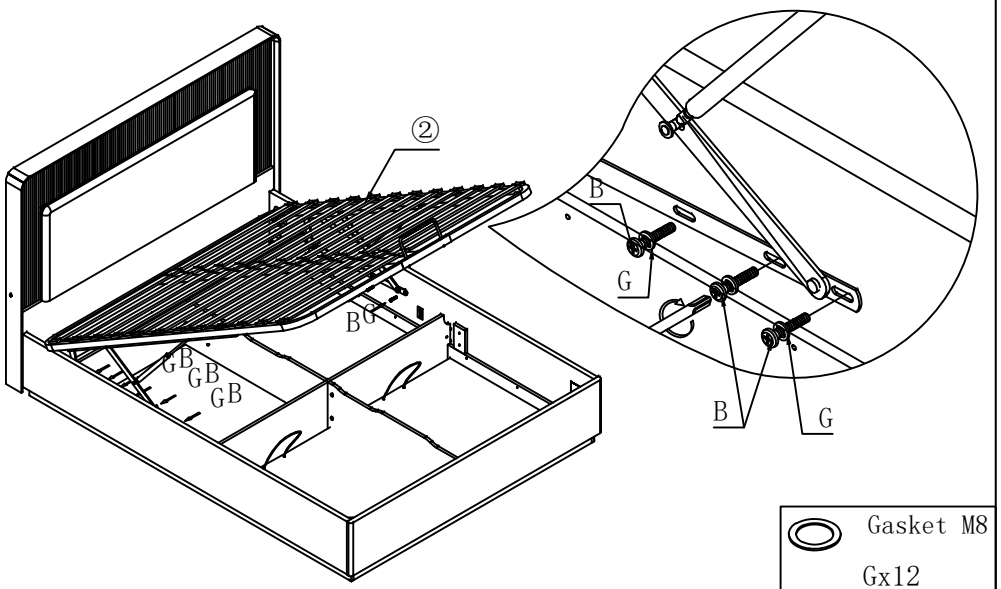

Gasket M8
Gx12

M8x25
Bx12

STEP 8

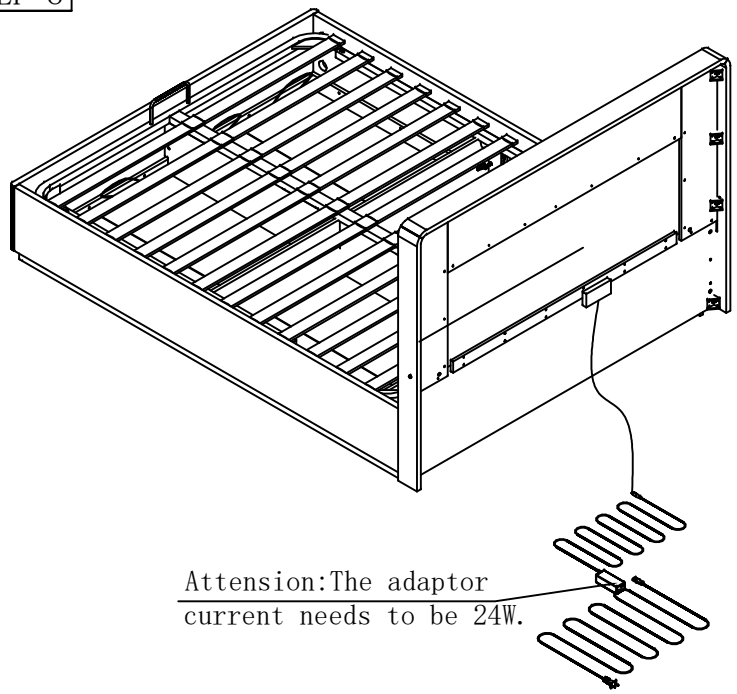

Attension:The adaptor current needs to be 24W.

Junction box
Tx1