


DIANE 4FT6

Made Exclusively for
Harvey Norman®

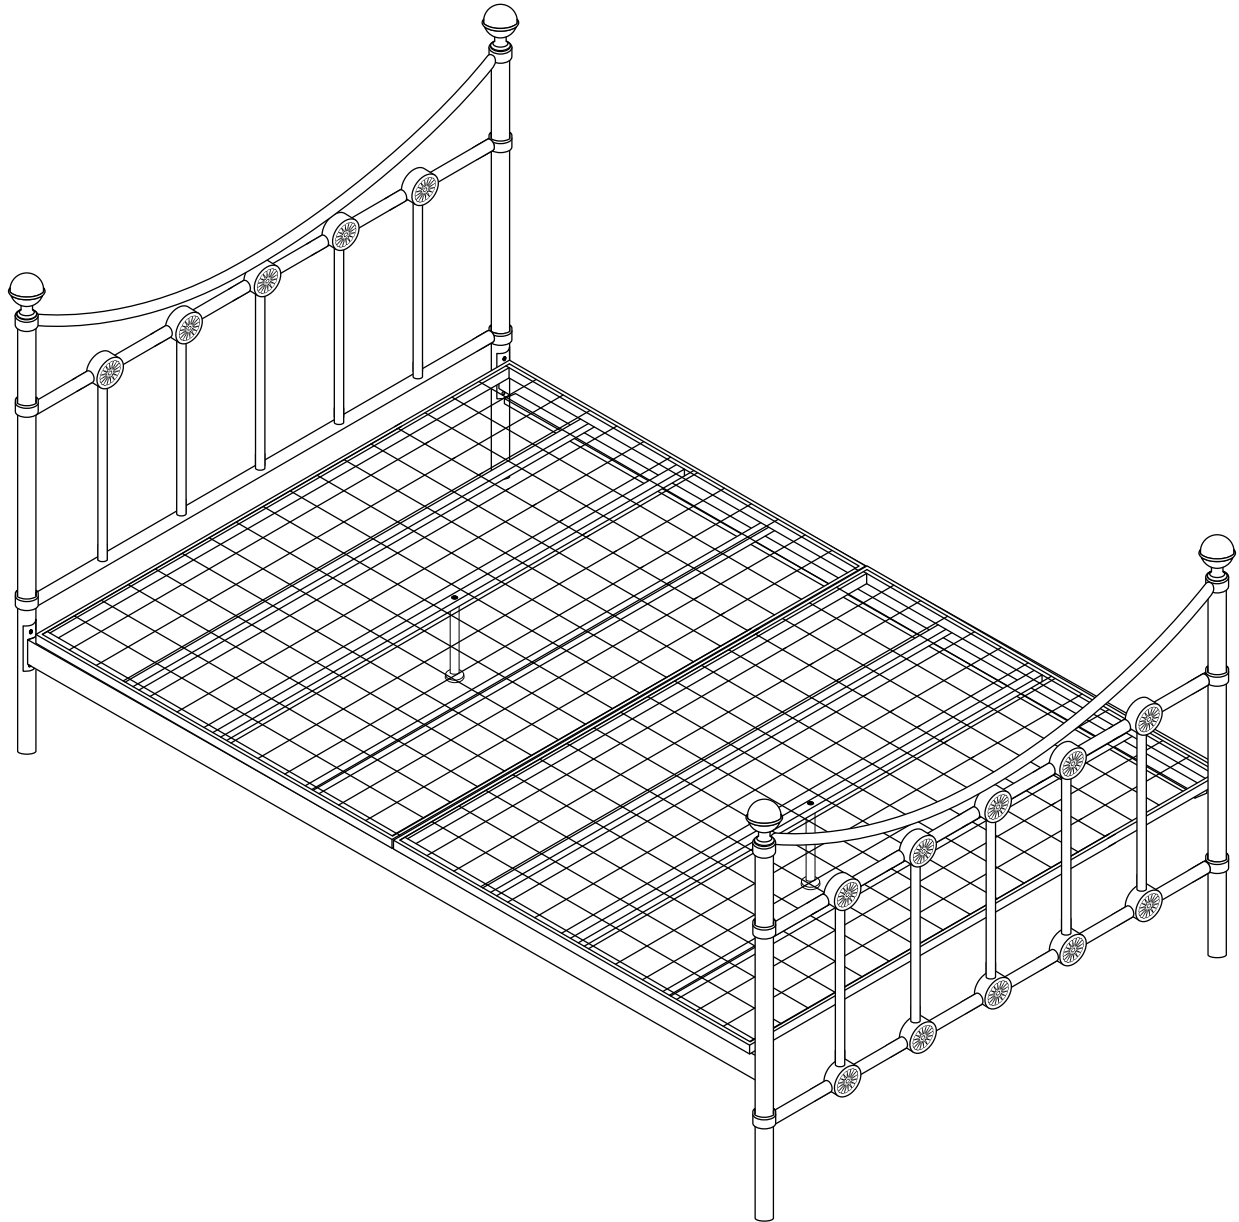


ASSEMBLY MANUAL

MODEL: 


LIST OF AVAILABLE
**ASSEMBLY
PARTS**

A

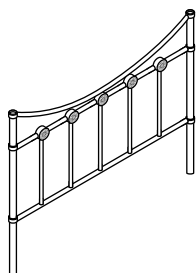


Headboard
x 01

B

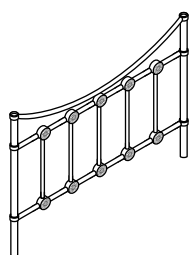


Footboard
x 01

C

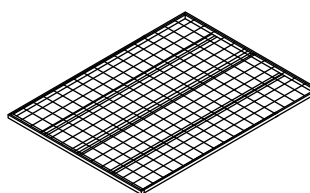

Slat
x 02

D

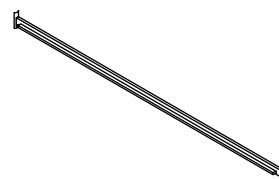


Side Rail
x 02

E



Support Leg
x 02

F

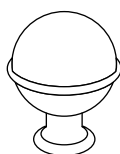


Bed Knob
x 04

G




Plastic Feet
x 02

1



6mm X 22mm
x 12

2



6mm X 45mm
x 02

3




Flat Washer
x 14

4



6mm X 38mm
x 04


5





Allen Key
x 01

REQUIRED TOOLS

30 MINUTES

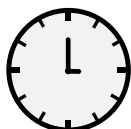

TWO PEOPLE

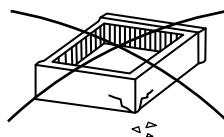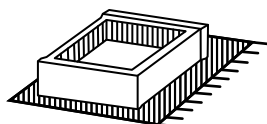

ASSEMBLY TIPS

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior of assembly.
3. Please follow attached instruction in the same sequence as numbered to ensure fast and easy assembly.




WARNING!

- Do not tighten the nuts or bolts until all nuts and bolts are in place and ready to be tightened
- Do not over tighten the nuts or bolts as this will cause damage to the thread
- Keep all parts out of the reach of children


DIANE 4FT6

Made Exclusively for **Harvey Norman**

STEP 1

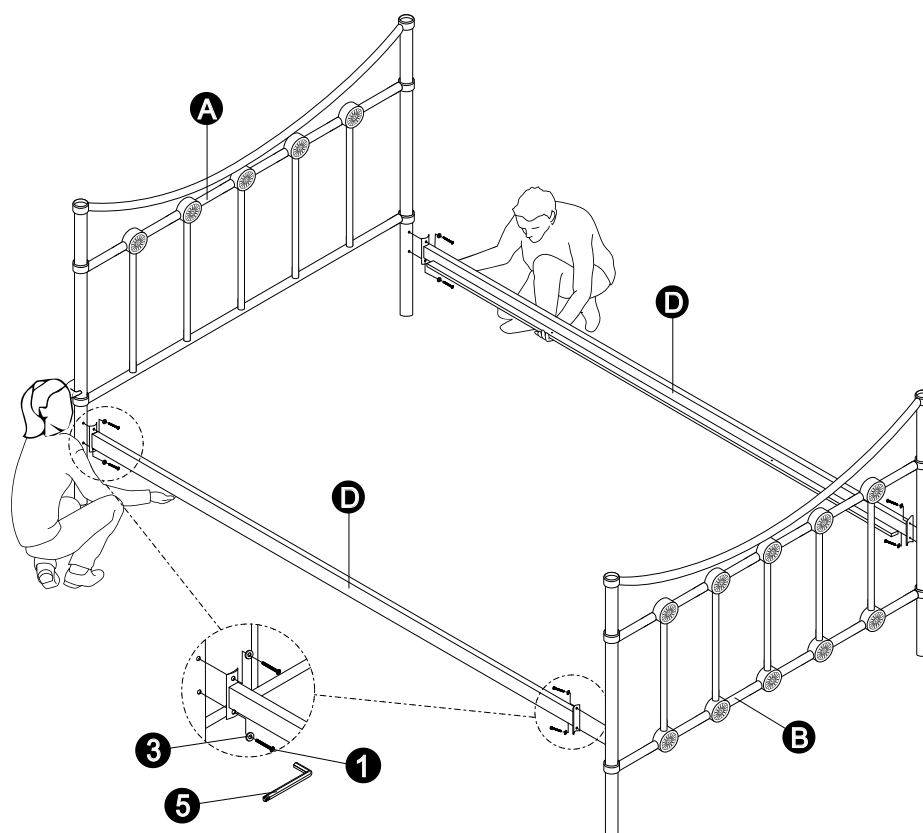


STEP 2

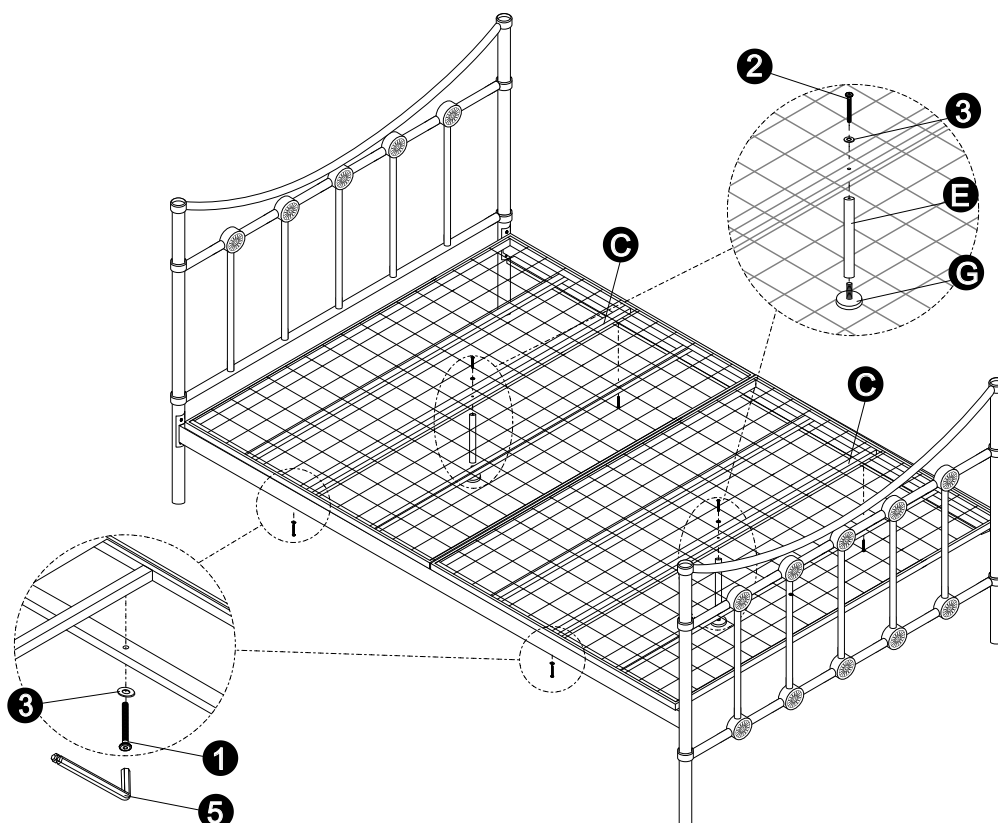


DIANE 4FT6

Made Exclusively for **Harvey Norman**




STEP 3

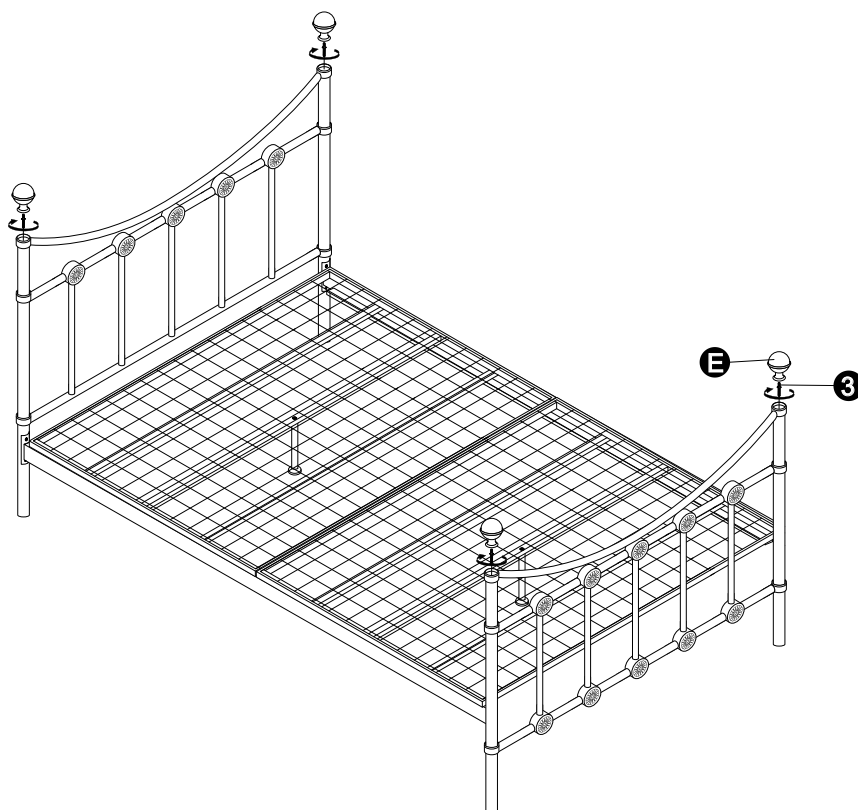

Completed Assembly

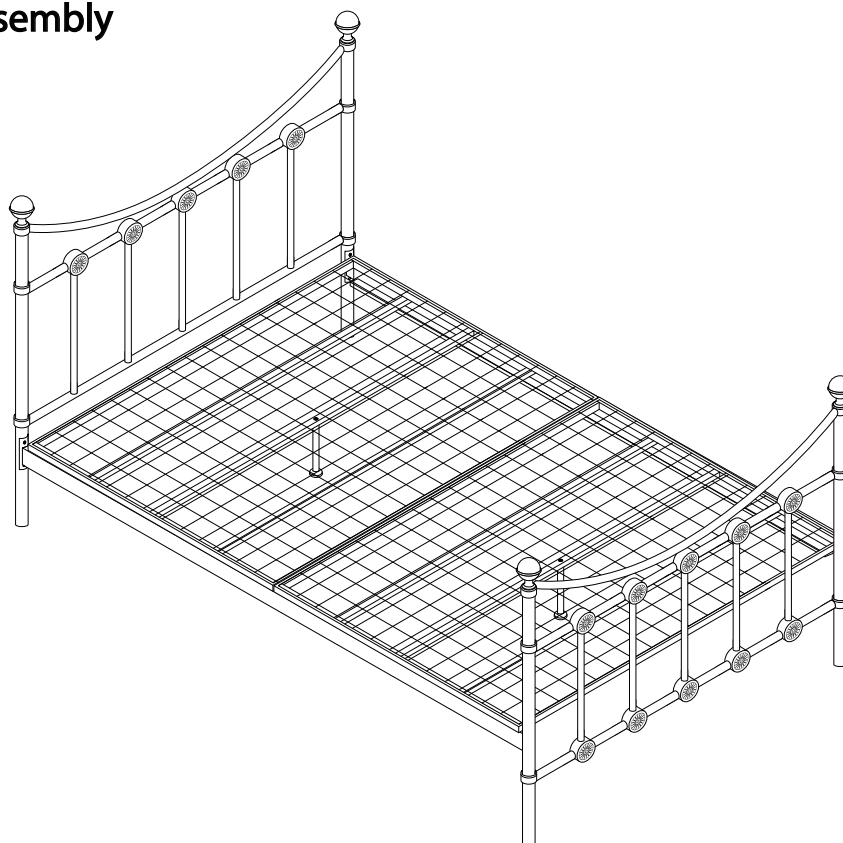

FINAL STEP

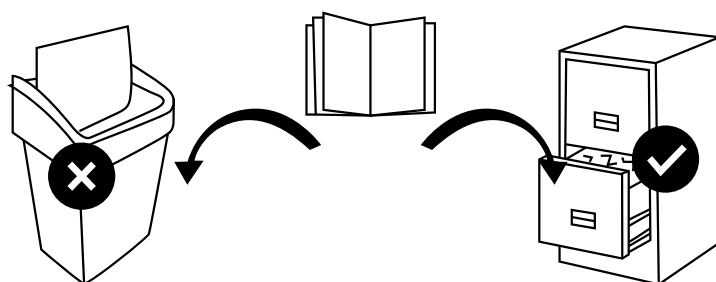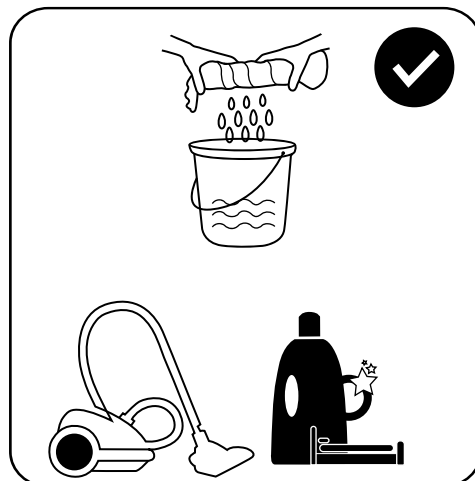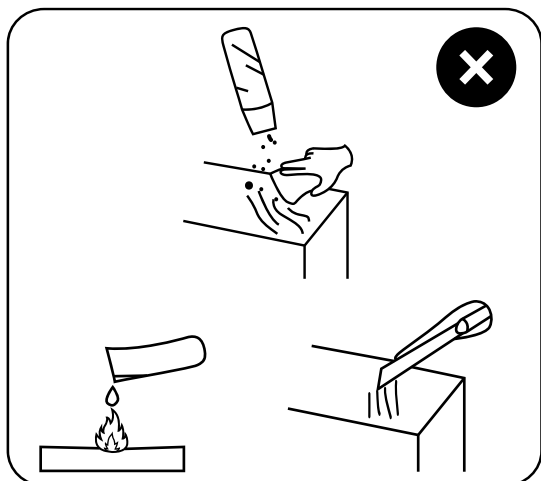

FOR TIPS ON HOW TO CARE FOR YOUR PIECE

Please refer to our Care & Maintenance Guide in stores and online