

ASSEMBLY INSTRUCTIONS

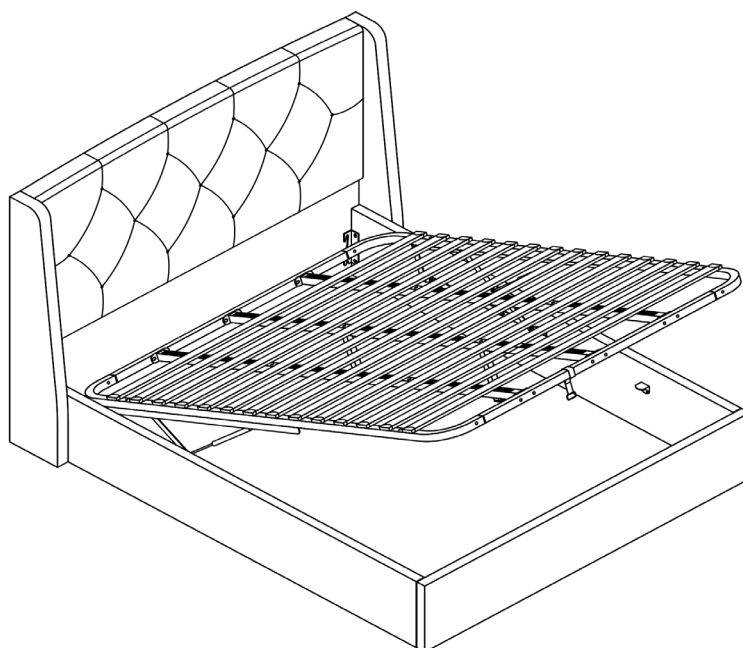
Minimum No.
Of People
Recommended
To Assemble
This Product :

2

Approximate
Assembly
Time :

30

MINUTES



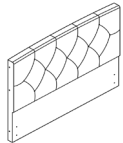
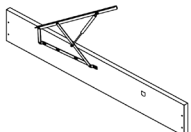
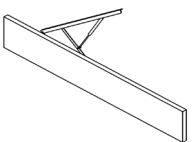
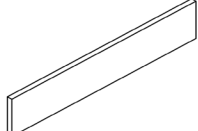
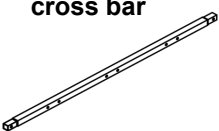
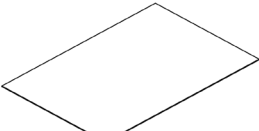
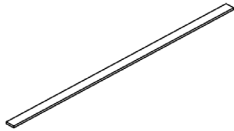




BEFORE YOU START, HERE IS SOME HELPFUL ADVICE :



Do not use Power Tools

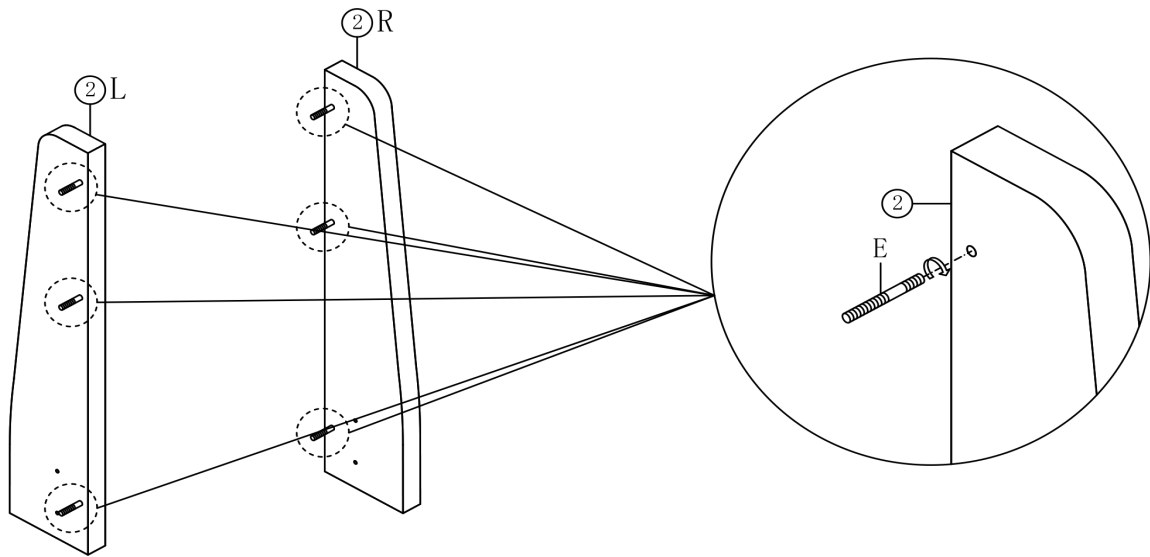
1. We suggest you spend a short time reading through this leaflet and then follow the simple step by step instructions.
2. Please only use a mattress size that is relevant to the size of the bed frame purchased and that your **mattress weight is no more than 50kg**.
3. Do not discard any of the packaging until you have checked that you have all the parts and the pack of fittings is correct and you are happy with the product.
4. To ensure an easier assembly, we strongly advise that all fittings are only finger-tightened during initial assembly phase. Only upon completion of the assembly should all fixing points be fully tightened.
5. We recommend a periodic check on all fixing points to make sure they remain fully tightened.
6. Keep any fittings out of children's reach.

PARTS AND HARDWARE LISTS

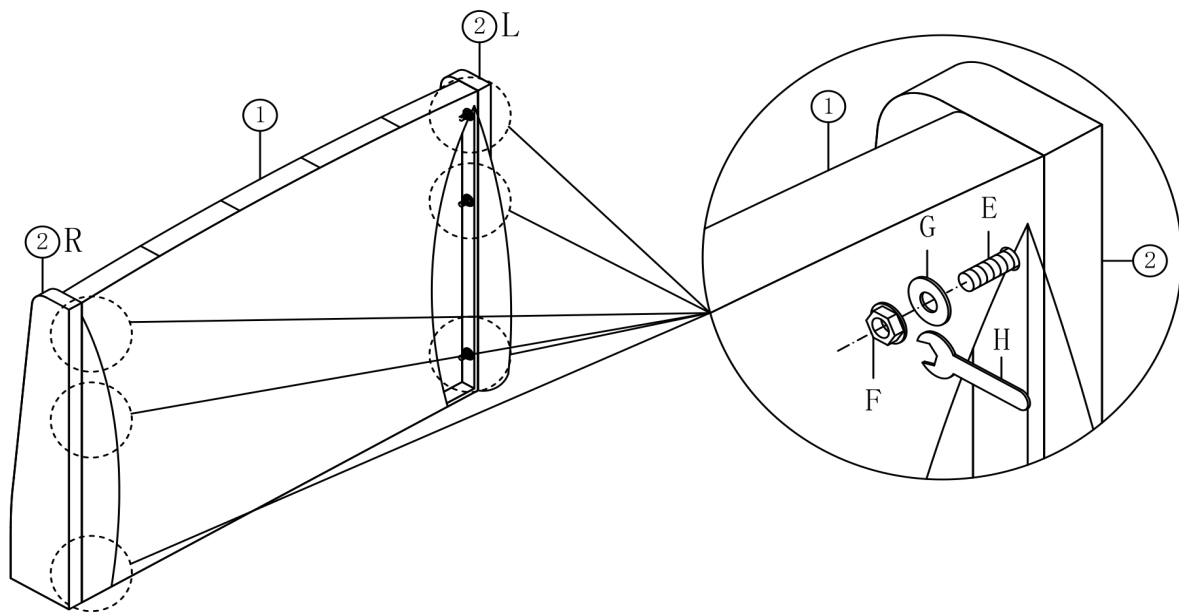
1 x1pc Head board 	2R x1pc Side head board 	2L x1pc Side head board 	3R x1pc Side rail 
3L x2pcs Side rail 	4 x1pc Foot board 	5 x2pcs Metal frame End cross bar 	6 x2pcs Metal frame side bar 
7 x3pcs Metal frame middle bar 	8 x2pcs Middle support leg 	9 x2pcs Base boards 	10 x14pcs Flat Slat 
A x1pc 	B x16pcs  M8x25mm	C x24pcs  M8x45mm	D x9pcs  M4x25mm
E x6pcs  M8x60mm	F x28pcs 	G x6pcs 	H x1pc 
I x4pcs 	J x3pcs 	K x28pcs 	L x1pc 

STEP 1

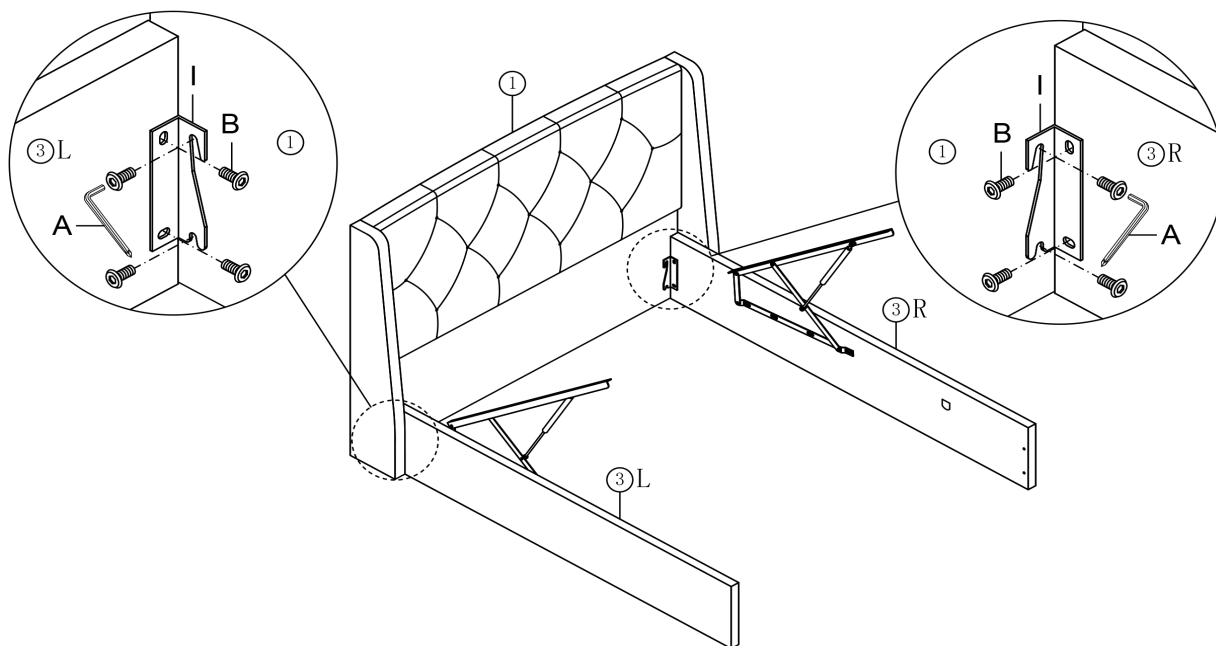
Fix the Screw rod E to the Side head board ②L & Side head board ②R.

**STEP 2**

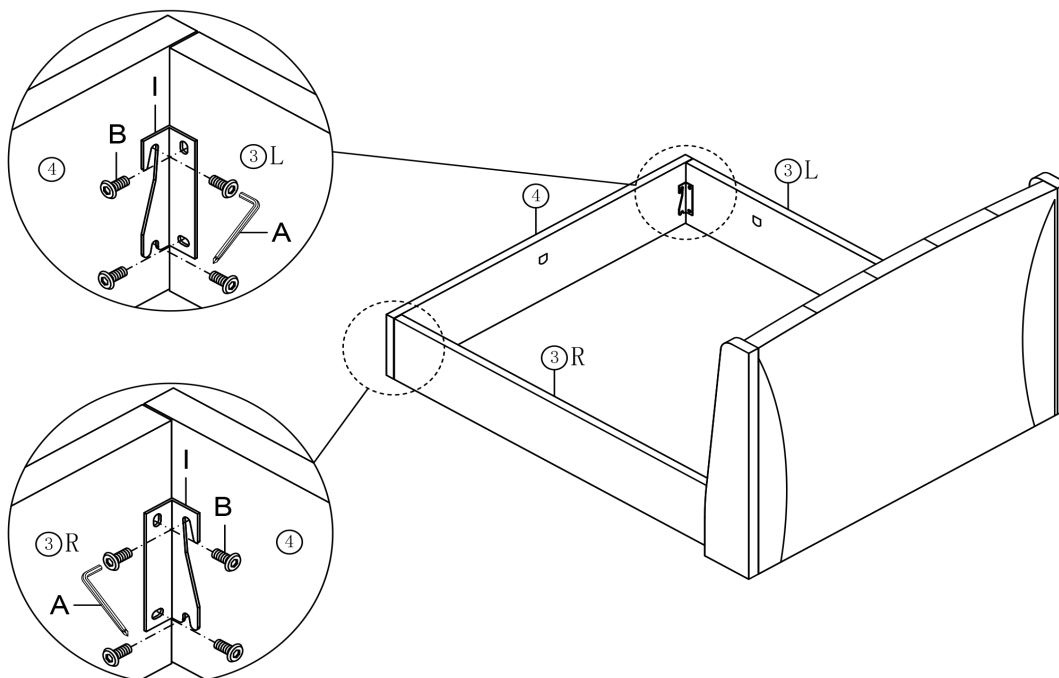
Fix the Side head board ②L & Side head board ②R to the Head board ① with Nuts F and Washer G by using Spanner H.



STEP 3 Fix the Side rail ③ to the Head board ① with Bolts B and Hinge I by using Allen key A.

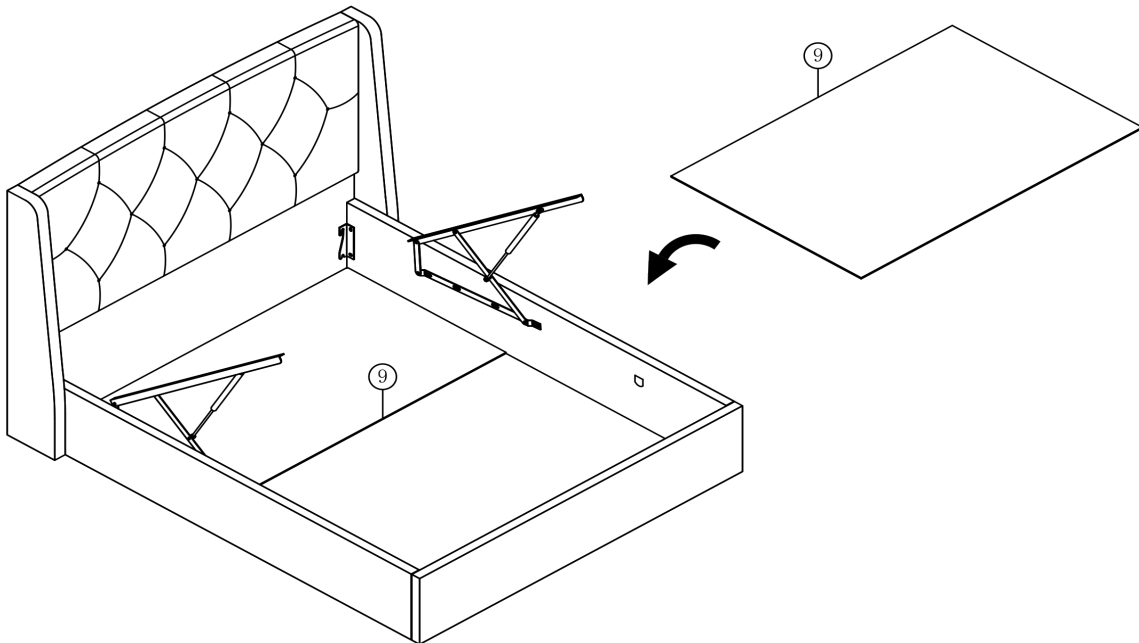


STEP 4 Fix the Foot board ④ to the Side rail ③ with Bolts B and Hinge I by using Allen key A.

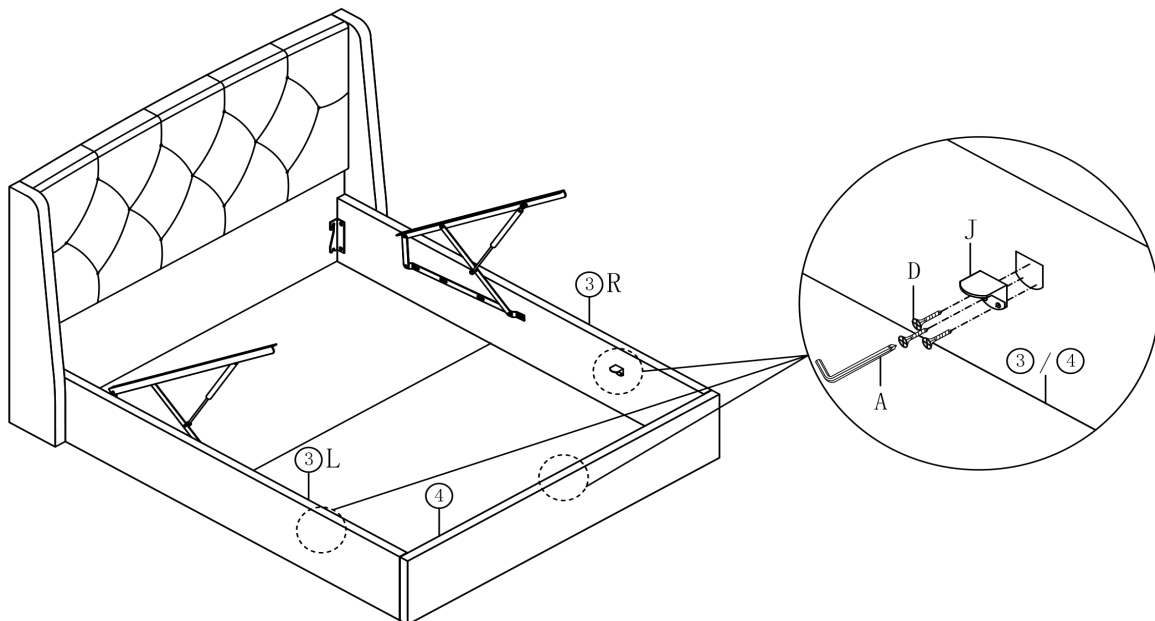


STEP 5

Place the plywood Base Boards ⑨ into the bottom storage area.

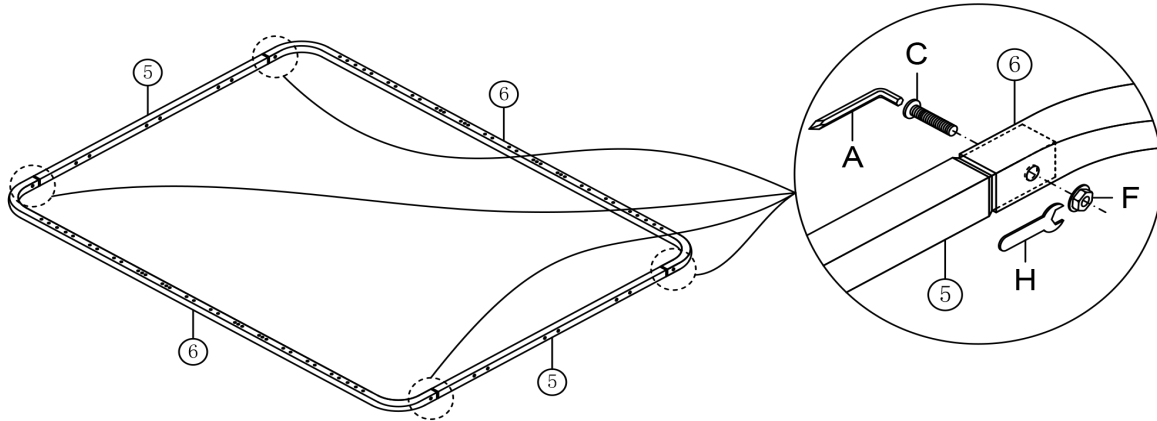
**STEP 6**

Fix the Plastic support J to the Side rail ③ and Foot board ④ with Nails D by using Allen key A.

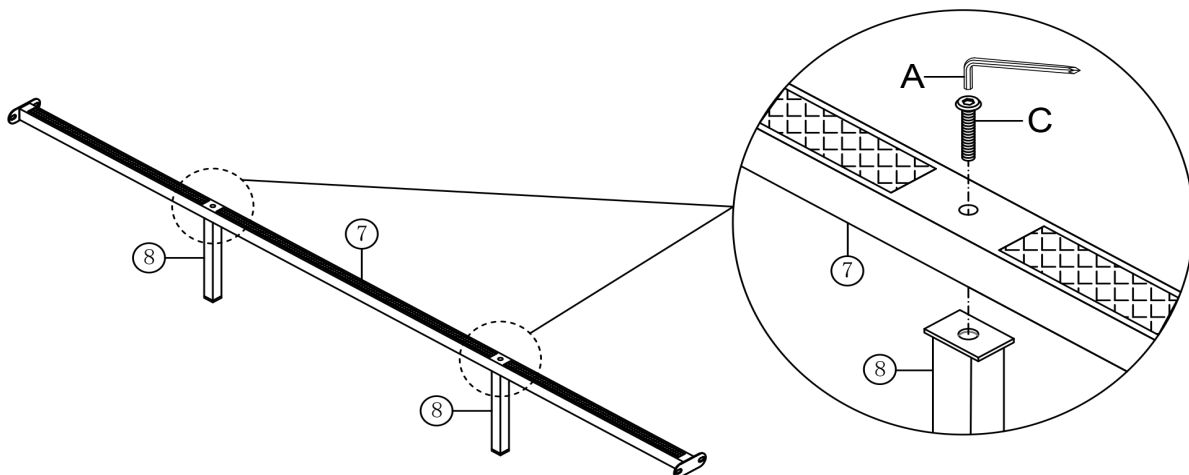


STEP 7

Assemble the Metal frame with Bolts C and Nuts F by using Allen Key A and Spanner H.

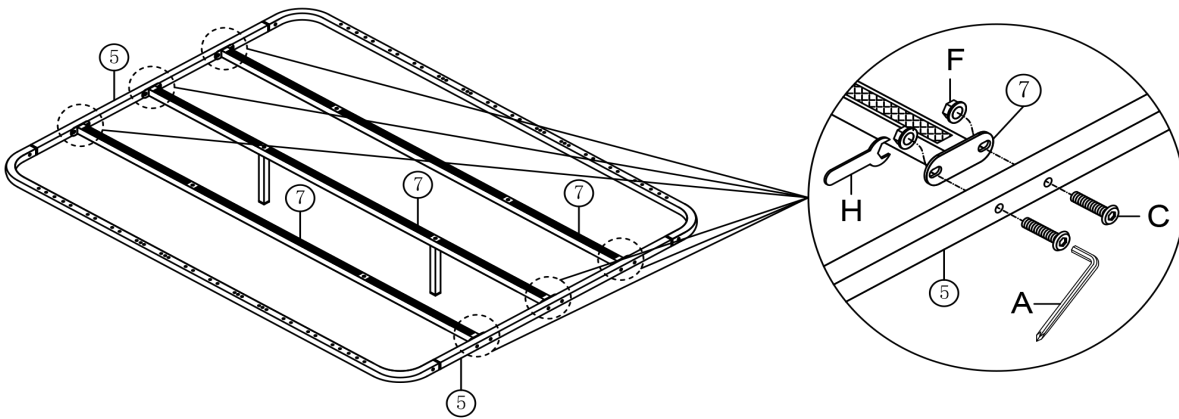
**STEP 8**

Fix the Middle support leg (8) to the Metal frame middle bar (7) with Bolts C by using Allen Key A.

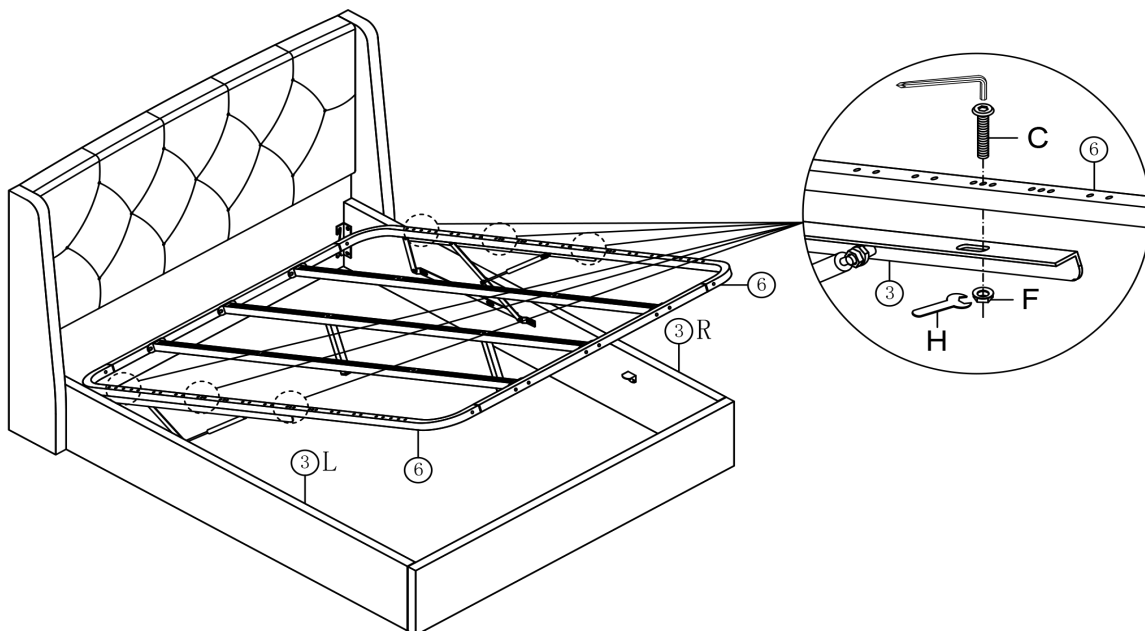


STEP 9

Fix the Metal frame middle bar (7) to the Metal frame cross bar (5) with Bolts C and Nuts F by using Allen key A and Spanner H.

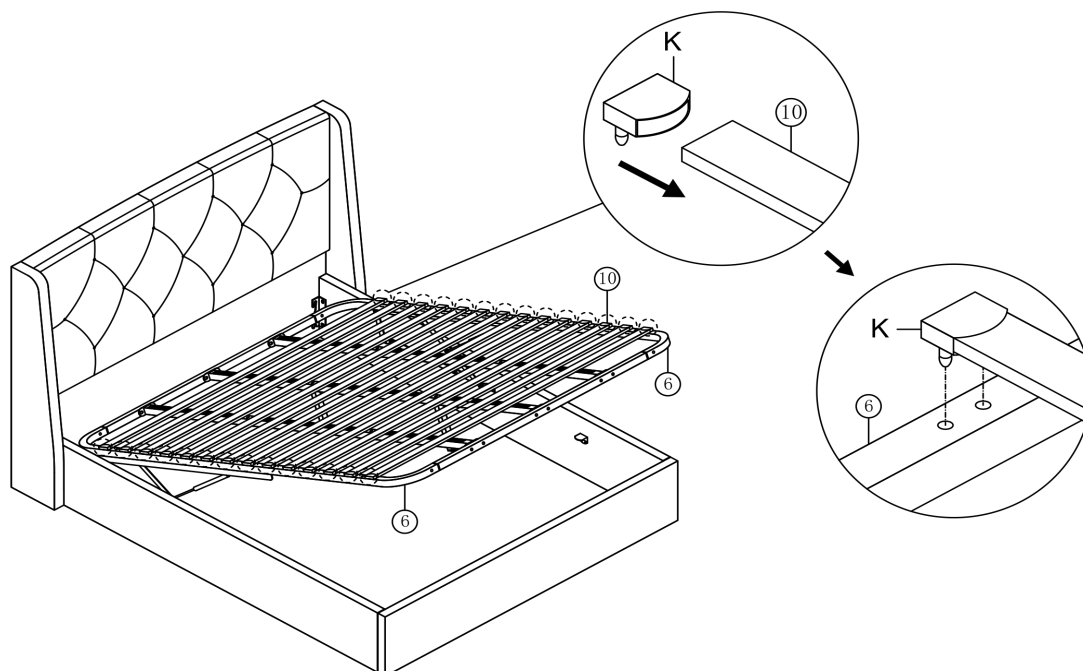
**STEP 10**

Fix the Metal frame to the Gas lift with Bolts C and Nuts F by using Allen Key A and Spanner H.

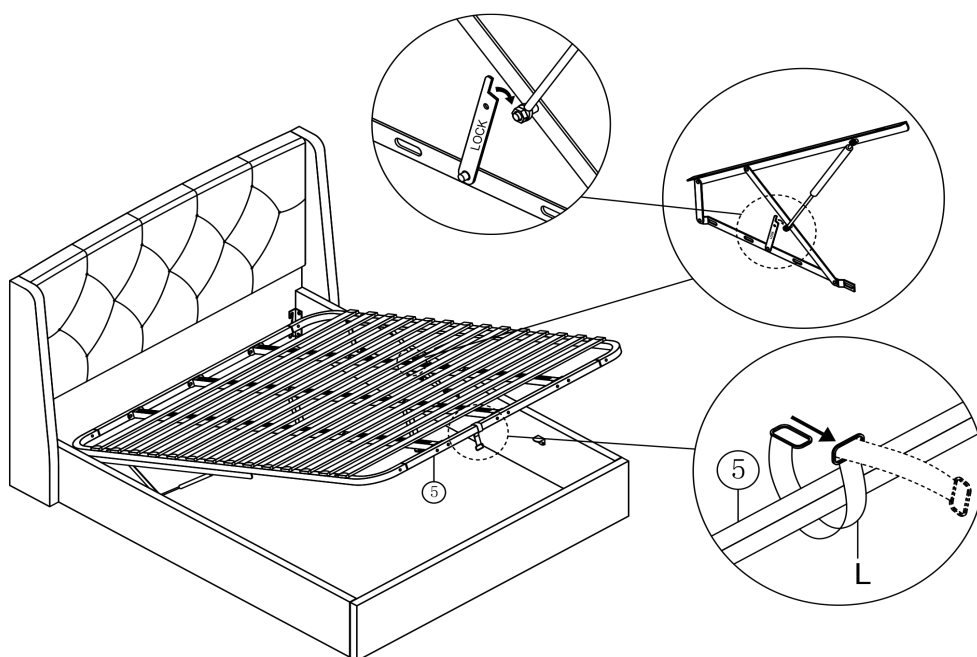


STEP 11

Insert the Flat Slat^⑩ to both ends of End caps K, then assemble the Slats ^⑩ with End caps K into the Metal frame with slightly press down it.

**STEP 12**

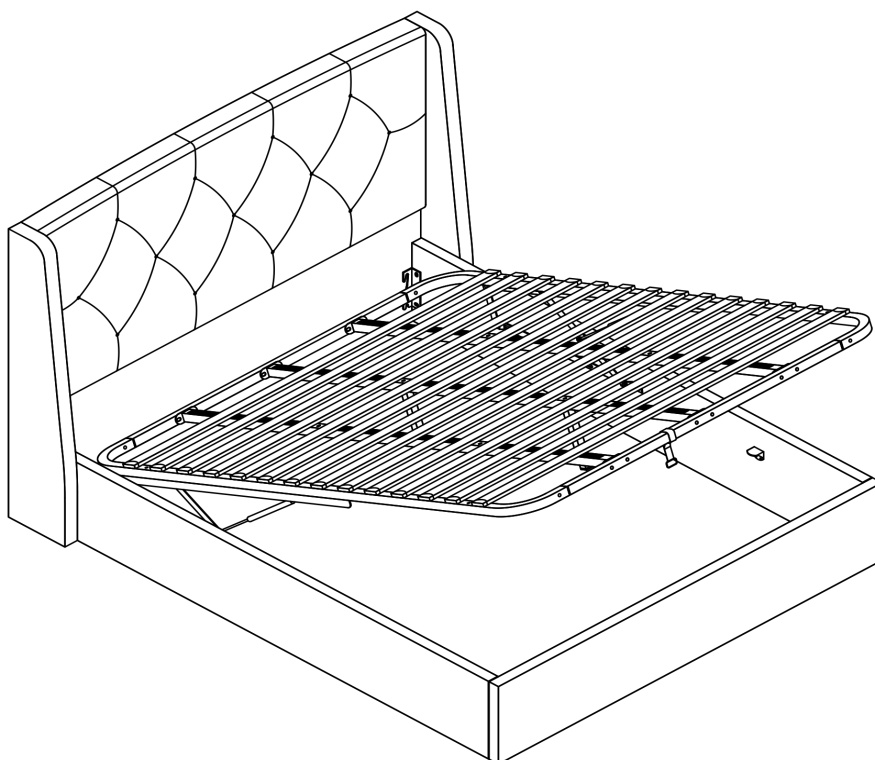
Place the Black Strap L around the end of the metal frame ^⑤ by feeding 1 of the metal sides through the other to create a loop. When you open the metal frame with the strap, you can push the safety locks onto the gas lift, which will make it safer and stop it from accidentally closing. To remove the locks they just push back from its position with a small nudge.



When fully assembled, the gas lift frame will need excess force to push down on

STEP 13

Every thing is finished now,please enjoy your bed.



Caring for your New product

- When assembling your product please ensure that you have checked the contents for all relevant parts.
- When tightening bolts make sure that they are fully tightened but not forced.

BEDS WITH CENTRE LEGS

- PLEASE NOTE THE RECOMMENDED PROCESS FOR ADJUSTING CENTRE LEGS WHEN ASSEMBLING YOUR BED.
- BEFORE PLACING THE MATTRESS ON THE BASE, PLEASE ENSURE THAT THE SUPPORT LEGS ARE NOT QUITE TOUCHING THE FLOOR. WHEN THE BED IS THEN IN USE THE SUPPORT LEGS WILL SIT FIRMLY ON THE SOLID SURFACE.
- PLEASE ENSURE THAT THE LEGS ARE VERTICAL.
- **DUE TO THE NATURE OF LAMINATE FLOORING WE RECOMMEND THAT YOU PLACE A SMALL PIECE OF NON SLIP MATERIAL UNDER THE LEGS WHICH WILL GIVE YOU THE FLEXIBILITY THAT THE ADJUSTERS NEED.**
- WHEN MOVING THE BED IT IS ESSENTIAL THAT IT IS **LIFTED** INTO THE NEW POSITION. **NEVER DRAG** THE BED AS THIS WILL MOVE THE LEGS FROM THE VERTICAL POSITION THUS WEAKENING THE SUPPORT OF THE CENTRE RAIL.
- ADHERING TO THE RECOMMENDED PROCESS SHOULD ENSURE THAT YOUR BED GIVES YOU YEARS OF TROUBLEFREE SERVICE.
- It is advisable to use approved cleaning products when cleaning our products as certain chemical based cleaners could have an adverse effect on the bed finish.