

## ASSEMBLY INSTRUCTIONS


Minimum No.  
Of People  
Recommended  
To Assemble  
This Product :

2

Approximate  
Assembly  
Time :

30

MINUTES

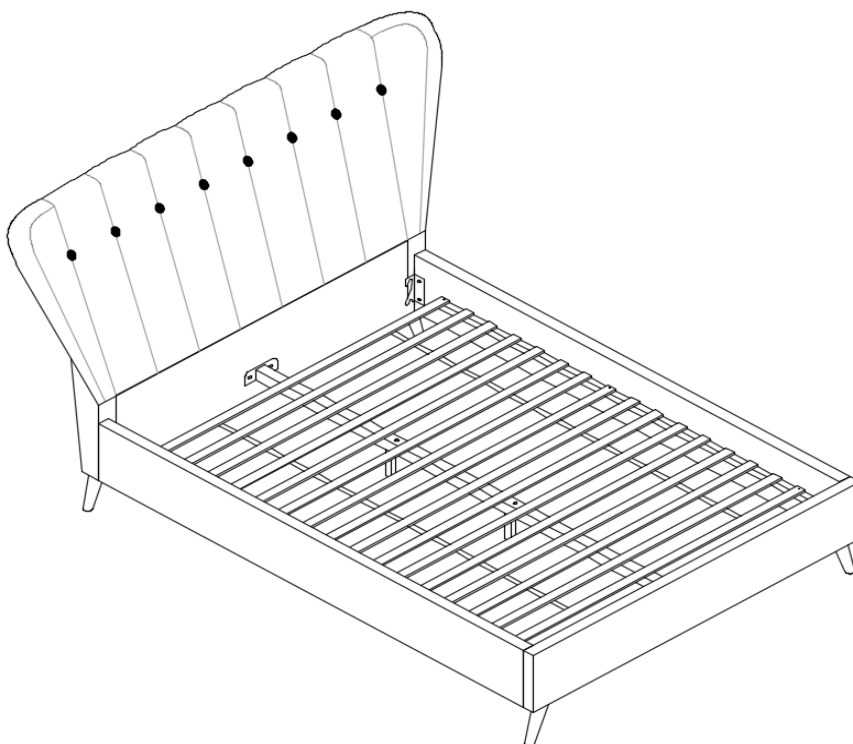

## BEFORE YOU START, HERE IS SOME HELPFUL ADVICE :



Do not use Power Tools

1. We suggest you spend a short time reading through this leaflet and then follow the simple step by step instructions.
2. If you follow the instructions carefully, the end result should be worth the effort.
3. Do not discard any of the packaging until you have checked that you have all the parts and the pack of fittings is correct and you are happy with the product.
4. To ensure an easier assembly, we strongly advise that all fittings are only finger-tightened during initial assembly phase. Only upon completion of the assembly should all fixing points be fully tightened.
5. We recommend a periodic check on all fixing points to make sure they remain fully tightened.
6. Keep any fittings out of children's reach.

## PARTS AND HARDWARE LISTS

1

x1pc  
Headboard

2





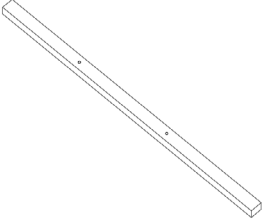
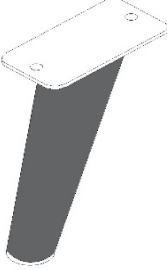
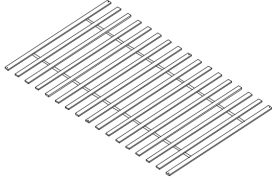

x1pc  
Footboard




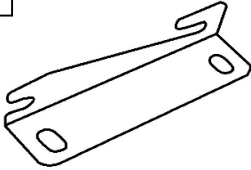

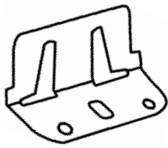



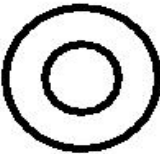

3

x2pcs  
Siderail

4

x2pcs  
Support Leg

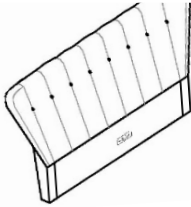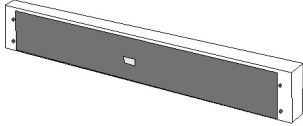			
<b>5</b> x1pc Central Rail	<b>6</b> x4pcs Wooden Leg	<b>7</b> x17pcs Webbed Flat Slat	<b>8</b> x1pc Across Bar
			


<b>A</b> x1pc 	<b>B</b> x24pcs  M8x25mm	<b>C</b> x2pcs  M8x45mm
<b>D</b> x4pcs 	<b>E</b> x2pcs  M6x20mm	<b>F</b> x2pcs 
<b>G</b> x1pc smaller 	<b>H</b> x6pcs  M4x25mm	<b>I</b> x2pcs  M6x60mm
<b>J</b> x2pcs 	<b>K</b> x2pcs 	


## STEP 1

Fix the *Wooden Legs* (6) to the bottom of the *Headboard* (1) and *Footboard* (2) with Screw(B) and tighten with the Allen Key(A).




Do not use Power Tools

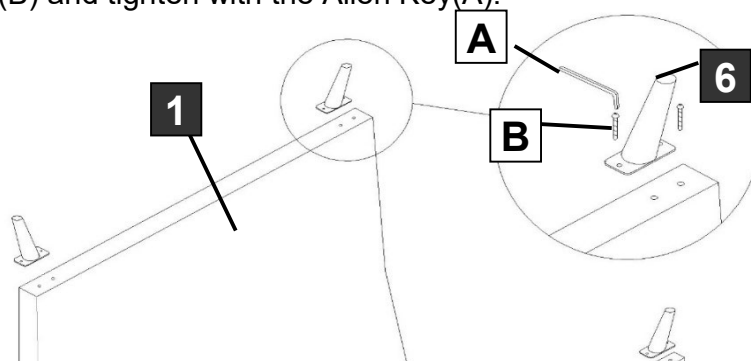

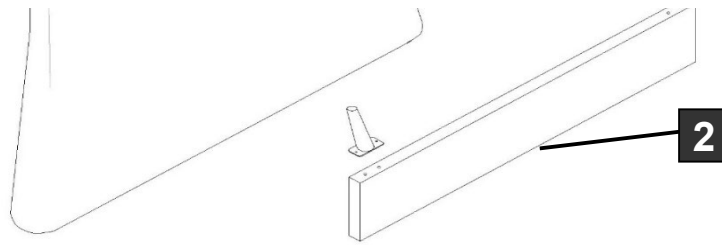


## STEP 2

Attach the Bracket (D) with Screw (B) and slightly tighten with Allen Key (A). Mount both Siderails (3) to Headboard (1) and Footboard (2) by pushing the Bracket (D) down to fit. Do not fully tighten the screws at this moment.

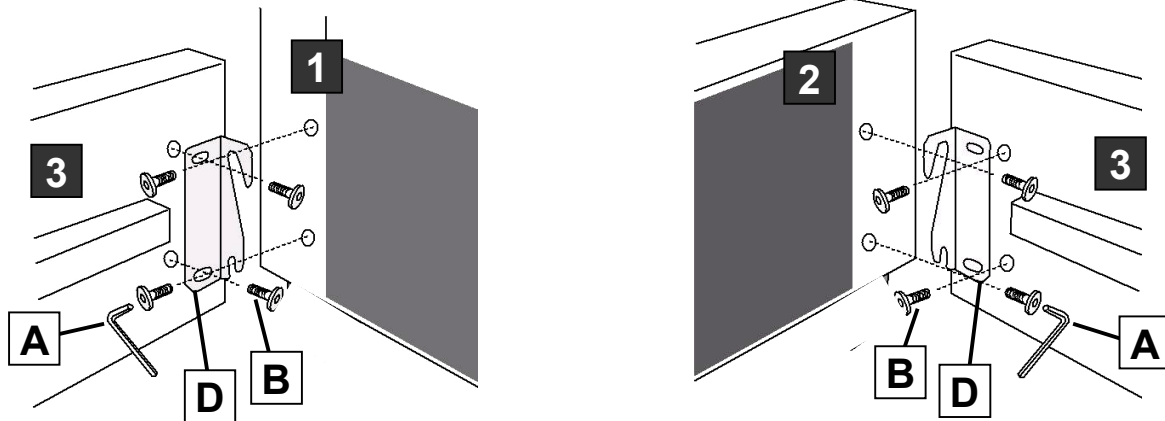


## STEP 3

Attach the Support Legs (4) to the Central Rail (5) with Screw (C) and tighten with the Allen Key (A).

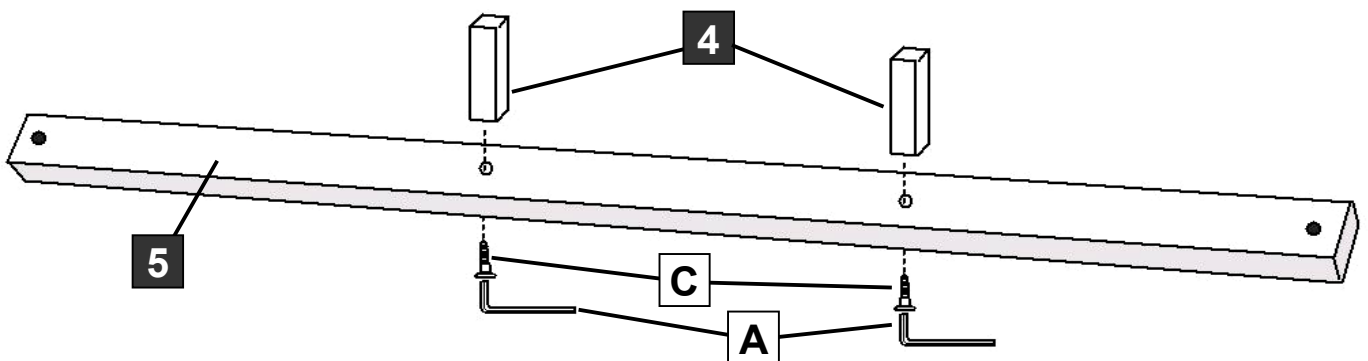


## STEP 4

Attach the Central Rail (5) to the Headboard (1) and Footboard (2) with Screw (E) and Bracket (F)

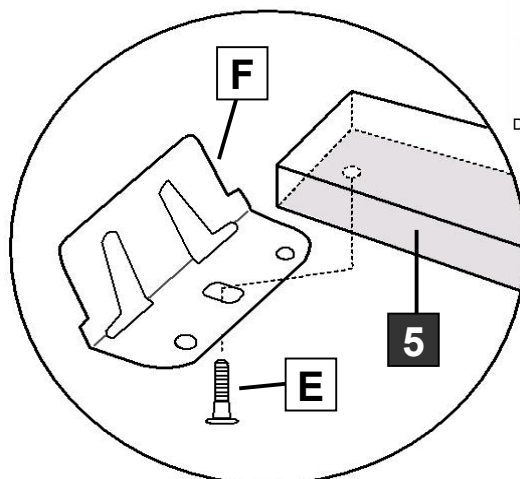


Do not use Power Tools

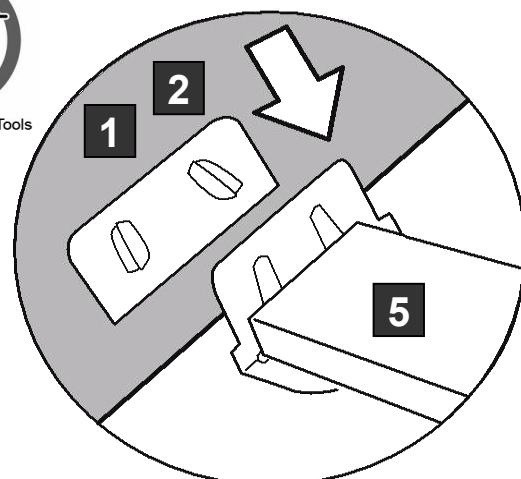



**STEP 5**

Attach *Across Bar (8)* to the bottom of the *Siderail shelf (3)* using *Screw (I)*, *Washer (J)* and *Hex Nut (K)* with the *smaller Allen Key (G)*.

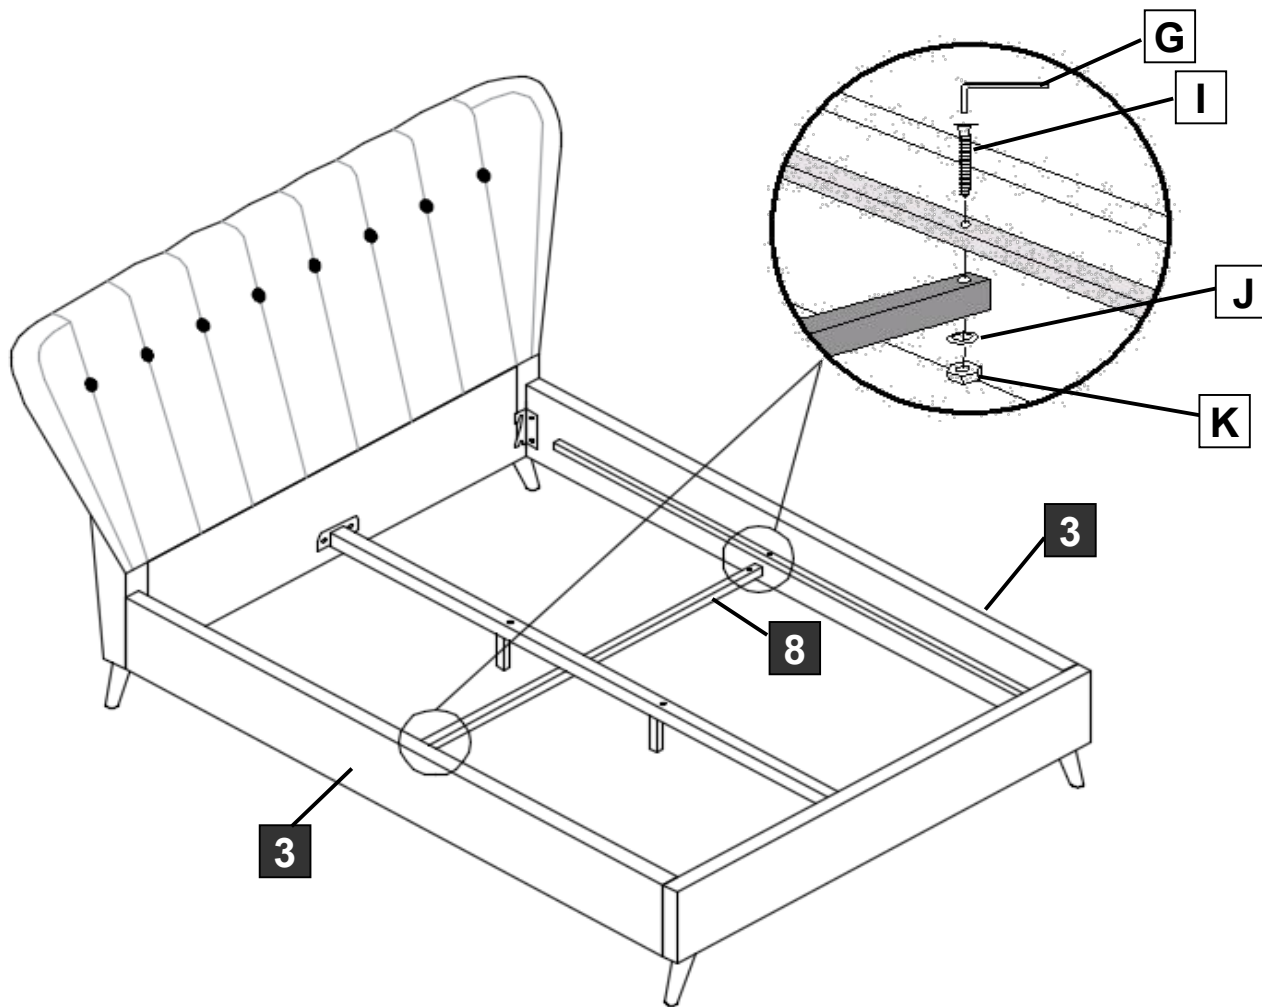**STEP 6**

Laying and spread the *Webbed Flat Slats(7)* on both *Siderail shelf(3)* .Install three pieces *Tapping Screws(H)* on the front,middle and back side slats of each *Siderail shelf(3)*.Then fix the *Tapping Screw(H)* into the *Webbed Flat Slats(7)* and *Siderail shelf(3)* with *Allen Key(A)*.

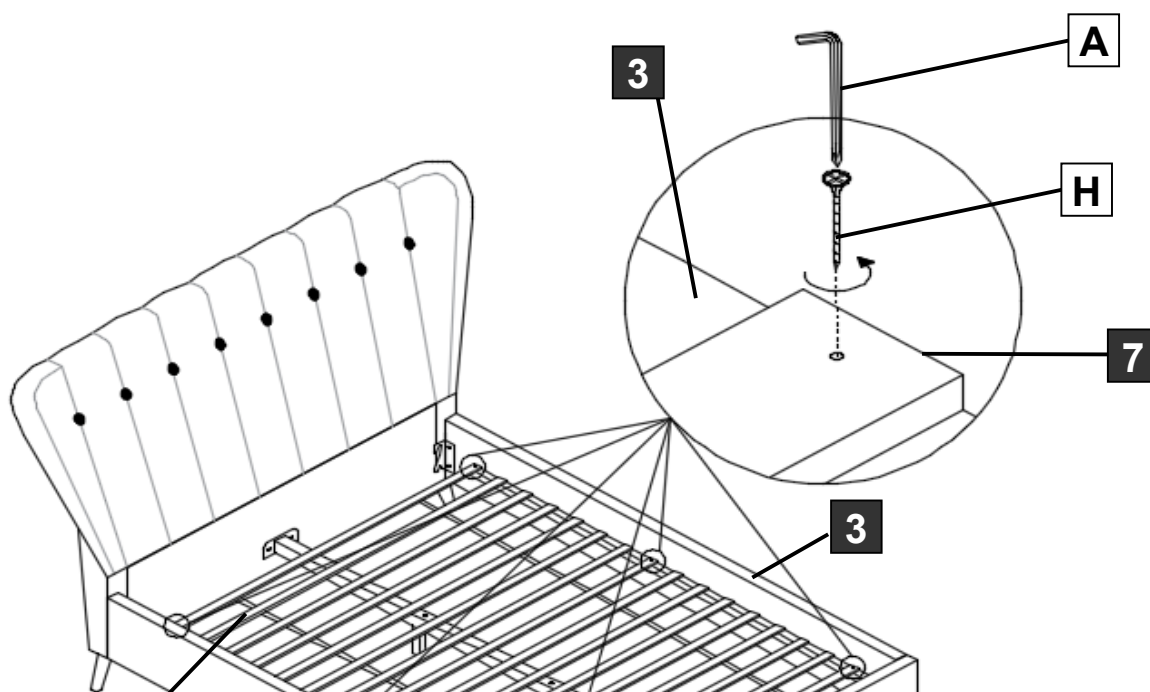

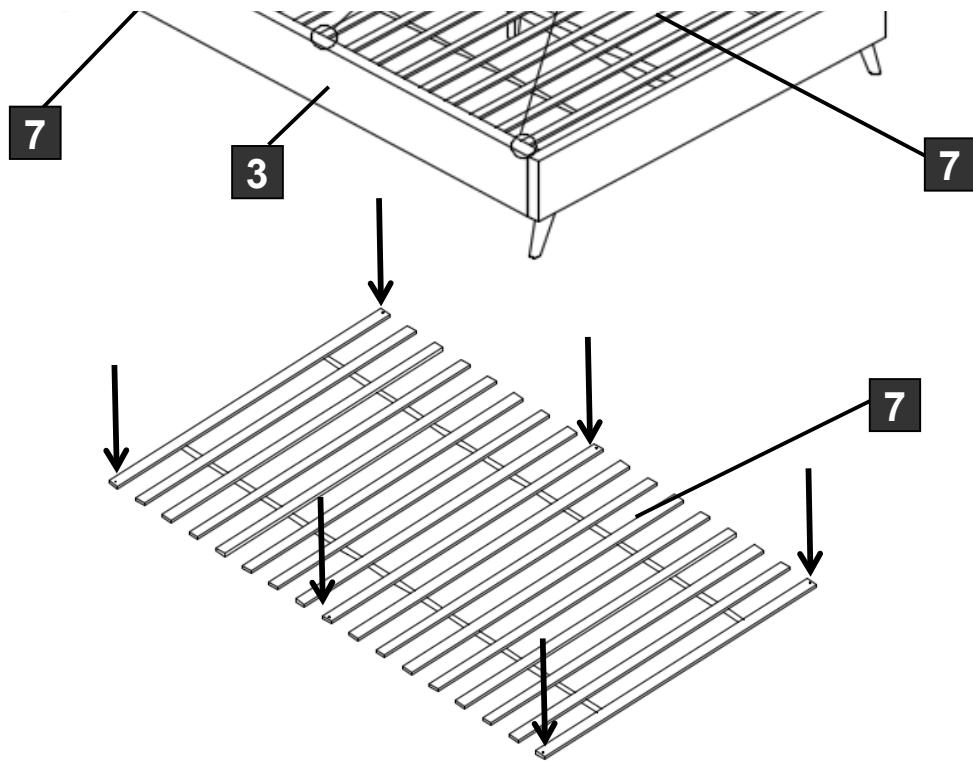

## PROBLEMS?

SHOULD YOU ENCOUNTER ANY DIFFICULTY WITH THE  
ASSEMBLY OF YOUR BED, PLEASE DO NOT TROUBLE  
YOUR RETAILER BUT

CALL or E-MAIL our

**CUSTOMER SERVICES DEPARTMENT**

BETWEEN THE HOURS OF

9.00am to 5.00pm MONDAY to THURSDAY

9.00am to 4.00pm FRIDAY

Tel : 01455 850 150

Email: [customerservice@limelightbeds.co.uk](mailto:customerservice@limelightbeds.co.uk)

Please have the following information ready for our staff

- Product Name

- Part Number

## CARING FOR YOUR NEW PRODUCT

- **PLEASE NOTE:** GOODS THAT NEED TO BE RETURNED SHOULD BE SENT BACK IN ITS ORIGINAL PACKAGING.
- When assembling your bed, please ensure that you have checked the contents for all relevant parts.
- When tightening bolts, do make sure that they are fully tightened but not forced.
- When moving your fully assembled bed, you must first remove the mattress and lift the frame into position; taking care when lifting and always have two people handling the bed. PLEASE DO NOT DRAG THE BED as this will cause damage to the central support legs and rail. Central legs MUST be in a vertical position at all times.
- Due to the nature of laminate flooring, we recommend that you place non-slip material under the central support legs. This will stop the legs from sliding on laminate/wooden floors and will prevent the bed from collapsing.
- It is advisable to use approved cleaning products when cleaning the furniture and bed frame as certain chemical-based cleaners could have an adverse effect on the bed's finish.
- All of our beds are produced to the highest standards and are packed to avoid damage in transit. Should you find that your new bed does not meet your satisfaction, please contact our Customer

Services Department at 01455 850 150.