


MOORING 6 DRAWER DRESSER

Made Exclusively for

Harvey Norman[®]

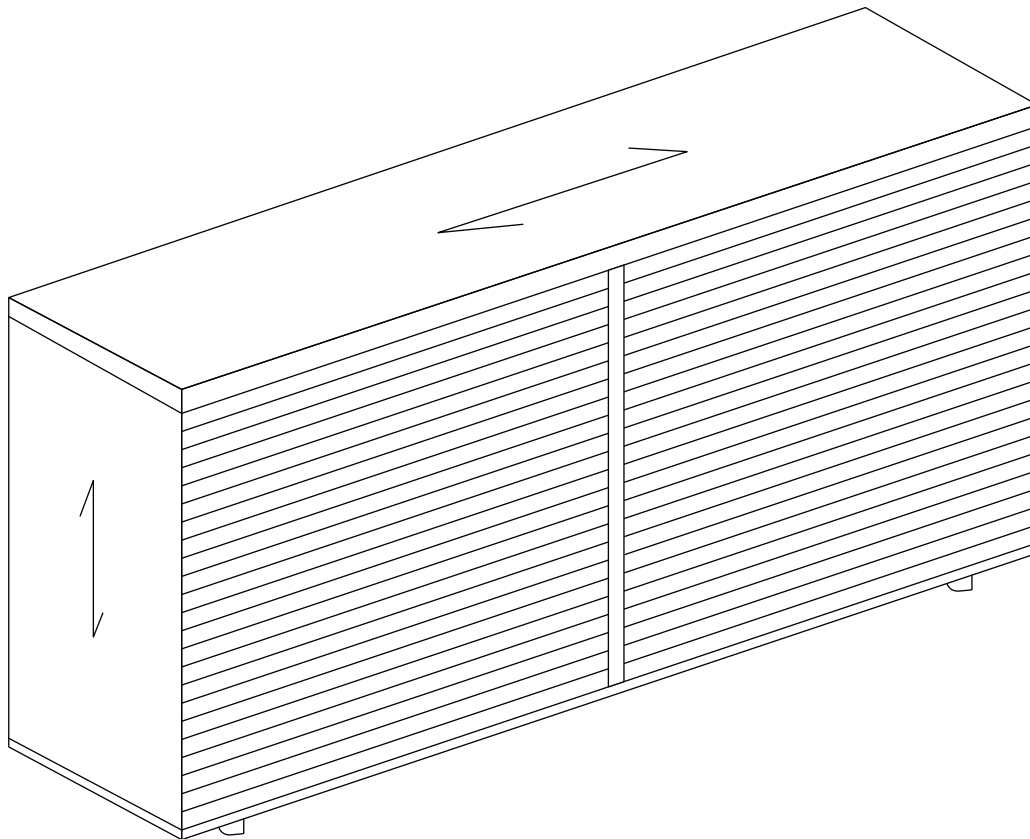

ASSEMBLY MANUAL


MODEL: LV117.B61

MOORING 6 DRAWER DRESSER

Made Exclusively for **Harvey Norman**


LIST OF AVAILABLE **ASSEMBLY PARTS**

1

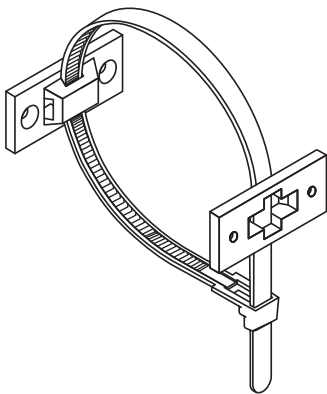


Anti-tip-kit
x 02

2

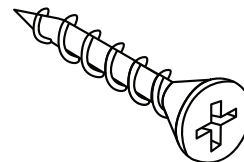


Screw M4x20
x 04

3

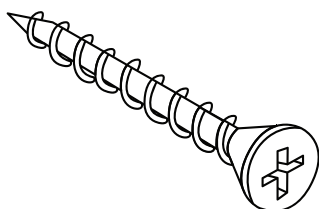

Screw M4x35
x 04

4

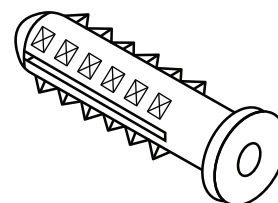

Wall plug
x 04

MOORING 6 DRAWER DRESSER

Made Exclusively for **Harvey Norman**

REQUIRED TOOLS




30 MINUTES



TWO PEOPLE



SCREWDRIVER

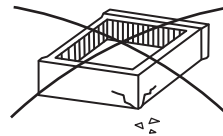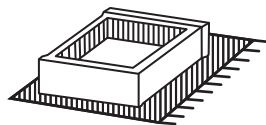

ASSEMBLY TIPS

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior start of assembly.
3. Please follow attached instruction in the same sequence as numbered to assure fast and easy assembly




WARNING !

- Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- This product is for home use only and not intended for commercial establishments.
- Two persons are required for assembly.
- Approximate assembly time : 1/2 hours.
- Component parts and fittings contained in the box.
Please sort out all parts before you begin to assemble the item. This is to make sure you always use the correct part .
- It is **STRONGLY RECOMMENDED** that you **ANCHOR** this product .
Toppling furniture can cause serious injuries and death.
This product has not been fitted with an anchor strap.
To prevent your furniture from tipping forward it is strongly recommended that you securely attach this product to a wall or other solid surface, using the anchor straps provided and appropriate fixings.


MOORING 6 DRAWER DRESSER

Made Exclusively for **Harvey Norman**

STEP 1

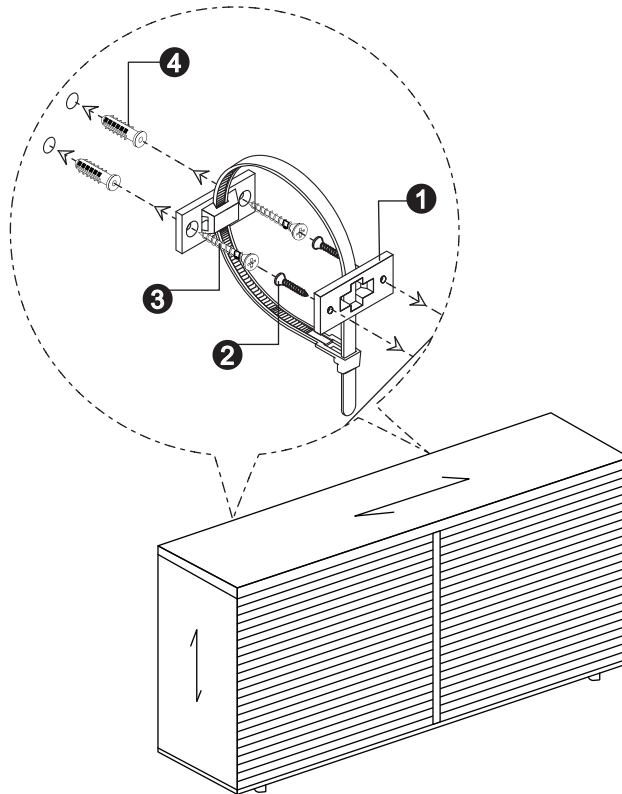



Completed Assembly

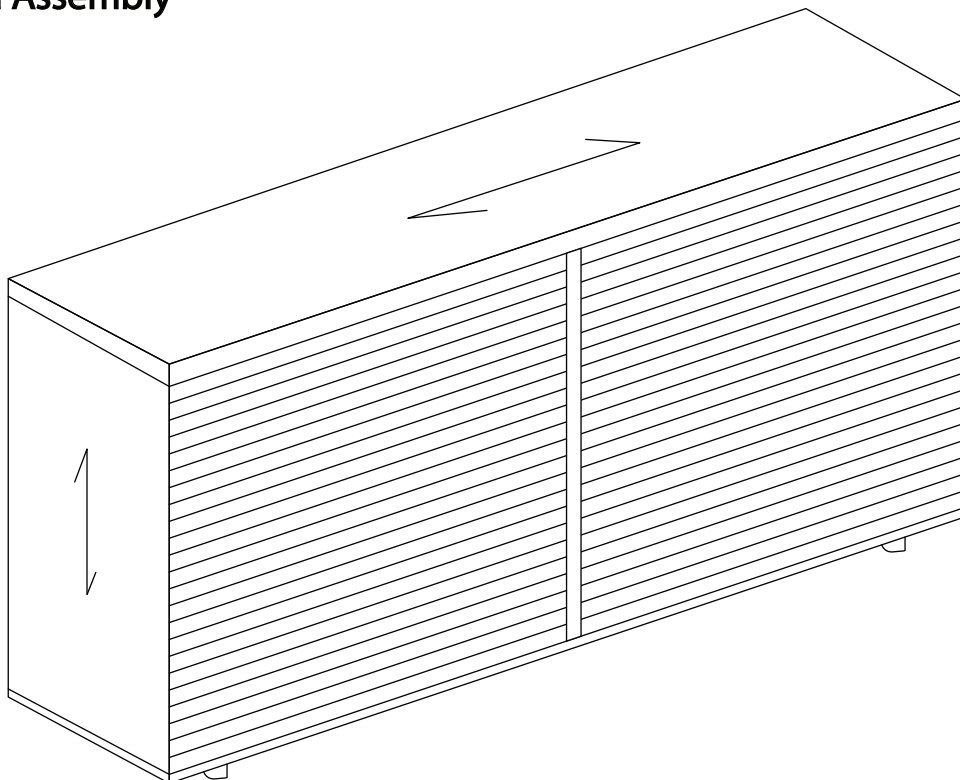

MOORING 6 DRAWER DRESSER

Made Exclusively for **Harvey Norman**

Final Step

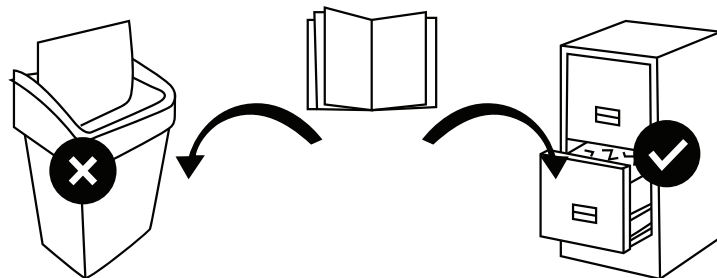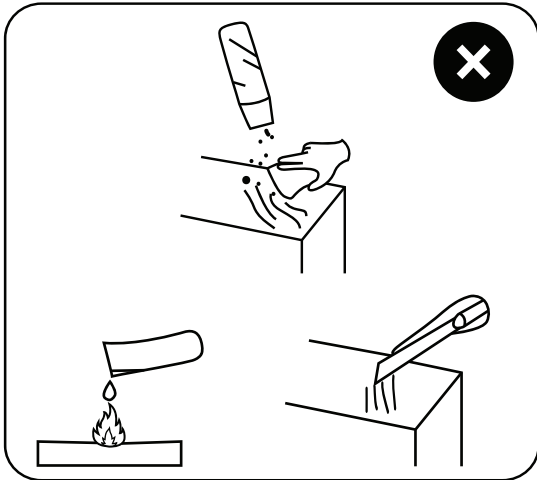

FOR TIPS ON HOW TO CARE FOR YOUR PIECE

Please refer to our Care & Maintenance Guide in stores and online