
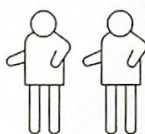


TR-47A

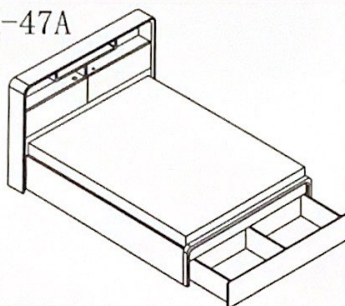

Approximately 40min

Assembly Instruction

Supply By: T & R Furniture

Notes: Parts & Labour One Year Warranty

Any Problem Please Call

(02) 89372394 (03) 93570078

(07) 38028999 (08) 94186868

K=4	B2=4	B20=2	B5=8 (25mm long)
A=30	H19=8	L=20	B3=8 (15mm long)
S=1	E4=5	B7=6 (40mm long)	
B6=4 (75mm long)	B4=4 (80mm long)		

Please check contents and read instructions before assembly.

Please use a soft mat to avoid damaging during assembly.

Please find the adaptor inside of the bed head storage.

Bedframe (Double, Queen, King) with Drawer Base
 Bedframe (Double, Queen, King) with Gaslift Base
 Bedframe (King Single) with Drawer Base
 Bedframe (King Single) with Gaslift Base


https://youtu.be/Lwyrig4_F00

<https://youtu.be/3KhDi3FU3-c>

https://youtu.be/ISiSu_9TGog


<https://youtu.be/1UAXFkNz0x8>

A=2

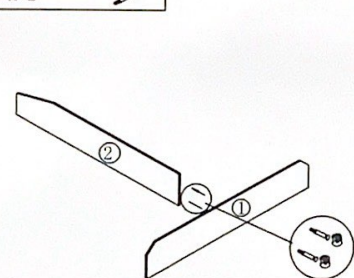

1

2

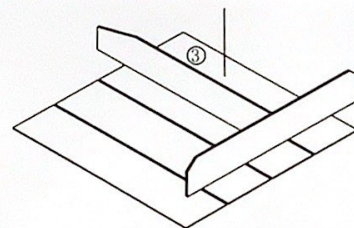


S=1

A=4


K=2

B6=4 (75mm long)

3

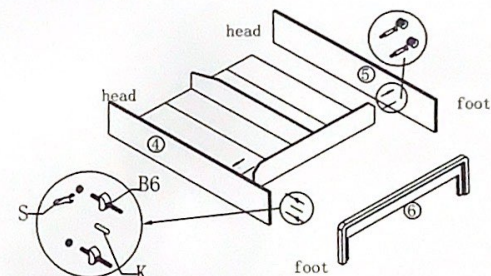

4

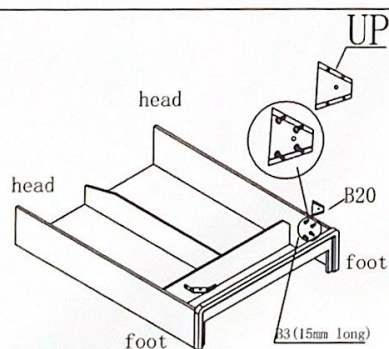


Warning: must use shortest screw

B20=2

B3=8 (15mm long)

5

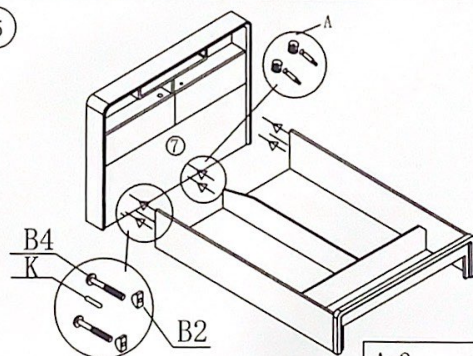


A=2

K=2

B2=4

B4=4 (80mm long)


6

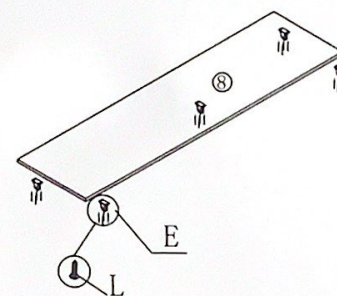


L=20

E=5


TR-47A

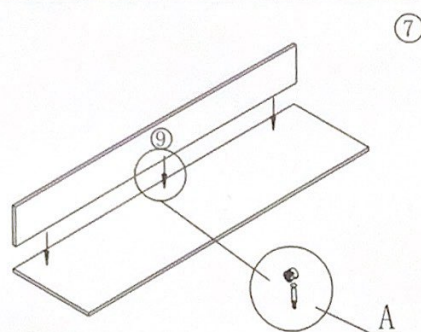


A=3

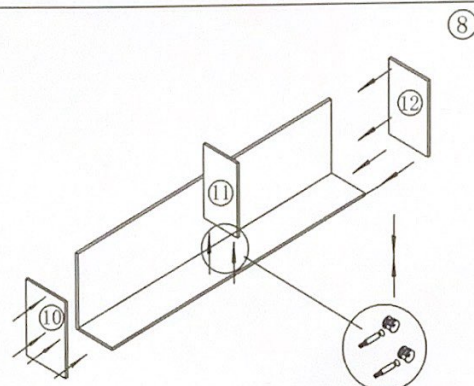

A=10

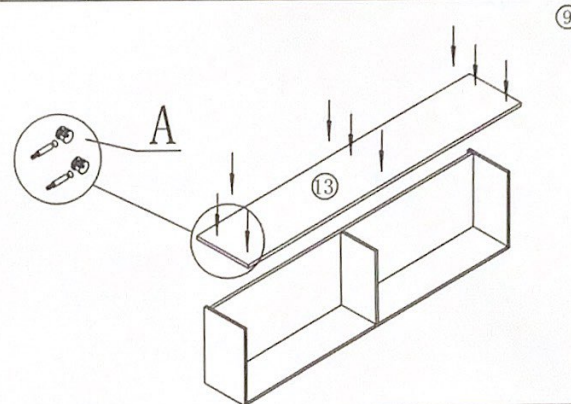

A=9

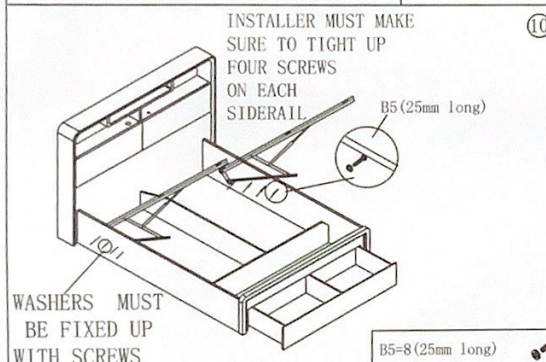

INSTALLER MUST MAKE SURE TO TIGHT UP FOUR SCREWS ON EACH SIDERAIL

B5 (25mm long)


WASHERS MUST BE FIXED UP WITH SCREWS

B5=8 (25mm long)

10

11


Please do not tighten the screws too much, as there should be room for the lifting arm to move up and down

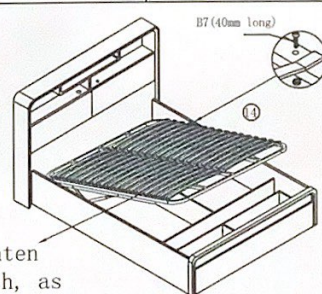

B7 (40mm long)

11

12

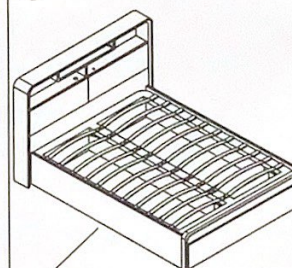

Attention :Adaptor is in bed head storage.



※ Attention
Only use one usb charge if you turn on the light. Otherwise may be cause light flashing.

Tips for assembling posture slat on a gaslift bed.

Ensure the bed frame has been assembled square. Place the slat on the gaslift brackets and attach it with the (B7x6) screws and nuts. At this stage do NOT fully tighten the nuts so that the slat unit can still be adjusted on the bracket if necessary.

Lower the slat unit all the way down to the level position, ensuring it doesn't touch the bed frame. Carefully push it down vertically and firmly plus a bit force towards the bed head, (as you won't have the mattress on it at this stage, so you need to push hard). Adjust the position of the slat unit to ensure even gaps around all four sides. Again to ensure it doesn't touch the bed frame.

Now fully tighten the nuts with the slat unit while still in the level position.

N. B.

In posture slats system package, you may find a metal bar, Don't need this part for this Model.