



Assembly Instructions

BED 8010 + 15 ROLLER SLAT
1400 X 1930


Part List		QTY	Hardware		QTY
1	Headboard Panel	1	A	Allen Key M4	1
2	Footboard Panel	1	B	JCBC Screw 70mm (Black)	8
3	Left Side Rail Panel	1	C	JCBC Screw 40mm	5
4	Right Side Rail Panel	1	D	Barrel Nut	8
5	Slats	15	E	CSK M4 x 32 mm	30
6	Center Rails	1	F	Adjuster	2
7	Support Legs	2	G	CSK M3.5 x 16 mm	10
			H	U Bracket	2




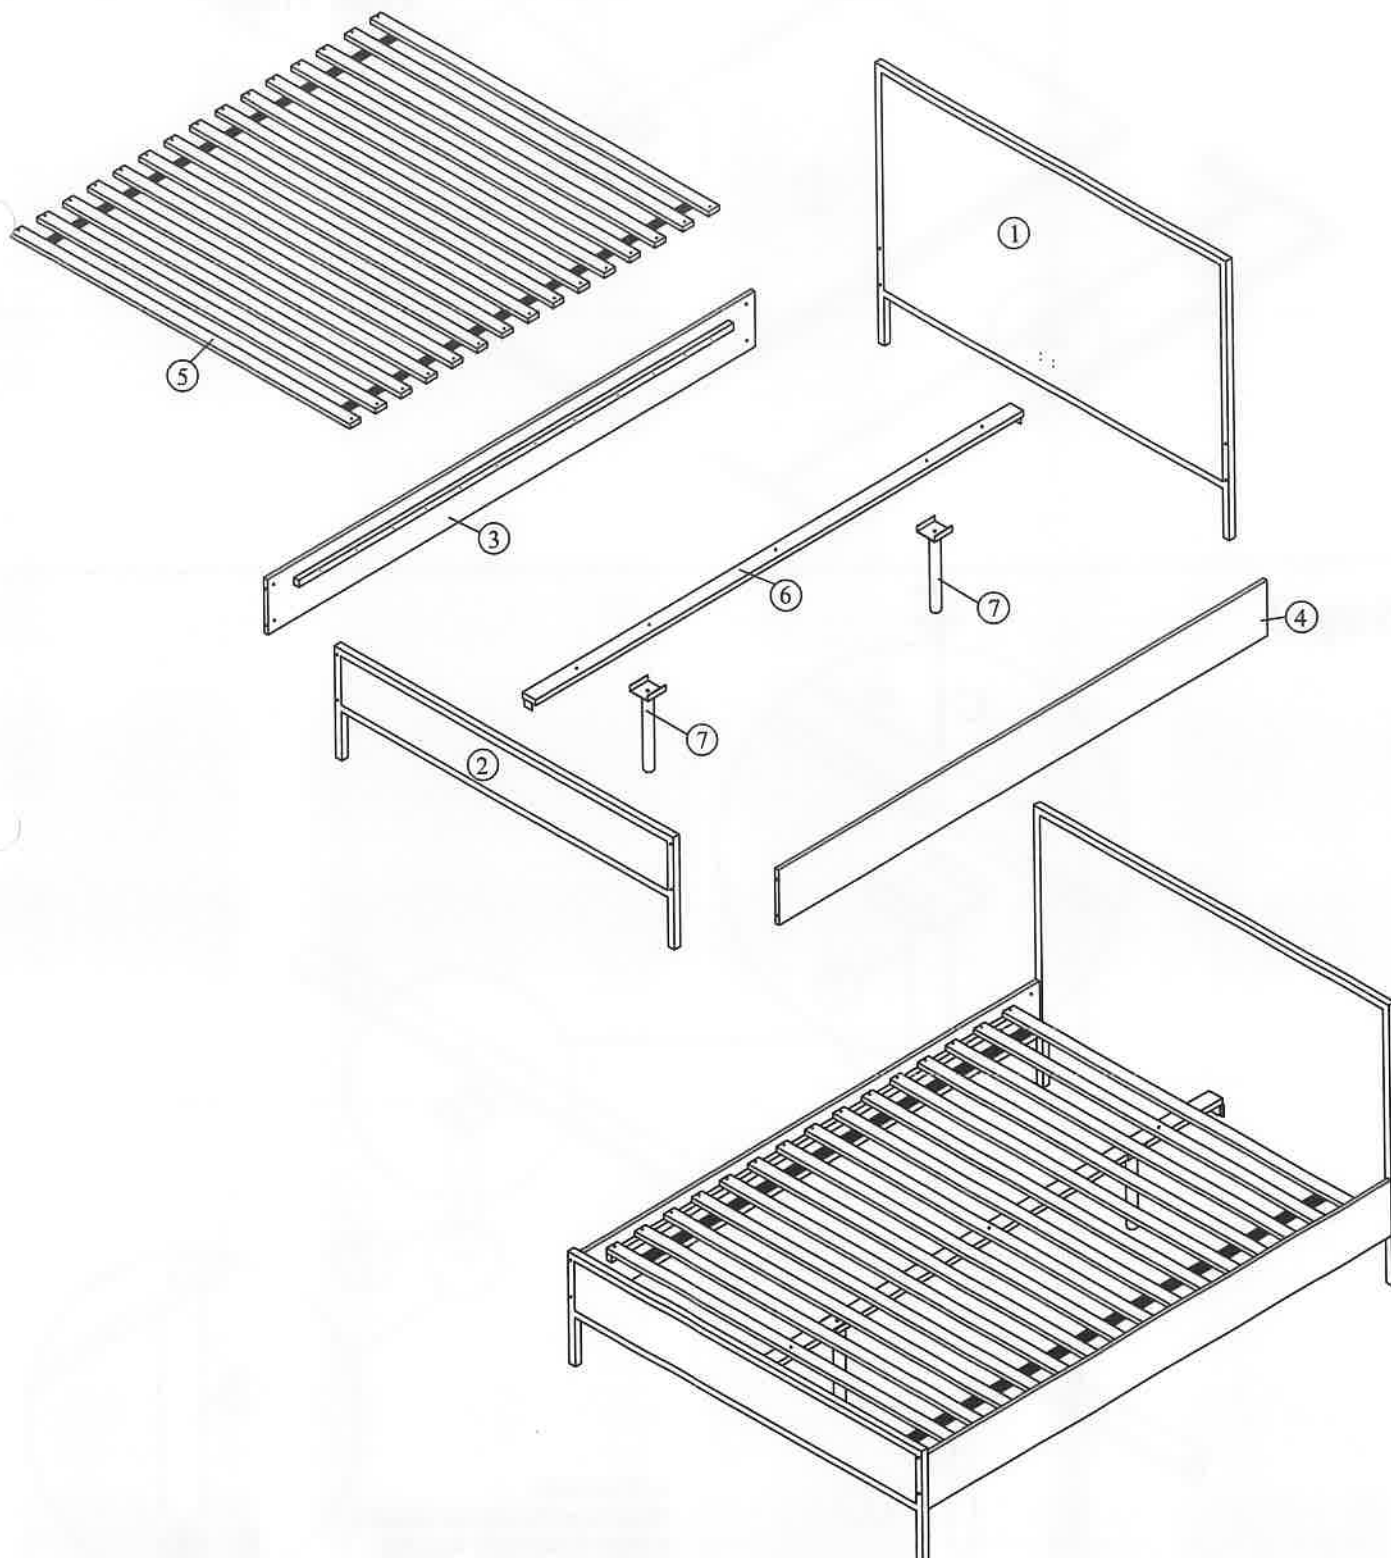


Step 1

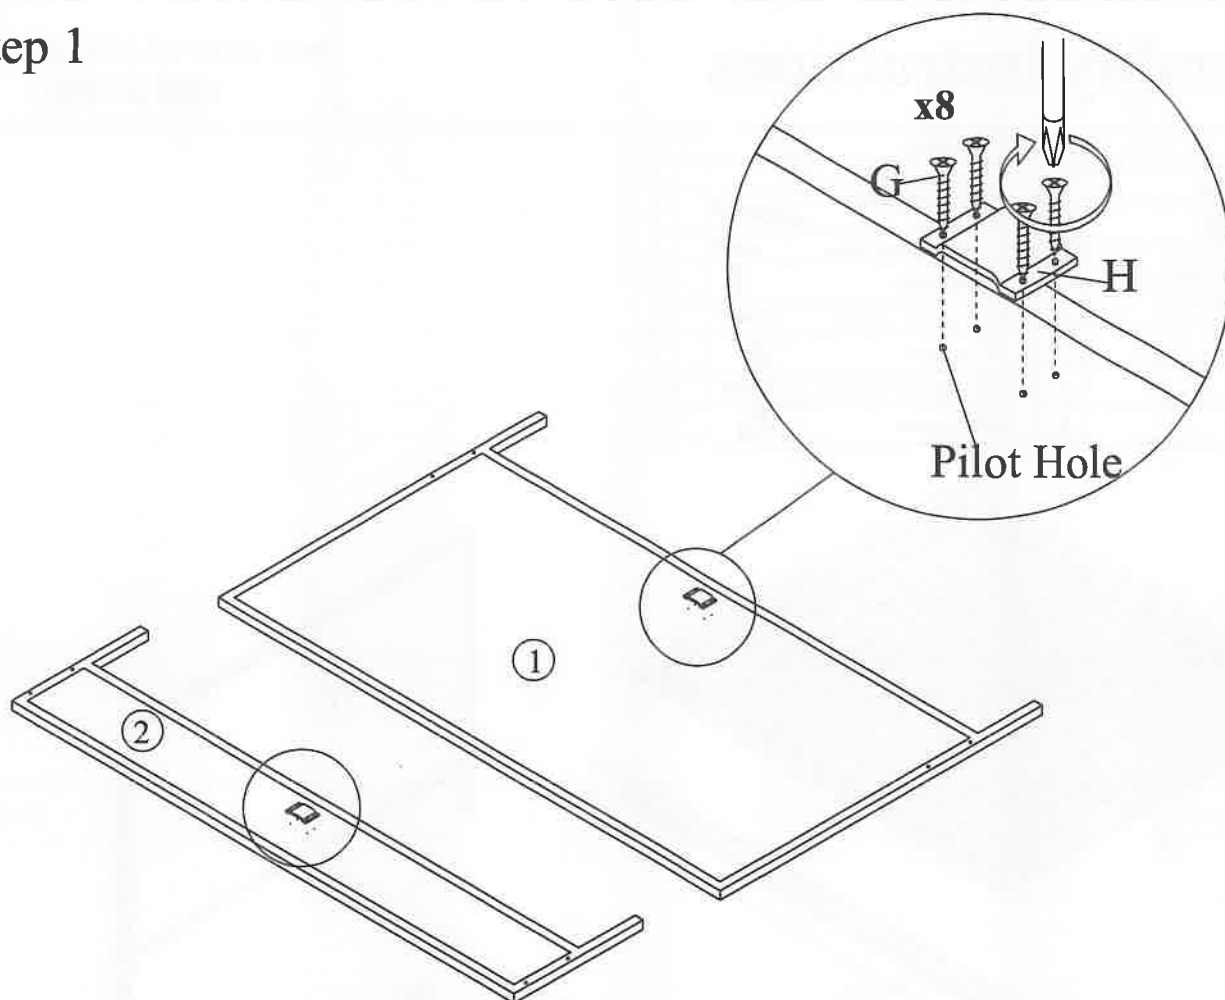


Step 2

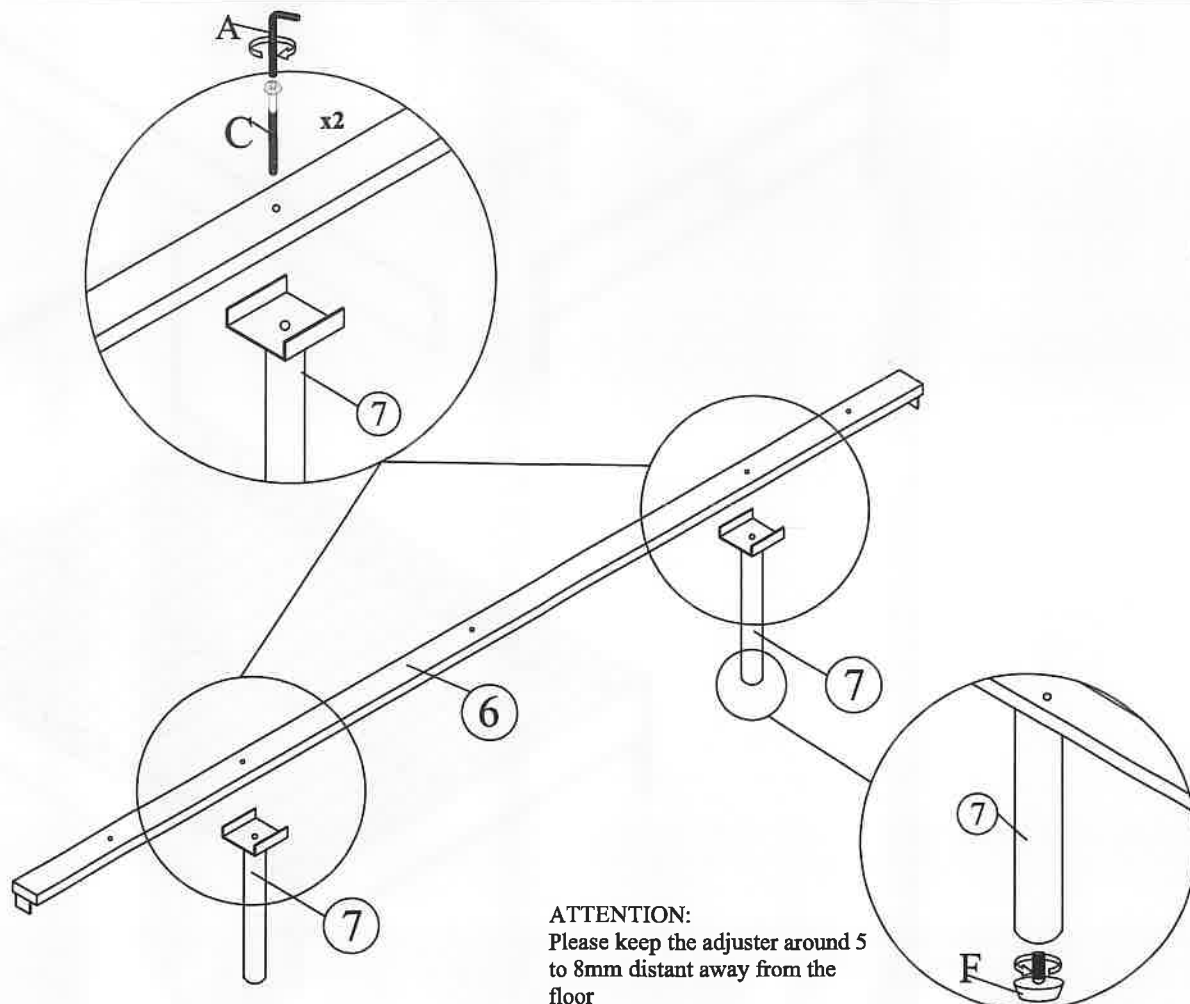

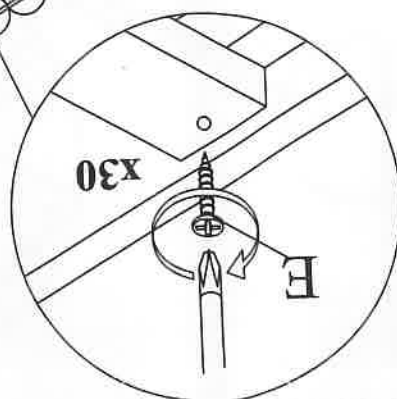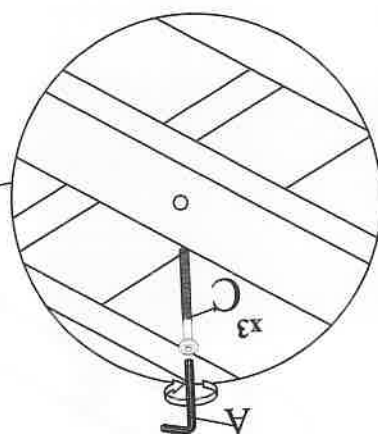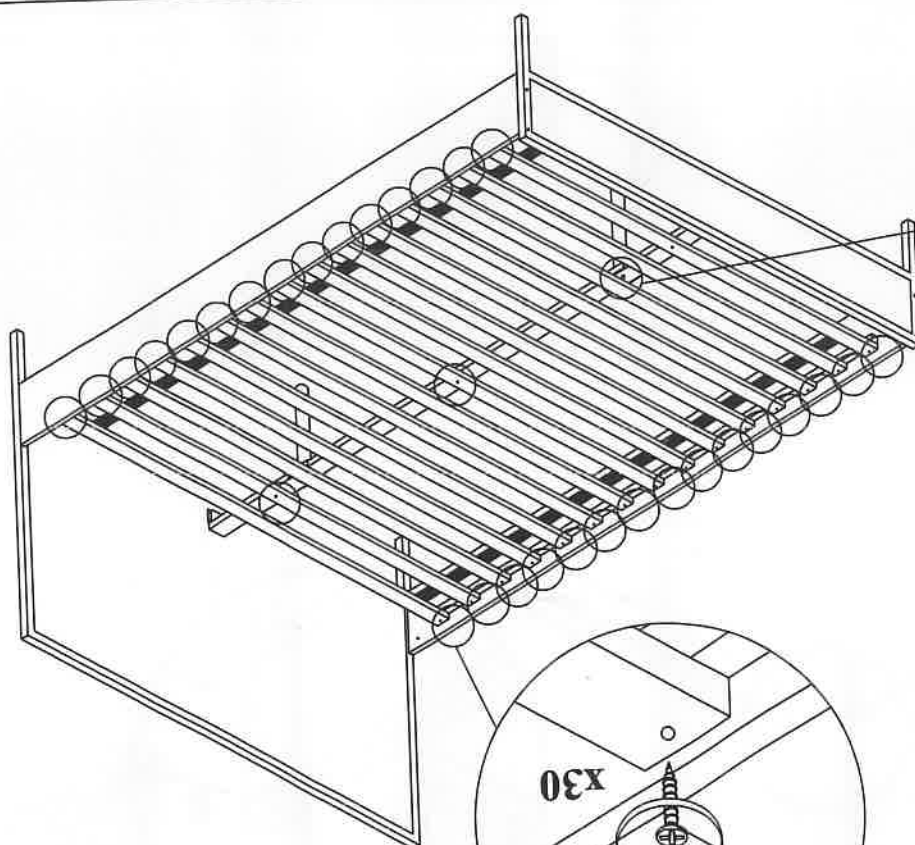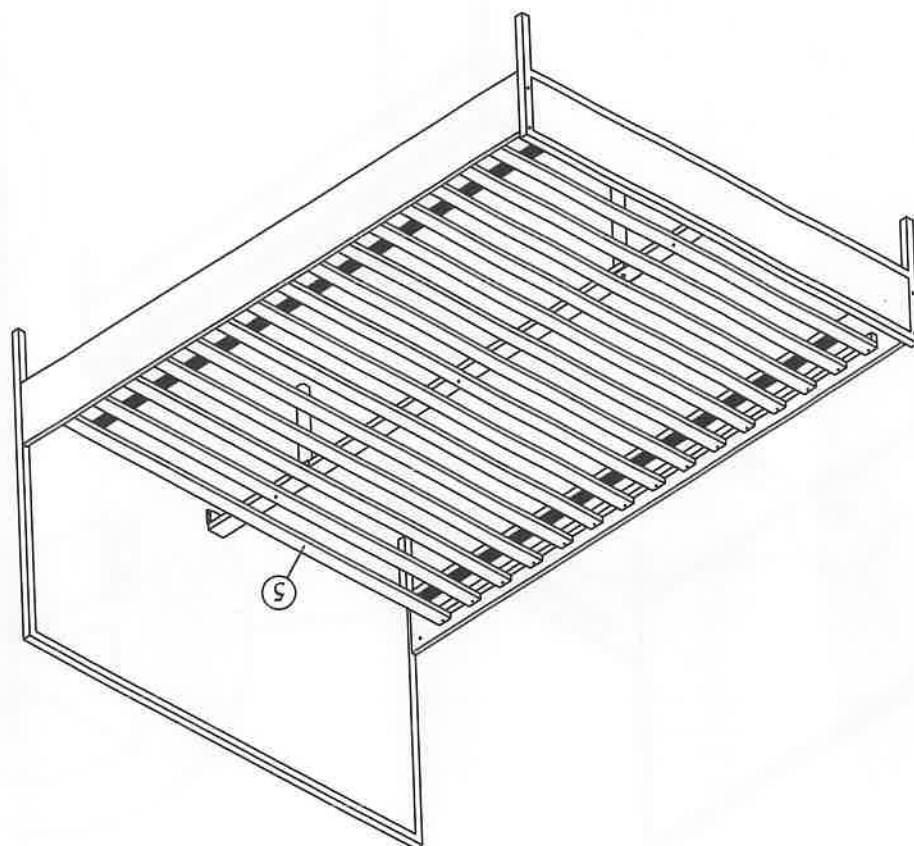

Step 5

Step 4

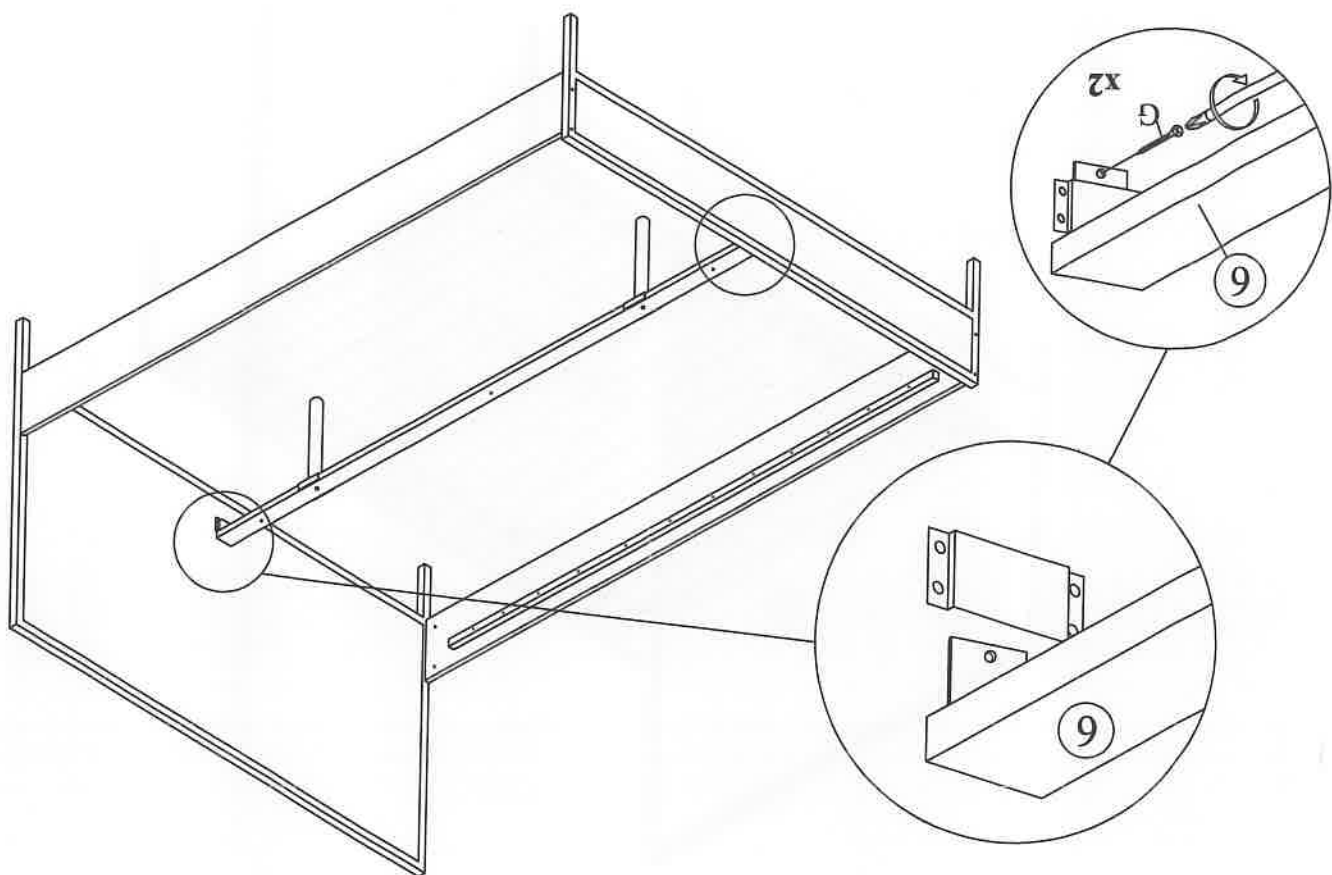

Step 3

