


尺寸：长7.2cm * 宽 7.2cm

Voice Control &
AI Anti Snore Module
Instruction

1.Illustration

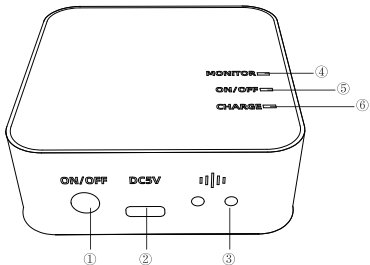

Button/ Lighting Description

- ①: Module on/off
- ②: Type C Charger Port
- ③: Microphone/ Snore Monitoring
- ④: Snore Monitoring Lighting
- ⑤: Module on/off Lighting
- ⑥: Charging Lighting

2.Power On

Press Module on/off button (①) once, Module on/off Lighting (⑤) is on, means power on.

3.Pairing

Once powered, it's on pairing status within 60 seconds.

→ Hold on Module on/off button (①)
→ You will hear bleep sound from the Module, means it is paired up with the bed successfully.

4.AI Anti-snore

Installation distance
This module can monitor the snore within two meters, it's small, you can just place or install on the bed.

5.AI Anti-snore Function

Once paired successfully:
(1) If the module monitors snore within 15s, the bed will raise to Anti-Snoreposition automatically.
(2) When the bed is on Anti-snore status,the Module does not monitor snore for 1min, the bed goes back to flat positionautomatically.

6.Attention

Ensure the Module is full charged and sensitive monitoring, please turn it on before sleeping. And turn off if you do not needs Anti-snore and voice control.

7.Voice Control Orders

Note: Choose the functions matched to your base accodgingly.

- | | |
|-------------------|----------------------|
| Wake-up: Hi Sally | |
| BACK UP/ DOWN | FOOT UP/ DOWN |
| LUMBAR UP/ DOWN | HEAD UP/ DOWN |
| ALL STOP | ALL FLAT |
| ZERO GRAVITY | MEMORY POSITION |
| TV POSITION | BACK MESSAGE WORK |
| BACK MESSAGE STOP | FOOT MESSAGE STOP |
| FOOT MESSAGE WORK | SWITCH MESSAGE MODES |
| ALL MESSAGE WORK | ALL MESSAGE STOP |
| STORAGE UP/ DOWN | |